

RM Series PHILIPS RC4492/01B

RM Series Replacement Remote Control for PHILIPS RC4492/01B

Instruction Manual

INTRODUCTION

This manual provides instructions for the RM Series replacement remote control, specifically designed for the PHILIPS RC4492/01B. This remote control is a direct replacement, offering full functionality without the need for programming. Simply insert batteries to begin use.

SETUP

1. Battery Installation

The remote control requires batteries for operation. Batteries are not included with the remote control and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert the required batteries (typically AAA or AA, refer to the compartment markings) ensuring correct polarity (+ and -).
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Back of the remote control with the battery compartment open, showing battery placement.

2. Initial Use

This RM Series remote control is pre-programmed for the PHILIPS RC4492/01B and does not require any additional setup or programming. Once batteries are installed, it is ready for immediate use.

OPERATING INSTRUCTIONS

The RM Series remote control is designed to replicate all functions of your original PHILIPS RC4492/01B remote. All buttons are clearly labeled to match their original functions.



Figure 2: Front view of the RM Series remote control.

Basic Functions:

- **Power Button:** Located at the top, typically red, to turn your device on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down:** Adjusts the audio level.
- **Channel Up/Down:** Changes the television channel.
- **Navigation Pad (Arrow Keys & OK):** Used to navigate menus and confirm selections.

- **Source/Input:** Selects the input source (e.g., HDMI 1, AV).
- **Menu/Home:** Accesses the main menu or smart TV interface.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind for media playback.

Ensure a clear line of sight between the remote control and the device's infrared receiver for optimal performance. The remote operates using infrared technology with a maximum range of approximately 10 meters.

MAINTENANCE

Battery Replacement:

When the remote control's performance degrades or the red LED indicator (if present) does not light up, it is time to replace the batteries. Follow the battery installation steps in the Setup section.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the remote. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

• Remote not responding:

- Check if the batteries are inserted correctly with the right polarity.
- Replace old batteries with new ones.
- Ensure there is a clear line of sight between the remote and the device. Obstacles can block the infrared signal.
- Make sure you are within the operating range (approximately 10 meters).

• Specific buttons not working:

- This is rare for RM Series remotes as they are designed for full functionality. Re-check batteries and line of sight.
- Ensure the device you are controlling is powered on and responsive to its original controls.

SPECIFICATIONS

Feature	Detail
Brand	RM Series
Model	PHILIPS RC4492/01B
Connector Type	Infrared
Batteries Required	Yes (Not included)
Maximum Range	10 Meters

QUALITY ASSURANCE

RM Series remote controls are designed for robustness and reliability. Each unit is assembled and tested in the United Kingdom to ensure high quality and performance. The materials and components used are carefully selected to produce a reliable product, rigorously tested for long-term use.

This product complies with CE and RoHS standards.

For further assistance or inquiries, please refer to the retailer where the product was purchased.