

[Manuals.plus](#) /

› [iSmartAlarm](#) /

› iSmartAlarm Preferred Home Security Package iSA3 User Manual

## iSmartAlarm iSA3

# iSmartAlarm Preferred Home Security Package iSA3 User Manual

Model: iSA3

Your guide to setting up and operating your iSmartAlarm security system.

## INTRODUCTION

The iSmartAlarm Home Security System is a DIY, self-monitored, and self-controlled home security solution designed for ease of use without monthly fees or contracts. This system allows users to manage their security from anywhere using a smartphone application. It provides real-time monitoring, alerts, and status updates for all connected sensors.



Image: The iSmartAlarm CubeOne base station, a central component of the security system.

## PACKAGE CONTENTS

The iSmartAlarm Preferred Package typically includes the following components:

- **CubeOne Base Station:** The central hub of your security system.
- **Key Fobs:** Two remote controls for arming and disarming the system.
- **Motion Sensor:** One sensor to detect movement within a designated area.
- **Contact Sensors:** Two sensors for monitoring windows or doors.



Image: Overview of the iSmartAlarm Preferred Home Security Package contents, including the CubeOne, key fobs, motion sensor, and contact sensors.

## SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Position CubeOne:** Place the CubeOne base station in a central location within your home, ideally near your internet router for optimal connectivity.
3. **Connect Power and Network:** Plug the CubeOne into a power outlet and connect it to your home network using an Ethernet cable (if applicable, or follow wireless setup instructions in the app).
4. **Download App:** Download the iSmartAlarm app from the iOS App Store or Google Play Store onto your smartphone.
5. **Account Creation & Device Pairing:** Follow the in-app instructions to create an account and pair your CubeOne, key fobs, motion sensor, and contact sensors.
6. **Install Sensors:**
  - **Contact Sensors:** Mount the two parts of each contact sensor on a window or door and its frame. Ensure they

are placed no more than 0.75 inches (3/4 inch) apart when the window/door is closed. They do not need to be perfectly flush.

- **Motion Sensor:** Install the motion sensor in an area where it can effectively detect movement, such as a hallway or living room.

7. **Firmware Update:** It is crucial to upgrade the firmware to the most current version through the iSmartAlarm app to ensure the best experience and product functionality.



Image: An iSmartAlarm contact sensor, consisting of two parts, installed on a door frame. These sensors detect when a door or window is opened.

**Your browser does not support the video tag.**

Video: An overview of the iSmartAlarm Preferred Home Security Package, demonstrating its components and basic setup. This video is provided by the seller.

## OPERATING INSTRUCTIONS

---

The iSmartAlarm system is controlled primarily through its dedicated smartphone application. The app allows you to arm, monitor, and disarm your security system remotely.

- **Arming the System:** Use the "ARM" function in the app or the key fob to activate all sensors.
- **Disarming the System:** Use the "DISARM" function in the app or the key fob to deactivate the alarm.
- **Home Mode:** The "HOME" mode typically arms perimeter sensors (like door/window sensors) while allowing free movement inside the home.
- **Panic Button:** The "PANIC" function in the app or on the key fob can be used to trigger the alarm immediately in an emergency.
- **Real-time Monitoring:** The app provides real-time status of your sensors and shows who is at home, and when family members left or returned.
- **Alerts:** In case of a detected break-in or unauthorized activity, the system will alert designated members via phone call, SMS message, push notifications, and email.

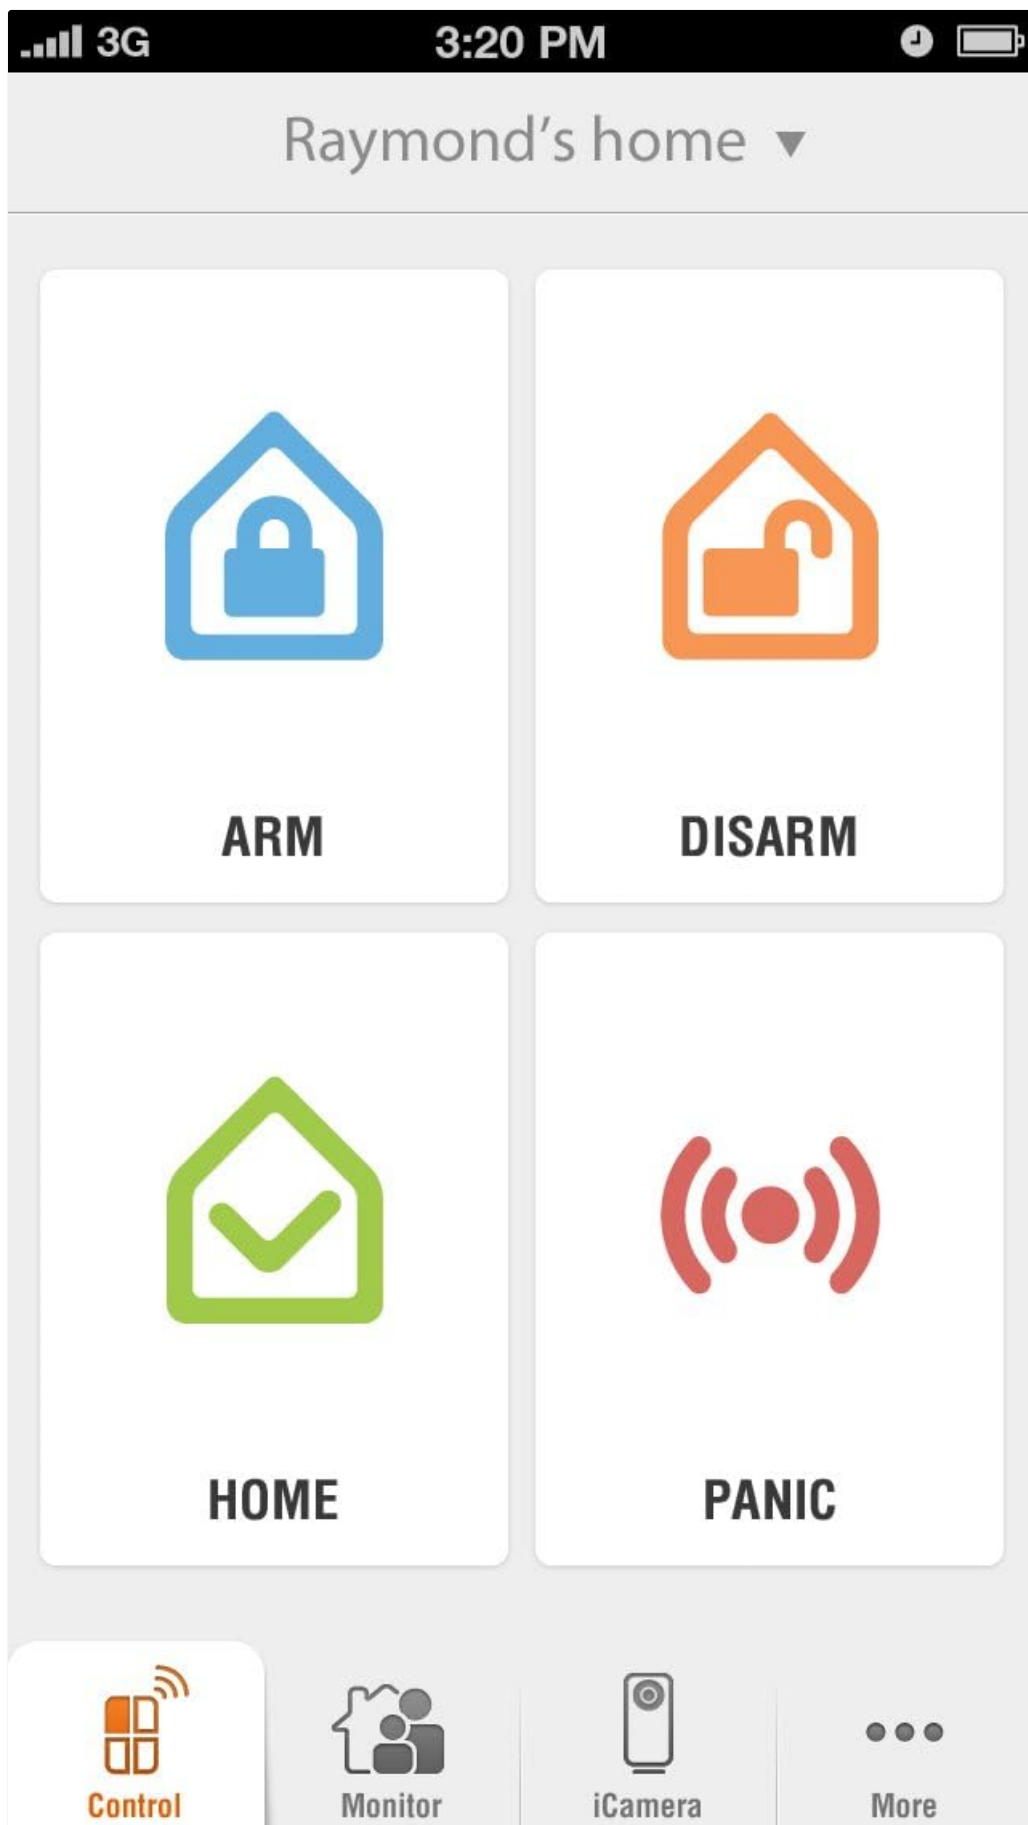


Image: Screenshot of the iSmartAlarm smartphone application interface, displaying options for Arm, Disarm, Home, and Panic modes.

## MAINTENANCE

- **Firmware Updates:** Regularly check for and install firmware updates via the iSmartAlarm app to ensure optimal

performance and access to new features.

- **Battery Replacement:** Sensors and key fobs are battery-powered. Monitor battery levels through the app and replace batteries as needed. The system uses Alkaline batteries.
- **Sensor Cleaning:** Periodically clean sensors with a soft, dry cloth to ensure proper function and prevent dust buildup from interfering with detection.

## TROUBLESHOOTING

If you encounter issues with your iSmartAlarm system, consider the following:

- **Connectivity Issues:** Ensure your CubeOne is properly connected to your internet router and has a stable internet connection. Restarting your router or CubeOne may resolve temporary network issues.
- **Sensor Malfunctions:** Check sensor battery levels in the app. Ensure contact sensors are within the specified 0.75-inch distance when closed. Verify motion sensors are not obstructed.
- **App Problems:** Ensure your iSmartAlarm app is updated to the latest version. Try restarting the app or your smartphone.
- **Alarm Not Triggering/Siren Volume:** Confirm the system is armed correctly. Check the CubeOne's placement; while it has an integrated siren, its volume may vary depending on its location within the home.
- **False Alarms:** Review sensor placement and sensitivity settings in the app. Ensure motion sensors are not triggered by pets or environmental factors.

## SPECIFICATIONS

|                             |                            |
|-----------------------------|----------------------------|
| Brand                       | iSmartAlarm                |
| Model Number                | iSA3                       |
| Color                       | White                      |
| Power Source                | Battery Powered            |
| Compatible Devices          | Smartphone (iOS & Android) |
| Item Dimensions (L x W x H) | 7 x 7 x 7 inches           |
| Connectivity Technology     | Wireless                   |
| Installation Type           | Self-Adhesive (DIY)        |
| Alert Type                  | Motion, Door/Window Open   |
| Item Weight                 | 2.6 Pounds                 |
| Voltage                     | 3 Volts                    |
| Control Method              | App                        |
| Battery Cell Composition    | Alkaline                   |
| Maximum Range               | 33 Feet                    |
| Battery Life                | 13140 Hours                |

|                     |                                        |
|---------------------|----------------------------------------|
| Included Components | Sensors, Siren (integrated in CubeOne) |
| Noise Level         | 110 Decibels                           |
| UPC                 | 858176004007                           |

## WARRANTY INFORMATION

The iSmartAlarm Preferred Home Security Package comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the official iSmartAlarm website or contact customer support.

## SUPPORT

For further assistance, technical support, or to explore additional products and accessories, please visit the official iSmartAlarm website or contact their customer service department. Ensure you have your model number (iSA3) and purchase details ready when seeking support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

