

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BELLA](#) /

› [BELLA LINEA Collection 12 Cup Programmable Coffee Maker Chrome](#)

BELLA 14391

BELLA LINEA Collection 12 Cup Programmable Coffee Maker

Model: 14391

INTRODUCTION

Thank you for purchasing the BELLA LINEA Collection 12 Cup Programmable Coffee Maker. This manual provides important information regarding the safe operation, setup, use, and maintenance of your new appliance. Please read all instructions carefully before use and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Scalding may occur if the lid is removed during the brewing cycle.

PRODUCT OVERVIEW

The BELLA LINEA Collection 12 Cup Programmable Coffee Maker is designed for convenience and quality brewing. It features a 24-hour programmable timer, brew strength selection, and a 1-4 cup option for smaller batches. The illuminated control panel provides clear information, and the permanent filter eliminates the need for disposable paper filters.





Figure 1: Front view of the BELLA LINEA 12 Cup Programmable Coffee Maker, showcasing the control panel, carafe, and water reservoir.



Figure 2: Side view of the BELLA LINEA 12 Cup Programmable Coffee Maker, illustrating its dimensions: 11.02"D x 8.82"W x 15.55"H.

Key Components:

- **Control Panel:** Illuminated display with Program, Hour, Min, On/Auto/Off buttons.
- **Water Reservoir:** Clearly marked for up to 12 cups.
- **Permanent Filter Basket:** Reusable filter for ground coffee.
- **Glass Carafe:** 12-cup capacity with measurement markings.
- **Warming Plate:** Non-stick, stain-resistant surface to keep coffee warm.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and labels from the coffee maker.
2. **Initial Cleaning:** Before first use, wash the carafe and permanent filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **First Brew Cycle (Cleaning):**
 - Fill the water reservoir to the 12-cup mark with fresh, cold water.
 - Place the empty permanent filter basket into its holder.
 - Place the empty carafe on the warming plate.
 - Plug the coffee maker into a standard electrical outlet.
 - Press the "On/Auto/Off" button to start a brew cycle without coffee.
 - Allow the full cycle to complete. Discard the water from the carafe.
 - Repeat this process once more to ensure thorough cleaning.

OPERATING INSTRUCTIONS

Brewing Coffee:

1. **Fill Water Reservoir:** Open the top lid and fill the water reservoir with the desired amount of fresh, cold water. The water level indicator on the side shows the number of cups. Do not exceed the 12-cup maximum.
2. **Add Coffee Grounds:** Place the permanent filter basket into its holder. Add the desired amount of ground coffee into the filter. For best results, use 1 tablespoon of ground coffee per cup. Adjust to personal preference.
3. **Place Carafe:** Ensure the glass carafe is properly seated on the warming plate.
4. **Select Brew Strength (if desired):** Use the brew strength selector (if available on your model) to choose between Regular, Gourmet, or Bold.
5. **Start Brewing:** Press the "On/Auto/Off" button to begin the brewing cycle. The indicator light will illuminate.
6. **Pause & Serve:** The coffee maker features a pause and serve function, allowing you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 20 seconds to prevent overflow.
7. **Keep Warm:** After brewing, the warming plate will keep the coffee hot for 2 hours before automatically shutting off.

Programming the Timer:

The 24-hour programmable timer allows you to set the coffee maker to start brewing at a specific time.

1. **Set Current Time:**
 - Plug in the coffee maker. The display will flash "12:00".
 - Press the "Hour" button to set the hour. Hold to advance quickly.
 - Press the "Min" button to set the minutes. Hold to advance quickly.
 - Ensure the AM/PM indicator is correct.

2. Set Auto Brew Time:

- Press the "Program" button once. The display will show "AUTO ON" and flash "12:00".
- Press the "Hour" button to set the desired auto-on hour.
- Press the "Min" button to set the desired auto-on minutes.
- Press the "Program" button again to confirm the setting. The "AUTO ON" indicator will light up.

3. **Activate Auto Brew:** Prepare the coffee maker with water and coffee grounds as described in "Brewing Coffee". Press the "On/Auto/Off" button until the "AUTO ON" indicator is lit. The coffee maker will now start brewing at the programmed time.

4. **Cancel Auto Brew:** Press the "On/Auto/Off" button until the "AUTO ON" indicator turns off.

1-4 Cup Feature:

For brewing smaller quantities (1-4 cups) with optimal flavor, activate the 1-4 cup feature (if available on your model). This adjusts the brewing process for a richer taste. Refer to your control panel for a dedicated 1-4 cup button or setting.

CARE AND MAINTENANCE

Daily Cleaning:

- Always unplug the coffee maker and allow it to cool completely before cleaning.
- Wash the glass carafe and permanent filter basket in warm, soapy water. These parts are also dishwasher safe on the top rack.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- The warming plate is stain-resistant and non-stick; wipe it clean with a damp cloth.

Descaling (Auto-Clean Cycle):

Mineral deposits from water can build up over time and affect the performance of your coffee maker. It is recommended to descale your coffee maker monthly, or more frequently if you have hard water.

1. **Prepare Solution:** Fill the water reservoir with a mixture of 1 part white vinegar and 2 parts cold water.
2. **Start Auto-Clean:** Place the empty carafe on the warming plate. Refer to your control panel for the "Clean" or "Auto-Clean" button. Press and hold this button (or follow specific instructions for your model) to initiate the cleaning cycle.
3. **Rinse Cycles:** After the cleaning cycle is complete, discard the vinegar solution. Fill the water reservoir with fresh, cold water and run 2-3 full brew cycles (without coffee) to rinse out any remaining vinegar taste.

TROUBLESHOOTING

If your coffee maker is not functioning as expected, please check the following common issues before contacting customer service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee does not brew.	Coffee maker not plugged in. "On/Auto/Off" button not pressed. Water reservoir empty. Auto-brew timer set incorrectly or not activated.	Ensure the power cord is securely plugged into a working outlet. Press the "On/Auto/Off" button to start brewing. Fill the water reservoir with fresh, cold water. Verify the auto-brew time and ensure the "AUTO ON" indicator is lit.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio. Brew strength setting.	Adjust the amount of coffee grounds to your preference. Select a different brew strength (Regular, Gourmet, Bold).
Water overflows from filter basket.	Too much coffee grounds. Filter basket not seated correctly. Carafe not on warming plate or removed for too long.	Reduce the amount of coffee grounds. Ensure the filter basket is properly inserted. Make sure the carafe is correctly placed on the warming plate and not removed for more than 20 seconds during brewing.
Coffee tastes bad.	Coffee maker needs descaling. Stale coffee grounds.	Perform the auto-clean cycle to descale the unit. Use fresh, high-quality coffee grounds.

SPECIFICATIONS

Feature	Detail
Model Number	14391
Brand	BELLA
Color	Chrome
Product Dimensions	11.02"D x 8.82"W x 15.55"H
Coffee Maker Type	Drip Coffee Machine
Filter Type	Reusable (Permanent Filter)
Capacity	12 Cups
Special Features	Programmable, Brew Strength Selector, 1-4 Cup Feature, Auto Shut-Off, Pause & Serve
Wattage	900 Watts
Voltage	120 Volts
Item Weight	4.45 pounds
Included Components	Carafe, Permanent Filter

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or visit the official BELLA website. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact BELLA customer service through their official channels. Please have your model number (14391) and purchase date ready.

© 2023 BELLA. All rights reserved.