

PDP PL3702

PDP Afterglow Wired Gamepad PL3702 User Manual

Model: PL3702 | Brand: PDP

1. INTRODUCTION

The PDP Afterglow Wired Gamepad PL3702 is designed for use with Xbox 360 and PlayStation 3 consoles. This controller features a clear polycarbonate body with internal LEDs that illuminate the circuitry, providing a distinct visual experience. It is engineered for comfortable gameplay and includes adjustable lighting modes.

2. PRODUCT FEATURES

- **Three LED Lighting Modes:** Adjust the controller's internal lighting to On, Off, or Pulse.
- **Smart Track Technology:** Provides enhanced precision and responsiveness for analog stick movements.
- **10-Foot Wired Connection:** Offers a reliable connection with a long cable, including a breakaway feature for safety.
- **Ergonomic Design:** Shaped for comfortable extended gaming sessions.
- **Official Microsoft Licensing:** Ensures compatibility and quality for Xbox 360 use.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- PDP Afterglow Wired Gamepad PL3702
- Instruction Manual (this document)

4. SETUP

Follow these steps to connect your Afterglow Wired Gamepad to your console:

1. **For Xbox 360 or PlayStation 3:** Locate an available USB port on your console.
2. Insert the USB connector of the Afterglow Gamepad's cable into the USB port.
3. The controller will automatically be detected by the console. The LEDs on the controller will illuminate, indicating a successful connection.



Image 1: The PDP Afterglow Wired Gamepad illuminated with green LEDs, showing its clear casing and connected USB cable. This image illustrates the controller's distinctive glowing appearance when powered on.

The breakaway cable feature is designed to prevent your console from being pulled if the cable is accidentally snagged. Ensure the breakaway section is properly connected during use.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

The Afterglow Gamepad features standard button layouts for Xbox 360 and PlayStation 3, including:

- Two analog sticks
- D-pad
- Action buttons (A, B, X, Y for Xbox 360; Triangle, Circle, Cross, Square for PS3)
- Shoulder buttons (LB, RB) and Triggers (LT, RT)

- Start, Back/Select, and Guide/PS buttons

5.2 Adjusting LED Settings

The Afterglow Gamepad allows you to customize its lighting. Refer to the specific button combination or switch on your controller model to cycle through the following modes:

- **On:** LEDs remain constantly lit.
- **Off:** LEDs are turned off.
- **Pulse:** LEDs will pulse in sync with the controller's vibration feedback.

6. MAINTENANCE

6.1 Cleaning

To clean your gamepad, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish and internal components.

6.2 Storage

When not in use, store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly around the controller to prevent damage to the wiring.

7. TROUBLESHOOTING

If you encounter issues with your Afterglow Gamepad, refer to the following common solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely plugged into both the controller and the console.
 - Try plugging the controller into a different USB port on your console.
 - Restart your console and try connecting the controller again.
- **LEDs Not Lighting Up:**
 - Check the LED mode setting on your controller. It might be set to 'Off'.
 - Ensure the controller is properly connected and powered on.
- **Buttons or Analog Sticks Not Working Correctly:**
 - Ensure no debris is lodged around the buttons or sticks.
 - Test the controller with another game or on a different console if possible to determine if the issue is with the controller or the game/console.

8. SPECIFICATIONS

Feature	Specification
Model Number	PL3702
Brand	PDP
Compatible Devices	PlayStation 3, Microsoft Xbox 360, Microsoft Xbox 360 E

Controller Type	Gamepad
Connectivity Technology	USB (Wired)
Power Source	Corded Electric
Button Quantity	10
Additional Features	Ergonomic Design, LED Lighting
Item Weight	200 Grams
Item Dimensions	6 x 4 x 4 inches
Color	Multi-color (LED illumination)

9. WARRANTY INFORMATION

PDP products are designed for durability and performance. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official PDP website. Keep your proof of purchase for warranty claims.

10. SUPPORT

If you require further assistance or have questions not covered in this manual, please contact PDP Customer Support:

- **Online Support:** Visit the official PDP website for FAQs, support articles, and contact options.
- **Manufacturer:** 3EIGHTY5