

[Manuals.plus](#) /

› [parts-quick](#) /

› parts-quick 2GB SD Memory Card for Fuji FinePix Cameras Instruction Manual

parts-quick 8541639198

parts-quick 2GB SD Memory Card for Fuji FinePix Cameras Instruction Manual

INTRODUCTION

This manual provides instructions for the proper use and care of your parts-quick 2GB Secure Digital (SD) Memory Card. This memory card is designed to expand the storage capacity of compatible digital cameras, allowing you to capture and store photos and videos.

Compatible Camera Models:

- Fuji FinePix A805
- Fuji FinePix A820
- Fuji FinePix A825
- Fuji FinePix F40fd
- Fuji FinePix F45fd
- Fuji FinePix F47fd
- Fuji FinePix S5700
- Fuji FinePix S700

SETUP AND INSTALLATION

Follow these steps to properly install your 2GB SD Memory Card into your compatible Fuji FinePix camera.

1. **Power Off Camera:** Ensure your camera is turned off before inserting or removing the memory card.
2. **Locate Card Slot:** Open the memory card slot cover on your camera. This is typically located on the side or bottom of the camera body.
3. **Insert SD Card:** Gently slide the SD card into the slot with the metal contacts facing the correct direction (usually downwards or towards the back of the camera, refer to your camera's manual for exact orientation). Push until it clicks into place.
4. **Close Cover:** Close the memory card slot cover securely.
5. **Format Card (Recommended):** Turn on your camera. Navigate to the camera's menu settings and locate the "Format" or "Erase" option for the memory card. Formatting the card in the camera ensures optimal compatibility and performance. *Note: Formatting will erase all data on the card. Back up any important data before formatting.*



Image: The parts-quick 2GB SD Memory Card. This image shows the front of the SD card, highlighting its compact size and standard design for insertion into compatible devices.

OPERATING INSTRUCTIONS

Once the SD card is installed and formatted, you can begin using it with your camera.

- **Capturing Photos/Videos:** The camera will automatically detect the SD card and use it for storage. Simply operate your camera as usual to take pictures or record videos.
- **Viewing Content:** Use your camera's playback mode to view stored images and videos directly on the camera screen.
- **Transferring Data:** To transfer files to a computer, you can either connect your camera directly to the computer via a USB cable (refer to your camera's manual) or remove the SD card and insert it into a compatible card reader connected to your computer.
- **Write Protection Switch:** The SD card features a small switch on its side. Sliding this switch to the "Lock" position will prevent new data from being written to the card and existing data from being deleted. Slide it to the "Unlock" position to enable writing and deleting.

MAINTENANCE AND CARE

Proper care will extend the life of your SD card and protect your data.

- **Handle with Care:** Avoid bending, dropping, or exposing the card to excessive force.
- **Keep Clean:** Do not touch the metal contacts on the card. If necessary, gently clean with a soft, dry, lint-free cloth.
- **Storage:** Store the SD card in a protective case when not in use to prevent dust, dirt, and static electricity damage.
- **Temperature and Humidity:** Avoid exposing the card to extreme temperatures, direct sunlight, or high humidity.
- **Data Backup:** Regularly back up important photos and videos to a computer or other storage device to prevent data loss.
- **Safe Removal:** Always ensure your camera or computer indicates it is safe to remove the SD card before physically taking it out. Improper removal can lead to data corruption.

TROUBLESHOOTING

If you encounter issues with your SD card, try the following solutions:

- **Card Not Recognized:**
 - Ensure the card is fully inserted into the camera slot.
 - Check the write protection switch; if it's in the "Lock" position, the camera might not be able to read or write.

- Try formatting the card using the camera's menu (*Note: This will erase all data*).
- Test the card in another compatible device or a card reader to determine if the issue is with the card or the camera.

• **Error Messages:**

- "Card Error" or "Memory Card Full": Try formatting the card. If the card is full, transfer data to a computer and delete files from the card.
- Refer to your camera's instruction manual for specific error codes and their meanings.

• **Slow Performance:**

- Ensure the card is not nearly full.
- Formatting the card can sometimes improve performance.

SPECIFICATIONS

Brand	parts-quick
Model Number	8541639198
Flash Memory Type	SD (Secure Digital)
Memory Storage Capacity	2 GB
Secure Digital Association Speed Class	Class 2
Compatible Devices	Camera (specifically Fuji FinePix A805, A820, A825, F40fd, F45fd, F47fd, S5700, S700)
Hardware Connectivity	Secure Digital Card Slot
Special Feature	Lightweight

WARRANTY AND SUPPORT

Your parts-quick 2GB SD Memory Card comes with a**One Year Warranty**. For technical assistance or warranty claims, please contact parts-quick customer support.

Toll Free Technical Support is available to assist you with any questions or issues you may encounter. For further details, please refer to the warranty information provided at the time of purchase or visit the official parts-quick website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00EV5WBTS>

More documents and user manuals: <https://manuals.plus/>