

[Manuals.plus](#) /

› [parts-quick](#) /

› parts-quick 2GB SD Memory Card Instruction Manual

parts-quick 2GB SD Memory Card

parts-quick 2GB SD Memory Card Instruction Manual

INTRODUCTION

This manual provides instructions for the proper use and care of your parts-quick 2GB SD Memory Card. This Secure Digital (SD) card is designed to expand the storage capacity of compatible digital cameras and other devices, allowing you to store photos, videos, and other data.

Compatible Devices: Fuji FinePix A805, Fuji FinePix A820, Fuji FinePix A825, Fuji FinePix F40fd, Fuji FinePix F45fd, Fuji FinePix F47fd, Fuji FinePix S5700, Fuji FinePix S700.



Image: parts-quick 2GB SD Memory Card. This image shows the front of a standard SD card, typically black or blue, with the brand name, capacity (2GB), and SD logo visible.

SETUP AND INSTALLATION

1. **Locate the SD Card Slot:** Identify the memory card slot on your compatible device (e.g., digital camera). This slot is typically covered by a small door or flap.
2. **Insert the SD Card:** Gently slide the parts-quick 2GB SD Memory Card into the slot with the metal contacts facing the correct direction, usually downwards or towards the back of the device. Ensure it clicks into place. Do not force the card.
3. **Close the Slot Cover:** Securely close the memory card slot cover.
4. **Format the Card (Recommended):** For optimal performance and to ensure compatibility, it is highly recommended to format the SD card using your device's menu system before first use. Refer to your device's

instruction manual for specific formatting steps. *Formatting will erase all data on the card.*

OPERATING INSTRUCTIONS

Once installed and formatted, your parts-quick 2GB SD Memory Card is ready for use with your compatible device.

- **Capturing Data:** Use your device's functions (e.g., taking photos, recording videos) as you normally would. The data will automatically be saved to the installed SD card.
- **Viewing Data:** Access your stored files through your device's playback or gallery mode.
- **Transferring Data to a Computer:**
 - **Direct Connection:** Connect your device to a computer using a USB cable. The device should appear as a removable drive, allowing you to copy files.
 - **Card Reader:** Remove the SD card from your device and insert it into a compatible SD card reader connected to your computer. The card will appear as a removable drive.
- **Ejecting the Card:** Always ensure your device is powered off or the card is safely ejected through the device's menu before physically removing the SD card to prevent data corruption.

MAINTENANCE AND CARE

- **Handle with Care:** Avoid bending, dropping, or applying excessive force to the SD card.
- **Protect Contacts:** Do not touch the metal contacts on the back of the card. Keep them clean and free from dust or moisture.
- **Storage:** Store the SD card in a protective case when not in use to prevent damage from static electricity, dust, and physical impact.
- **Temperature:** Avoid exposing the card to extreme temperatures, direct sunlight, or high humidity.
- **Data Backup:** Regularly back up important data from your SD card to a computer or other storage device to prevent data loss.

TROUBLESHOOTING

- **Card Not Recognized:**
 - Ensure the card is inserted correctly and fully into the slot.
 - Restart your device.
 - Try the card in another compatible device to check if the card or the device is the issue.
 - Check for any dirt or debris on the card's metal contacts or within the device's card slot.
- **"Card Full" or "Insufficient Space" Error:**
 - Delete unnecessary files from the card.
 - Transfer files to a computer to free up space.
 - Consider purchasing a higher capacity card if you frequently encounter this issue.
- **Slow Performance:**
 - Ensure your device supports the card's speed class (Class 2).
 - Format the card (after backing up data) to optimize performance.
- **Data Corruption:**
 - Always safely eject the card before removal.

- Avoid removing the card during data transfer or while the device is writing to it.
- If data is corrupted, specialized data recovery software may be able to retrieve some files, but success is not guaranteed.

SPECIFICATIONS

Brand	parts-quick
Flash Memory Type	SD (Secure Digital)
Memory Storage Capacity	2 GB
Secure Digital Association Speed Class	Class 2
Compatible Devices	Camera (Fuji FinePix A805, A820, A825, F40fd, F45fd, F47fd, S5700, S700)
Special Feature	Lightweight
Item Weight	8.16 ounces

WARRANTY AND SUPPORT

This parts-quick 2GB SD Memory Card comes with a**One Year Warranty** from parts-quick. For technical support or warranty inquiries, please contact parts-quick directly. Refer to the packaging or the seller's information for contact details.

Note: Data recovery services are not typically covered under standard product warranties. Regular backups are recommended to prevent data loss.

© 2024 parts-quick. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00EV5WUU8>

More documents and user manuals: <https://manuals.plus/>