

[Manuals.plus](#) /

› [Jacuzzi](#) /

› Jacuzzi 0.75HP Pump Impeller User Manual

Jacuzzi 05-3759-02-R

Jacuzzi 0.75HP Pump Impeller Instruction Manual

Model: 05-3759-02-R

PRODUCT OVERVIEW

The Jacuzzi 0.75HP Pump Impeller (Model 05-3759-02-R) is a critical component designed for Jacuzzi LC series pumps. This impeller is specifically engineered to provide efficient water flow for 0.75 horsepower pump systems, ensuring optimal performance for your pool or hot tub heating and circulation needs. It is constructed from durable materials to withstand continuous operation in aquatic environments.



Image: A black Jacuzzi 0.75HP Pump Impeller, featuring its central shaft and curved vanes, designed for efficient water propulsion in pump systems.

SPECIFICATIONS

Attribute	Detail
Brand	Jacuzzi
Model Number	05-3759-02-R

Attribute	Detail
Horsepower Rating	0.75 HP
Material	Metal
Color	Black
Item Weight	16 ounces (1 pound)
Product Dimensions	3.7 x 3.65 x 2.7 inches
UPC	753610340843

SETUP AND INSTALLATION

Installation of the Jacuzzi 0.75HP Pump Impeller should be performed by a qualified technician or an individual with experience in pump maintenance. Ensure the pump system is completely powered off and disconnected from the electrical supply before beginning any work. Refer to your specific pump model's service manual for detailed disassembly and reassembly instructions. The impeller must be correctly seated and aligned to prevent damage and ensure proper pump operation.

- Safety First:** Disconnect all power to the pump system at the circuit breaker.
- Drain System:** Ensure the pump and associated plumbing are drained of water.
- Access Impeller:** Carefully remove the pump housing or volute to gain access to the existing impeller.
- Remove Old Impeller:** Unscrew or unfasten the old impeller from the motor shaft. Note the orientation and any washers or spacers.
- Install New Impeller:** Place the new Jacuzzi 0.75HP Pump Impeller onto the motor shaft, ensuring it is properly threaded and tightened according to the pump manufacturer's torque specifications.
- Reassemble:** Reattach the pump housing, ensuring all gaskets and seals are correctly in place to prevent leaks.
- Test:** Once reassembled, slowly refill the system and check for leaks before restoring power and testing pump operation.

OPERATING CONSIDERATIONS

Once installed, the impeller operates as an internal component of your pump system. Proper operation relies on the overall health of the pump, including the motor, seals, and plumbing. Ensure the pump is primed correctly before starting to prevent dry running, which can damage the impeller and other pump components. Monitor pump performance for unusual noises or reduced water flow, which may indicate issues with the impeller or other parts.

MAINTENANCE

The impeller itself is a durable component, but its longevity is affected by the quality of the water it processes and the overall pump maintenance. Regularly inspect the pump's pre-filter basket for debris to prevent foreign objects from entering the pump and potentially damaging the impeller vanes. If the pump is disassembled for other maintenance, visually inspect the impeller for cracks, wear, or debris accumulation. Clean any buildup gently without using abrasive materials.

TROUBLESHOOTING

If your pump is experiencing issues after impeller replacement or during normal operation, consider the following common problems:

- **No Water Flow or Low Flow:**
 - Check for air in the pump (ensure proper priming).
 - Inspect the pump basket and skimmer for clogs.
 - Verify that all valves are open.
 - Examine the impeller for blockages or damage (requires pump disassembly).
- **Unusual Noises (Grinding, Squealing):**
 - Could indicate a worn motor bearing or a foreign object lodged in the impeller.
 - Check for proper alignment of the impeller on the shaft.
- **Pump Not Starting:**
 - Ensure power supply is connected and circuit breaker is on.
 - Check for motor issues, not typically related to the impeller itself.

For persistent issues, consult a professional pump technician or contact Jacuzzi customer support.

WARRANTY AND SUPPORT

For information regarding the warranty of your Jacuzzi 0.75HP Pump Impeller, please refer to the original purchase documentation or visit the official Jacuzzi website. For technical support, replacement parts, or service inquiries, please contact Jacuzzi customer service directly. Ensure you have your product model number (05-3759-02-R) and purchase details available when contacting support.

Jacuzzi Official Website: www.jacuzzi.com

© 2023 Jacuzzi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question