

## Advent AW400

# Advent AW400 Wireless Stereo Speakers 900 MHz User Manual

Model: AW400

## 1. INTRODUCTION

---

Thank you for choosing the Advent AW400 Wireless Stereo Speakers. This system provides high-quality audio transmission over a 900 MHz wireless frequency, allowing you to enjoy clear stereo sound without the clutter of wires. This manual will guide you through the setup, operation, and maintenance of your new speakers.

The Advent AW400 system includes two wireless stereo speakers, designed for easy integration into your home audio setup. Please ensure all components are present before proceeding with installation.




Figure 1: The Advent AW400 Wireless Stereo Speakers and user manual as they appear in their original packaging.

## 2. SETUP

---

Follow these steps to set up your Advent AW400 Wireless Stereo Speakers:

1. **Unpack Components:** Carefully remove all items from the packaging. You should have two speakers (one Master, one Slave), an AC adapter, and an RCA audio cable.
2. **Identify Speakers:** Locate the **Master Speaker (A)** and the **Slave Speaker (B)**. The Master Speaker typically has the main controls and input jacks.
3. **Connect Power:** Plug the AC adapter into the **Power Connection Input Jack (C)** on the Master Speaker. Then, plug the AC adapter into a standard electrical outlet.
4. **Connect Audio Source:** Use the provided **RCA Cable (S)** to connect your audio source (e.g., TV, MP3 player, smartphone, laptop) to the **RCA Jack (E)** on the Master Speaker. Ensure a secure connection.
5. **Position Speakers:** Place the speakers in your desired listening area. The wireless signal operates at 900 MHz, offering flexibility in placement.
6. **Power On:** Locate the **ON/OFF Switch (F)** on the Master Speaker and switch it to the 'ON' position.

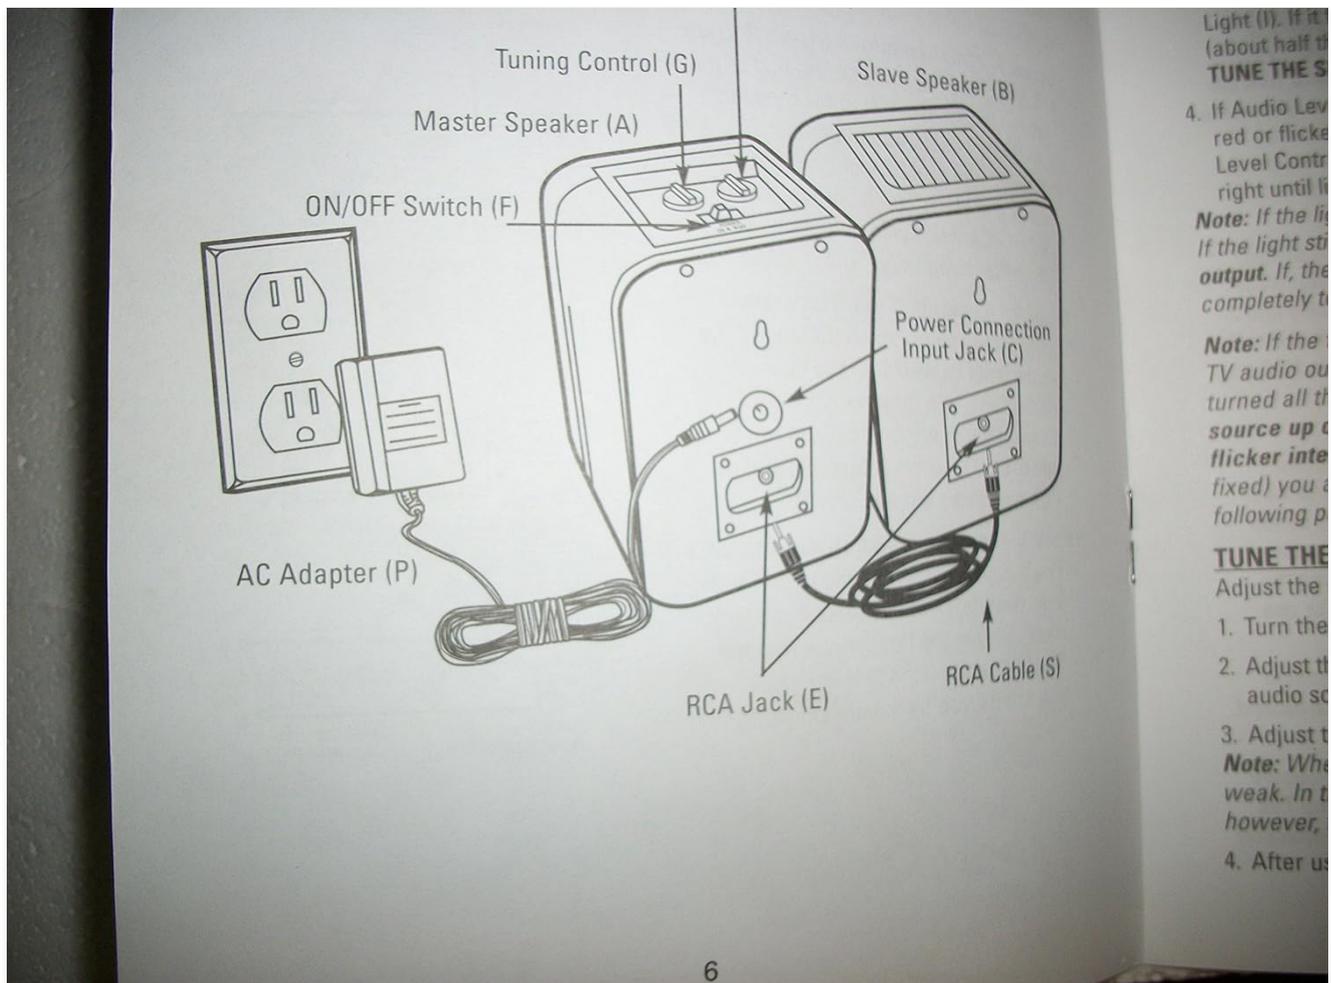

Light (I). If it  
(about half t  
**TUNE THE S**  
4. If Audio Lev  
red or flicker  
Level Contr  
right until li  
**Note:** If the li  
If the light sti  
output. If, the  
completely t  
**Note:** If the  
TV audio ou  
turned all th  
source up c  
flicker inte  
fixed) you c  
following p  
**TUNE THE**  
Adjust the  
1. Turn the  
2. Adjust th  
audio se  
3. Adjust t  
**Note:** Whe  
weak. In t  
however,  
4. After us

**Figure 2:** Connection diagram illustrating the Master Speaker (A), Slave Speaker (B), Power Connection Input Jack (C), RCA Jack (E), ON/OFF Switch (F), Tuning Control (G), AC Adapter (P), and RCA Cable (S).

### 3. OPERATING INSTRUCTIONS

Once your speakers are set up, follow these steps for optimal operation:

1. **Power On:** Ensure the **ON/OFF Switch (F)** on the Master Speaker is in the 'ON' position. The power indicator light should illuminate.
2. **Adjust Volume:** Use the volume controls on your audio source to adjust the sound level. The speakers will amplify the signal received.
3. **Tune Speakers:** If you experience static or poor sound quality, use the **Tuning Control (G)** on the Master Speaker to fine-tune the wireless signal. Slowly rotate the dial until you achieve the clearest audio.
4. **Stereo Sound:** The system is configured for 2.0 channel stereo sound. Ensure both speakers are receiving a signal for a complete audio experience.
5. **Compatible Devices:** These speakers are compatible with a wide range of devices including laptops, MP3 players, smartphones, and tablets that have an RCA audio output or can be connected via an appropriate adapter (not included).

### 4. MAINTENANCE

To ensure the longevity and performance of your Advent AW400 speakers, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker surfaces. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.
- **Storage:** When not in use for extended periods, store the speakers in a cool, dry place, away from direct sunlight

and extreme temperatures.

- **Avoid Moisture:** These speakers are not waterproof. Keep them away from water, high humidity, and other liquids to prevent damage.
- **Cable Care:** Handle all cables and connections with care. Avoid bending or crimping cables excessively, which can lead to internal damage.

## 5. TROUBLESHOOTING

---

If you encounter issues with your Advent AW400 speakers, refer to the following common problems and solutions:

- **No Sound:**
  - Ensure the Master Speaker's **ON/OFF Switch (F)** is in the 'ON' position.
  - Verify the AC adapter is securely plugged into both the speaker and a working electrical outlet.
  - Check that the RCA audio cable is firmly connected to both the Master Speaker's **RCA Jack (E)** and your audio source.
  - Confirm your audio source is powered on and playing audio, and its volume is turned up.
- **Static or Poor Sound Quality:**
  - Adjust the **Tuning Control (G)** on the Master Speaker slowly until the sound becomes clear.
  - Relocate the speakers or the audio source to minimize interference from other electronic devices (e.g., cordless phones, Wi-Fi routers).
  - Ensure there are no large metallic objects or walls directly obstructing the line of sight between the speakers and the audio source (if applicable for wireless transmission).
- **Only One Speaker Working:**
  - Check the connection between the Master and Slave speakers (if applicable, some models have a wired connection between them).
  - Ensure the audio source is outputting a stereo signal.

## 6. SPECIFICATIONS

---

Feature	Specification
Model Name	AW400
Speaker Type	Multimedia
Special Feature	Radio (Note: This feature may refer to the wireless transmission capability rather than an AM/FM tuner)
Compatible Devices	Laptop, MP3 Player, Smartphone, Tablet
Surround Sound Channel Configuration	2.0
Color	silver
Included Components	2 Wireless Stereo Speakers

Feature	Specification
Is Waterproof	FALSE
Warranty Type	Limited
Control Method	Touch
Wireless Communication Technology	Bluetooth (Note: The product title specifies 900 MHz, Bluetooth may be an additional feature or a misclassification in source data)
Power Source	Battery Powered (Note: The setup section refers to an AC adapter, suggesting dual power options or a primary AC power with battery backup/portability)
Audio Driver Type	Dynamic Driver
Bluetooth Range	10 Meters
Subwoofer Connectivity Technology	Wireless
Specific Uses For Product	personal
UPC	028042001304
Style	modern
Item Weight	9.55 pounds
Package Dimensions	12.3 x 12.2 x 6.5 inches
ASIN	B00EVELXG6
Date First Available	August 30, 2013
Brand	Advent
Speaker Maximum Output Power	10 Watts
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount

## 7. WARRANTY INFORMATION

The Advent AW400 Wireless Stereo Speakers come with a limited warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. This warranty typically covers manufacturing defects and workmanship under normal use. Keep your proof of purchase for any warranty claims.

## 8. SUPPORT

---

For further assistance, technical support, or inquiries regarding your Advent AW400 Wireless Stereo Speakers, please contact Advent customer service. Contact information can usually be found on the product packaging, the Advent website, or the warranty card.

When contacting support, please have your model number (AW400) and proof of purchase readily available.