

Manuals.plus /
› Hathaway /
› Hathaway Kingston 3-in-1 Octagon Game Table User Manual (Model BG2351T)

Hathaway BG2351T

Hathaway Kingston 3-in-1 Octagon Game Table User Manual

Model: BG2351T | Brand: Hathaway

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Hathaway Kingston 3-in-1 Octagon Game Table. This versatile table functions as a dining table, poker table, and bumper pool table, designed to enhance your game room or living space. Please read all instructions carefully before assembly and use to ensure safe and proper operation.

COMPONENTS LIST

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact Hathaway customer support.

- Table Base (Pedestal)
- Table Top (Reversible for Dining/Poker)
- Bumper Pool Playfield (Integrated)
- Full Set of Bumper Pool Balls
- 2 Pool Cues
- Chalk
- Table Brush
- Assembly Hardware (Bolts, Washers, Wrench, etc.)



Image: A full set of bumper pool balls, two pool cues, chalk, and a table brush, which are included with the table.

SETUP INSTRUCTIONS

Assembly typically requires two adults. Ensure you have adequate space and the necessary tools (usually included or standard household tools).

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches. Keep all packaging materials until assembly is complete.
2. **Assemble Table Base:** Attach the pedestal legs to the central column of the table base using the provided hardware. Ensure all bolts are tightened securely, but do not overtighten.
3. **Attach Table Base to Playfield:** Carefully place the bumper pool playfield upside down on a protected surface. Align the assembled table base with the pre-drilled holes on the underside of the playfield. Secure the base to the playfield using the designated bolts and washers.
4. **Position the Table:** With assistance, carefully flip the table upright and move it to its desired location. Ensure the table is level.
5. **Place Table Top:** The reversible table top has a dining surface on one side and a poker surface on the other. Place the desired side facing up onto the bumper pool playfield. The top should sit securely.



SEAMLESS 3-IN-1 VERSATILITY

Easily switch between dining, poker, and bumper pool setups.

Image: The sturdy pedestal base provides stability for all game modes.

OPERATING INSTRUCTIONS

1. Dining Table Mode

To use the table as a dining surface, ensure the reversible table top is placed with the smooth, finished side facing upwards. This mode is suitable for meals, board games, or general use.

2. Poker Table Mode

To convert to poker mode, carefully lift and flip the table top so the padded, leatherette playing surface with chip racks and cup holders is facing upwards. The table is designed to accommodate up to 8 players for card games.

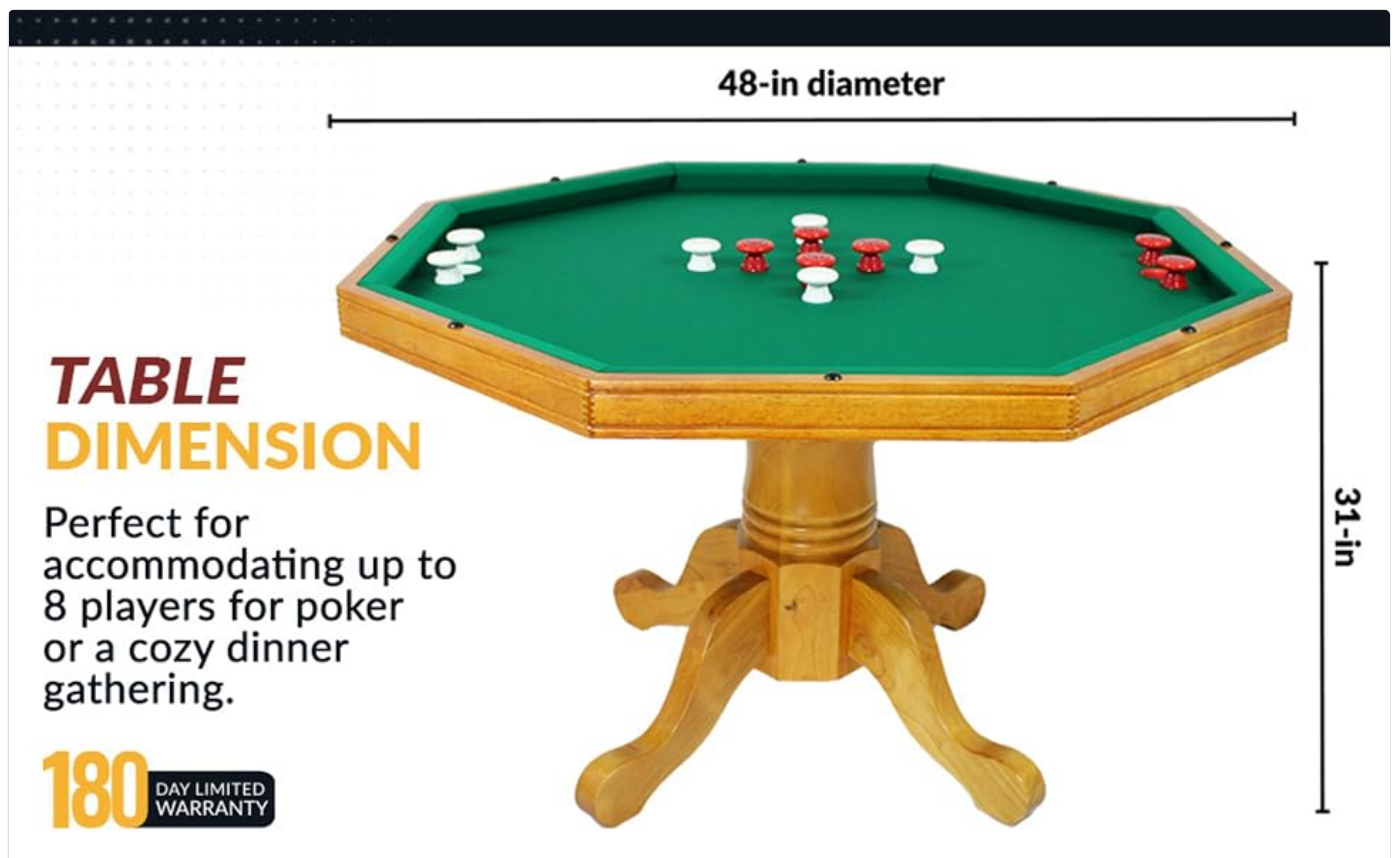


Image: The table's 3-in-1 functionality allows seamless switching between dining, poker, and bumper pool setups.

3. Bumper Pool Table Mode

To play bumper pool, remove the reversible table top completely. The green felt playfield with bumpers and pockets will be exposed. Use the included bumper pool balls, cues, and chalk for play. The pockets are designed to retract for easy ball retrieval.



Image: Users enjoying a game of bumper pool on the table.

Maintenance

- **Cleaning the Wood Finish:** Wipe the wood surfaces with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Cleaning the Poker Surface:** The padded leatherette surface can be wiped clean with a damp cloth and mild soap if necessary. Dry immediately.
- **Cleaning the Bumper Pool Felt:** Use the included table brush to gently remove dust and debris from the felt. For deeper cleaning, a specialized billiard cloth cleaner may be used sparingly, following product instructions.
- **Accessory Care:** Store pool cues straight to prevent warping. Keep balls clean.
- **Environmental Conditions:** Avoid placing the table in direct sunlight or near heat sources, as this can cause warping or fading of the wood. Maintain a stable room temperature and humidity.

Troubleshooting

Problem	Possible Cause	Solution
Table feels wobbly.	Loose assembly bolts or uneven floor.	Check and tighten all assembly bolts. Use shims under the base if the floor is uneven.
Table top does not sit flush.	Improper placement or debris on the bumper pool playfield.	Ensure the table top is correctly aligned. Remove any debris from the playfield surface before placing the top.
Bumper pool balls do not roll straight.	Uneven table surface or debris on felt.	Verify the table is level. Clean the felt surface with the brush.

Specifications

Feature	Detail
Model Number	BG2351T
Dimensions (Overall)	48-inch diameter x 31-inch height (approx. 48 x 48 x 33.5 inches)
Weight	180 pounds
Material	Durable Hardwood (Oak finish)
Table Functions	Dining Table, Poker Table, Bumper Pool Table
Poker Surface	Padded black leatherette with cup holders and chip slots
Bumper Pool Surface	Green billiard cloth with retractable pockets



KINGSTON 48-IN POKER TABLE COMBO SET

TABLE SET ONLY
OAK FINISH



Image: Detailed dimensions of the Hathaway Kingston 3-in-1 Octagon Game Table.

WARRANTY AND SUPPORT

Warranty Information

The Hathaway Kingston 3-in-1 Octagon Game Table is backed by a **180-day limited warranty**. This warranty covers manufacturing defects and missing components. Please retain your proof of purchase for warranty claims.

Customer Support

For assistance with assembly, missing parts, warranty claims, or any other inquiries, please contact Hathaway customer support. Refer to the contact information provided with your product packaging or visit the official Hathaway website for current support details.

© 2024 Hathaway. All rights reserved.

For the latest information and support, please visit HathawayGames.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00EWH11XW>

More documents and user manuals: <https://manuals.plus/>