

## Disney WA062ALJFZ

# Disney Baby Princess Music & Lights Walker Instruction Manual

Model: WA062ALJFZ

Brand: Disney

## 1. SAFETY INFORMATION

**WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.**

This product is intended for use by a child who can hold their head upright unassisted and who is not able to walk or climb out of the product. Maximum weight capacity is 30 lbs (13.6 kg) or maximum height of 32 inches (81 cm).

- Never leave your child unattended in the walker.
- Use the walker only on flat, level surfaces free of objects that could tip the walker over.
- Keep the child away from stairs, steps, and uneven surfaces.
- Prevent access to stoves, heaters, and other hot appliances.
- Keep hot liquids, electrical cords, and other potential hazards out of reach.
- Always ensure all locking mechanisms are securely engaged before placing your child in the walker.

## 2. PRODUCT OVERVIEW

The Disney Baby Princess Music & Lights Walker is designed to provide a fun and secure environment for your child's early mobility and play. It features engaging sounds and lights, along with interactive princess-themed toys.



Figure 2.1: Front view of the Disney Baby Princess Music & Lights Walker.

### Key Features:

- **Engaging Sounds and Lights:** Designed to delight your child with interactive audio and visual stimuli.
- **Customizable Comfort:** Features a 3-position height adjustment to accommodate your growing child.
- **Easy Cleanup:** Equipped with a machine-washable padded seat for convenient maintenance.
- **Two Trays for More Fun:** Includes two swing-open activity trays with princess-themed toys, providing interactive play and easy access to a large snack tray.
- **Versatile Mobility:** Sturdy wheels ensure smooth movement on various surfaces, including carpets and hard floors.



Figure 2.2: Walker with activity trays swung open, revealing the snack tray.

- 2 removable, swing-open activity trays with 4 fun Disney themed toys



Figure 2.3: Detailed view of the two removable, swing-open activity trays with four Disney-themed toys.

### 3. SETUP

Your Disney Baby Princess Music & Lights Walker comes with all necessary components for assembly. Please follow these general steps for initial setup:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all items listed in the 'What's in the Box' section are present.
2. **Unfold the Walker:** Place the walker on a flat surface. Locate the folding mechanisms (typically latches or buttons on the frame) and carefully unfold the walker until it locks into its upright position. Ensure all frame connections are secure.
3. **Adjust Height:** The walker features a 3-position height adjustment. Locate the height adjustment mechanism (usually a button or lever on the underside of the main tray) and adjust the walker to the appropriate height for your child. Ensure your child's feet can comfortably touch the floor.
4. **Attach Activity Trays:** If the activity trays are not pre-attached, align them with the designated slots on the main tray and press firmly until they click into place.
5. **Install Batteries (if applicable):** If the music and lights feature requires batteries, open the battery

compartment (usually on the underside of the activity tray) and insert the required batteries (refer to specifications for type and quantity).

Your browser does not support the video tag.

Video 3.1: Product Summary Video demonstrating key features and possibly setup steps. This video is provided by Amazon Product Imaging.

## 4. OPERATING INSTRUCTIONS

---

### Placing Your Child in the Walker:

Ensure the walker is on a flat, stable surface. Gently place your child into the padded seat, making sure their legs are positioned correctly and their feet can touch the floor. Always secure any safety straps if provided.

### Using the Activity Trays:

The walker features two swing-open activity trays. These trays can be moved to the side to reveal an oversized snack/play tray underneath. The princess-themed toys on the trays provide interactive engagement with sounds and lights. Encourage your child to interact with the toys to stimulate their senses and motor skills.

### Mobility:

The sturdy wheels allow for smooth movement across various floor types, including hard floors and carpets. Supervise your child as they learn to maneuver the walker, guiding them away from obstacles and unsafe areas.

## 5. MAINTENANCE

---

### Cleaning the Padded Seat:

The padded seat is machine-washable. Remove the seat from the walker frame according to the instructions (usually by unhooking straps or clips). Wash in cold water on a gentle cycle with mild detergent. Do not bleach. Tumble dry on low heat or air dry. Reattach the seat securely once completely dry.

### Cleaning Plastic Parts:

Wipe down all plastic surfaces, including the frame, trays, and toys, with a damp cloth and mild soap. Rinse thoroughly with a clean damp cloth and dry completely. Avoid using abrasive cleaners or solvents that could damage the plastic.

### Wheel Maintenance:

Periodically check the wheels for any debris (hair, lint, etc.) that may hinder smooth movement. Clean as necessary to ensure optimal performance.

## 6. TROUBLESHOOTING

---

- **Walker not moving smoothly:** Check wheels for obstructions (hair, lint) and ensure they are clean. Verify that the walker is on a suitable surface.
- **Activity toys not working:** Check if batteries are installed correctly and are not depleted. Replace batteries if necessary. Ensure the power switch (if present) is in the 'ON' position.
- **Height adjustment not engaging:** Ensure the adjustment mechanism is fully released before attempting to change height. Push firmly until it locks into the desired position.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	WA062ALJFZ
Product Dimensions	29.6"L x 25.1"W x 5.5"H (folded) / 25 x 28.5 x 22.5 inches (unfolded)
Item Weight	11.68 pounds
Maximum Weight Recommendation	30 Pounds
Maximum Height Recommendation	32 inches
Material Type	Plastic, Fabric (Wheels)
Color	Pink
Batteries Required	Yes (Type and quantity not specified, refer to product labeling)
Age Range (Description)	Toddler

# ● Product Dimensions 29.6 x 25.1 x 5.5 inches



Figure 7.1: Product dimensions for the Disney Baby Princess Music & Lights Walker.

## 8. WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the documentation included with your purchase or visit the official Disney Baby website. Keep your proof of purchase for warranty claims.

