

Hunter 99122

Hunter Universal Ceiling Fan Remote Control User Manual

Model: 99122

1. PRODUCT OVERVIEW

The Hunter Universal Ceiling Fan Remote Control provides convenient operation of your ceiling fan's speed and light functions. Designed for ease of use, this lightweight remote features a sleek white finish and intuitive controls for enhanced comfort in your living space.



Figure 1: Front view of the Hunter Universal Ceiling Fan Remote Control.

Key features include three fan speed settings, an instant on/off option for the fan, and full-range light dimming capabilities. It is compatible with most ceiling fan brands, provided the receiver fits within the fan's canopy.

2. PACKAGE CONTENTS

- Universal Remote Control
- Wall Mount Cradle
- Receiver Unit
- Battery (1 CR2 battery required, included)
- Wire Nuts (4 included)



Hunter



Figure 2: Back view of the remote control, showing the battery compartment.

3. SETUP AND INSTALLATION

3.1. Before You Begin

- Ensure power to the ceiling fan is turned off at the circuit breaker.
- Read all instructions thoroughly before installation.

3.2. Receiver Installation

The receiver unit must be installed within the canopy of your ceiling fan. Wiring instructions are provided in the detailed user manual. Ensure all connections are secure using the provided wire nuts.

For detailed wiring diagrams and safety precautions, please refer to the official User Manual PDF [Download User Manual \(PDF\)](#)

3.3. Remote Pairing

After installing the receiver and restoring power to the fan, insert the included CR2 battery into the remote control. Within a few seconds of restoring power, press and hold the '0' (off) and '3' (high speed) buttons on the remote until the blue indicator light flashes, indicating successful pairing. Some fans may pair without receiver installation; test this method first by inserting the battery and attempting pairing.

4. OPERATING INSTRUCTIONS

4.1. Fan Speed Control

- **Button '1':** Low fan speed
- **Button '2':** Medium fan speed
- **Button '3':** High fan speed
- **Button '0':** Turns the fan off

4.2. Light Control

- **Light Button (bulb icon):** Press once to turn lights on/off.
- **Light Dimming:** Press and hold the light button to cycle through dimming levels. Release at desired brightness.

5. MAINTENANCE

5.1. Battery Replacement

The remote control uses one CR2 battery (included). When the remote's performance degrades, replace the battery by opening the battery compartment on the back of the remote. Ensure correct polarity when inserting the new battery.

5.2. Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or internal components.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Remote not responding to fan/light	Incorrect pairing or low battery.	Re-pair the remote with the receiver (see Section 3.3). Replace the battery.
Light dimming function is inconsistent	Temporary signal interruption or bulb incompatibility.	Turn off power to the fan at the circuit breaker for 30 seconds, then restore power. Ensure dimmable bulbs are used.
Fan speeds are not changing	Remote or receiver malfunction.	Re-pair the remote. If the issue persists, contact Hunter customer support.

7. SPECIFICATIONS

Attribute	Detail
Brand	Hunter
Model Name	Universal Remote
Model Number	99122
Color	White
Product Dimensions	0.75"D x 3"W x 4.75"H
Item Weight	9.1 ounces
Power Source	Battery Powered
Battery Type	1 CR2 battery (included)
Voltage	120 Volts
Control Method	Remote
Indoor/Outdoor Usage	Indoor
Frequency Range	Up to 75 feet

8. WARRANTY & SUPPORT


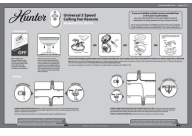
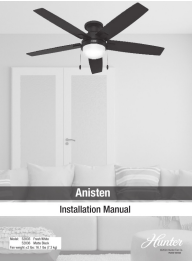

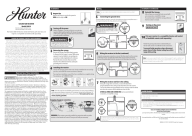

8.1. Warranty Information

This product comes with a Lifetime Limited Warranty. For full details regarding warranty coverage and claims, please refer to the documentation included with your purchase or visit the official Hunter website.

8.2. Customer Support

For further assistance, technical support, or replacement parts, please contact Hunter customer service. You can find contact information on the Hunter Fan Company website or within the product packaging.

Related Documents - 99122

	<p>Hunter Universal Mounting System Installation Guide (Model 99818)</p> <p>This guide provides detailed instructions for installing the Hunter Universal Mounting System (Model 99818), including safety precautions, parts and tools lists, step-by-step assembly, remote pairing, and warranty information.</p>
	<p>Hunter Universal 3 Speed Ceiling Fan Remote Model 99122, 99123 Installation and Operation Guide</p> <p>Comprehensive guide for installing and operating the Hunter Universal 3 Speed Ceiling Fan Remote, models 99122 and 99123. Includes wiring instructions, pairing, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Hunter Anisten Ceiling Fan Installation Manual</p> <p>Comprehensive installation manual for the Hunter Anisten ceiling fan (Models 52835, 52836), including safety warnings, parts list, step-by-step installation instructions, wiring diagrams, troubleshooting tips, and warranty information.</p>
	<p>Hunter Hepburn Ceiling Fan Installation Manual</p> <p>Comprehensive installation manual for the Hunter Hepburn ceiling fan, covering mounting, wiring, light kit assembly, wall control setup, and troubleshooting. Includes safety warnings and warranty information.</p>
	<p>Hunter 99814 Universal Ceiling Fan Receiver Installation Guide</p> <p>Comprehensive installation guide for the Hunter 99814 Universal Ceiling Fan Receiver, detailing wiring, safety precautions, warranty information, and troubleshooting steps.</p>
	<p>Hunter Universal Fan and Light Remote Control Installation and Operation Manual</p> <p>Comprehensive guide for installing and operating the Hunter Universal Fan and Light Remote Control (Model 41797-02). Includes setup, troubleshooting, and warranty information.</p>