

HOT TOOLS HT7007CRM

Hot Tools Pro Artist 1875W Turbo Ceramic + Ionic Hair Dryer

Model: HT7007CRM

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. As with most electrical appliances, electrical parts are electrically live even when the switch is off.
- Always unplug the appliance immediately after using.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.

PRODUCT OVERVIEW

The Hot Tools Pro Artist 1875W Turbo Ceramic + Ionic Hair Dryer is designed for efficient hair drying and styling. It features Direct Ion Technology to help reduce frizz and promote smooth, healthy-looking hair. The 1875-watt motor provides powerful airflow for faster drying times.

This dryer is engineered to be lightweight and quiet, aiming to reduce discomfort during use. It offers six heat and speed settings for versatile styling across various hair types. A Cool Shot feature helps to set hairstyles for a longer hold. The removable lint filter facilitates easy cleaning, contributing to extended motor life.

Included attachments enhance styling capabilities:

- **Finger Diffuser:** Adds volume and enhances natural curls or waves.
- **Styling Pik:** Assists in combing and straightening hair during drying.
- **Concentrator:** Focuses airflow for precise styling and added shine.



Image: The Hot Tools Pro Artist 1875W Turbo Ceramic + Ionic Hair Dryer in purple, shown with its included diffuser, styling pik, and concentrator attachments.

SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove the hair dryer and all accessories from the packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any visible damage. Do not use if the cord or plug is damaged.
3. **Attachment Installation:**
 - To attach the concentrator, diffuser, or styling pik, align the attachment with the nozzle of the dryer and push it firmly into place until it clicks or feels secure.
 - To remove, gently pull the attachment off the nozzle. Ensure the dryer is cool before attaching or removing accessories.
4. **Power Connection:** Ensure the voltage of your power outlet matches the appliance's requirements (110V). Plug the

dryer into a standard electrical outlet.



Image: The Hot Tools hair dryer displayed with its three primary attachments: a diffuser, a concentrator nozzle, and a styling pik. These attachments are designed for various styling needs.

OPERATING INSTRUCTIONS

Before use, ensure your hair is towel-dried to remove excess water. Always start with the lowest heat and speed settings and adjust as needed for your hair type and desired style.

Powering On/Off

- Plug the dryer into an appropriate electrical outlet.
- Use the **SPEED** switch located on the handle to turn the dryer ON (LOW or HIGH) or OFF.

Adjusting Heat and Speed Settings

The dryer features independent switches for heat and speed, allowing for 6 custom combinations.

- **HEAT Switch:** Select from LOW, MED (Medium), or HIGH heat settings.
- **SPEED Switch:** Select from LOW or HIGH airflow speeds.

COOL SHOT TO SET STYLE

6 HEAT / SPEED SETTINGS FOR ALL HAIR TYPES AND TEXTURES



Image: A close-up view of the Hot Tools hair dryer's control panel, showing the "COOL SHOT" button, and the "HEAT" and "SPEED" switches with their respective settings (HIGH, MED, LOW for heat; HIGH, LOW, OFF for speed).

Using the Cool Shot Feature

- After styling a section of hair with heat, press and hold the **COOL SHOT** button. This releases a burst of cool air to help set the style and add shine.
- Release the button to return to the selected heat setting.

Using Attachments

- **Concentrator:** For precise drying and smoothing. Direct the airflow down the hair shaft from roots to ends.
- **Diffuser:** For enhancing natural curls and waves. Gently cup sections of hair in the diffuser bowl and lift towards the scalp. Use on a low heat and speed setting.
- **Styling Pik:** For straightening and detangling during drying. Use the pik to comb through sections of hair while

drying.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your hair dryer.

- 1. Always Unplug:** Before cleaning, always unplug the appliance and allow it to cool completely.
- 2. Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or solvents.
- 3. Removable Lint Filter:**
 - The dryer features a removable lint filter located at the rear air intake.
 - Twist or pull the filter cover to remove it.
 - Clean any accumulated lint, dust, or hair from the filter using a soft brush or by rinsing under water (ensure it's completely dry before reattaching).
 - Reattach the filter cover securely. Regular cleaning of the filter prevents overheating and maintains airflow efficiency.
- 4. Storage:** When not in use, unplug the dryer. Allow it to cool and store it in a dry location. Do not wrap the cord around the dryer, as this can cause premature wear and breakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not turn on.	Not plugged in; power outlet malfunction; internal wiring issue.	Ensure the dryer is securely plugged into a working outlet. Check household circuit breaker. If still not working, contact customer support.
Weak airflow.	Lint filter is blocked; motor issue.	Clean the removable lint filter at the rear of the dryer. Ensure it is free of hair and dust.
Dryer overheats or shuts off.	Blocked air intake/outlet; prolonged use; internal thermal cut-off activated.	Unplug the dryer and allow it to cool for several minutes. Clean the lint filter. Ensure air vents are not blocked during use.
Attachments do not stay on.	Improper attachment; wear and tear.	Ensure attachments are correctly aligned and pushed firmly onto the nozzle. If they continue to fall off, they may need replacement.

If the problem persists after attempting these solutions, please refer to the warranty information or contact customer support.

SPECIFICATIONS

- **Model Number:** HT7007CRM
- **Power:** 1875 Watts
- **Voltage:** 110V
- **Technology:** Ceramic + Ionic (Direct Ion Technology)
- **Heat/Speed Settings:** 6 combinations (3 Heat, 2 Speed)

- **Special Features:** Cool Shot button, Removable Lint Filter
- **Included Attachments:** Concentrator, Diffuser, Styling Pik
- **Dimensions:** Approximately 11.15 x 3.95 x 9.65 inches
- **Weight:** Approximately 1 Pound
- **Manufacturer:** Helen of Troy

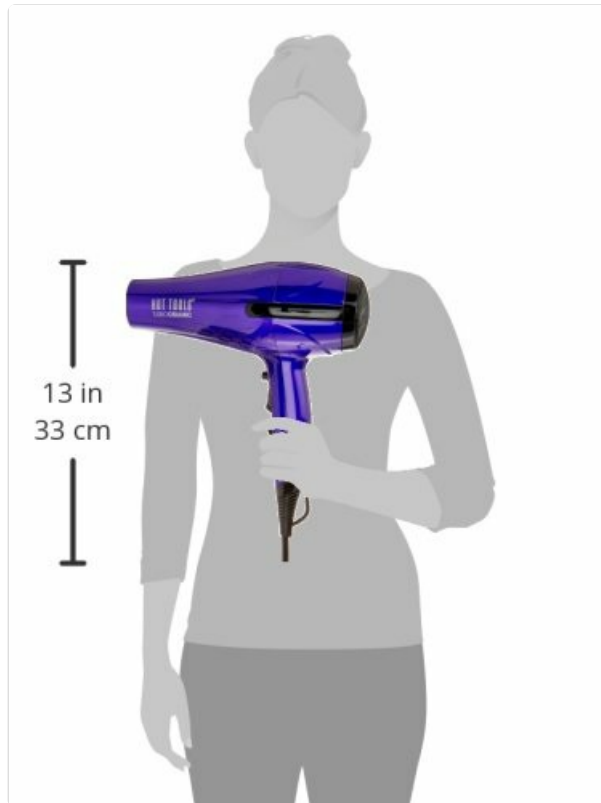


Image: A diagram illustrating the approximate size of the Hot Tools hair dryer, held by a person for scale, indicating a length of about 13 inches (33 cm).

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the official product documentation for specific warranty terms and conditions.

For detailed installation instructions, safety information, or further assistance, please consult the official Installation Manual (PDF) available online:

[Download Official Installation Manual \(PDF\)](#)

For customer service inquiries, please contact the manufacturer, Helen of Troy, directly.

© 2023 HOT TOOLS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question