

[Manuals.plus](#) /

› [Hotpoint](#) /

› Hotpoint Refrigerator Water Valve Instruction Manual

## Hotpoint WR57X10040

# Hotpoint Refrigerator Water Valve Instruction Manual

Model: WR57X10040

### INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of your Hotpoint Refrigerator Water Valve, model WR57X10040. This component is a brand new replacement part designed to control the water supply to your refrigerator's ice maker and water dispenser.

### SAFETY INFORMATION

Always prioritize safety when working with electrical appliances and water lines. Failure to follow these safety guidelines may result in property damage, personal injury, or electric shock.

- **Disconnect Power:** Before beginning any installation or maintenance, always unplug the refrigerator from the electrical outlet or turn off the circuit breaker supplying power to the appliance.
- **Shut Off Water Supply:** Turn off the main water supply valve to your home or the dedicated water supply valve for the refrigerator before disconnecting any water lines.
- **Wear Protective Gear:** Consider wearing gloves and eye protection during installation.
- **Professional Assistance:** If you are unsure about any step or lack the necessary tools or experience, it is highly recommended to seek assistance from a qualified appliance technician.
- **Check for Leaks:** After installation, carefully check all connections for water leaks before fully restoring power and water.

### PRODUCT OVERVIEW

The Hotpoint Refrigerator Water Valve (Model WR57X10040) is a critical component that regulates the flow of water into your refrigerator for the ice maker and water dispenser functions. It typically consists of two solenoid valves, each controlling a separate water path, and a mounting bracket for secure installation.



*Figure 1: Hotpoint WR57X10040 Refrigerator Water Valve. This image displays the Hotpoint WR57X10040 Refrigerator Water Valve, showing its dual solenoids (one red, one blue), blue plastic outlets, and metal mounting bracket. The valve is designed to control water flow to the refrigerator's ice maker and water dispenser.*

## SETUP AND INSTALLATION

This section outlines general steps for replacing a refrigerator water valve. Specific procedures may vary depending on your refrigerator model. Refer to your refrigerator's service manual for detailed instructions.

### 1. Prepare the Refrigerator:

- Unplug the refrigerator from the wall outlet.
- Turn off the water supply to the refrigerator.
- Move the refrigerator away from the wall to access the rear panel.

### 2. Access the Valve:

- Locate and remove the rear access panel of the refrigerator, typically secured with screws.
- Identify the existing water valve. It will have water lines connected to it and electrical wires.

### 3. Disconnect the Old Valve:

- Place a towel or small container underneath the valve to catch any residual water.
- Disconnect the water lines from the old valve. Note which line goes to which port if there are multiple.
- Carefully disconnect the electrical connectors from the solenoids.
- Unmount the old valve from its bracket or mounting screws.

### 4. Install the New Valve:

- Mount the new WR57X10040 water valve in the same position as the old one.
- Connect the water lines to the appropriate ports on the new valve. Ensure connections are secure to prevent leaks.
- Connect the electrical wires to the corresponding solenoid terminals.

### 5. Test and Reassemble:

- Slowly turn on the water supply to the refrigerator and check all connections for leaks. Tighten if necessary.
- Plug the refrigerator back into the electrical outlet.
- Test the water dispenser and ice maker functions to ensure proper operation.
- Once confirmed, reattach the rear access panel.

- Push the refrigerator back into its original position.

## OPERATING INSTRUCTIONS

The Hotpoint Refrigerator Water Valve operates automatically in conjunction with your refrigerator's internal controls. It opens to allow water flow when the ice maker calls for water to produce ice or when the water dispenser lever is pressed.

- **Ice Production:** Ensure the ice maker is turned on (if it has a switch) and the freezer temperature is set correctly for ice production. The valve will automatically open to fill the ice maker mold.
- **Water Dispensing:** Press the water dispenser lever on your refrigerator door. The valve will open to allow water to flow through the dispenser.

No manual operation of the valve itself is required under normal conditions.

## MAINTENANCE

The Hotpoint Refrigerator Water Valve is designed for long-term reliability with minimal maintenance. However, periodic checks can help ensure its continued proper function.

- **Leak Inspection:** Periodically inspect the water lines and connections around the valve for any signs of leaks or drips. Address any leaks immediately to prevent water damage.
- **Water Quality:** If your home has hard water, mineral deposits can sometimes affect valve performance over many years. Using a refrigerator water filter can help mitigate this.
- **Cleanliness:** Keep the area around the valve clean and free of dust or debris, especially around electrical connections.

## TROUBLESHOOTING

If you experience issues with your refrigerator's water or ice dispensing, the water valve may be a factor. Here are some common troubleshooting steps:

| Problem                                     | Possible Cause                                                                                                                                | Solution                                                                                                                                                                                      |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No water from dispenser / No ice production | Water supply turned off<br>Kinked water line<br>Clogged water filter<br>Faulty water valve solenoid<br>Freezer temperature too high (for ice) | Ensure water supply is on.<br>Check water lines for kinks.<br>Replace water filter.<br>Test valve solenoids with a multimeter (if comfortable).<br>Adjust freezer temperature to 0°F (-18°C). |
| Slow water flow from dispenser              | Low water pressure<br>Partially clogged water filter<br>Partially restricted water line                                                       | Check household water pressure.<br>Replace water filter.<br>Inspect water lines for partial blockages.                                                                                        |
| Water leak around valve                     | Loose water line connection<br>Cracked valve housing<br>Faulty valve seal                                                                     | Tighten water line connections.<br>Inspect valve for visible damage. Replacement may be necessary.                                                                                            |

If troubleshooting steps do not resolve the issue, contact a qualified appliance repair technician.

SPECIFICATIONS

|                       |                            |
|-----------------------|----------------------------|
| Model Number          | WR57X10040                 |
| Brand                 | Hotpoint                   |
| Product Dimensions    | 2 x 2 x 2 inches; 9 ounces |
| Material              | Stainless Steel            |
| Inlet Connection Type | Compression                |
| Number of Ports       | 2                          |
| Valve Type            | Globe Valve                |
| Manufacturer          | Universal                  |

WARRANTY INFORMATION

Warranty coverage for this replacement part is typically provided by the seller or the manufacturer of the part, not necessarily by the original appliance manufacturer (Hotpoint). Please refer to your purchase documentation or contact the retailer from whom you purchased this water valve for specific warranty terms and conditions.

SUPPORT

For technical assistance, installation guidance, or troubleshooting beyond the scope of this manual, please contact the seller or a qualified appliance repair technician. Always provide the model number (WR57X10040) when seeking support.

© 2023 Hotpoint. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question