

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Beyution](#) /

› Vizio Original XRT510 LED TV Remote Control User Manual

## Beyution xrt510

# Vizio Original XRT510 LED TV Remote Control User Manual

Model: XRT510 | Brand: Beyution

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

## 1. INTRODUCTION

This manual provides comprehensive instructions for the Beyution Vizio Original XRT510 LED TV Remote Control. It covers initial setup, operational guidance, maintenance tips, and troubleshooting steps to ensure optimal performance and longevity of your remote control. This remote is designed to be compatible with various VIZIO LED TVs, offering a full range of functions for an enhanced viewing experience.

## 2. SETUP

### 2.1 Battery Installation

The XRT510 remote control requires two AAA batteries (not included) for operation. Follow these steps to install them correctly:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## 3. OPERATING INSTRUCTIONS

The XRT510 remote control is designed for intuitive use with VIZIO LED TVs. Below is a guide to its primary functions and buttons.



amazon

NETFLIX

MGO



LIST



MENU

EXIT

INFO

OK

BACK

GUIDE



VOL



CH



3D



1

2

3

4

5

6

7

8

9



Figure 3.1: Front View of XRT510 Remote Control

This image displays the front face of the Vizio XRT510 remote control, highlighting the arrangement of its various buttons, including navigation, volume, channel, and dedicated streaming service buttons.

### 3.1 Button Functions

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back Button:** Returns to the previous menu or screen.
- **Menu Button:** Opens the TV's main settings menu.
- **Volume Up/Down (VOL):** Adjusts the audio volume.
- **Channel Up/Down (CH):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Dedicated App Buttons (e.g., Amazon, Netflix, M-GO):** Provides direct access to specified streaming applications.
- **Number Pad (0-9):** Used for direct channel entry or inputting numbers.
- **Info Button:** Displays information about the current program or input.
- **Guide Button:** Opens the electronic program guide (if supported by your TV and service).
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **3D Button:** Activates or deactivates 3D mode (if supported by your TV).

### 3.2 Using the QWERTY Keyboard (if applicable)

Some versions of the XRT510 remote may feature a full QWERTY keyboard on the reverse side. To use it:

1. Flip the remote over to reveal the keyboard.
2. The remote may automatically switch to keyboard input mode when flipped, or you may need to press a specific button (refer to your TV's on-screen prompts).
3. Use the keys to type text, such as search queries or login credentials.
4. Flip the remote back to the front to resume standard TV control.



Figure 3.2: Angled View of XRT510 Remote Control

This image provides an angled perspective of the Vizio XRT510 remote, offering a clearer view of the button depth and ergonomic design. While not explicitly showing a QWERTY keyboard, it illustrates the remote's form factor.

## 4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote or exposing it to liquids.

## 5. TROUBLESHOOTING

If you encounter issues with your XRT510 remote control, try the following solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and TV sensor. Remote out of range.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's IR sensor. Move closer to the TV.
Buttons are sticky or unresponsive	Dirt or debris under the buttons. Worn internal contacts.	Clean the remote surface and around buttons with a soft, slightly damp cloth. If the issue persists, the remote may require replacement.
Remote only works intermittently	Low battery power. Interference from other electronic devices.	Replace batteries. Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Number	XRT510
Compatible Devices	Television (VIZIO LED TVs)
Power Source	2 x AAA Batteries (not included)
Color	Black
Product Dimensions	7 x 5 x 2 inches
Item Weight	3 ounces
Special Feature	Ergonomic
Manufacturer	Beyution Factory

## 7. WARRANTY & SUPPORT

---

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

For general inquiries or further assistance, you may also visit the Beyution support website or contact their customer service.