

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Pampered Chef](#) /
- › [Pampered Chef Rockcrok 4 Qt Dutch Oven Instruction Manual](#)

Pampered Chef 3140

Pampered Chef Rockcrok 4 Qt Dutch Oven Instruction Manual

Model: 3140

INTRODUCTION

The Pampered Chef Rockcrok 4 Qt Dutch Oven is a versatile piece of cookware designed for various cooking methods. Crafted from glazed ceramic, it offers excellent heat retention and even cooking. This manual provides essential information for the proper use and care of your Dutch oven.



Image: Pampered Chef Rockcrok 4 Qt Dutch Oven with its glass lid.

SETUP AND FIRST USE

Before first use, wash the Dutch oven and lid with warm, soapy water and dry thoroughly. The glazed ceramic construction of the Rockcrok Dutch Oven does not require pre-soaking or seasoning, unlike traditional cast iron cookware. It is ready for

use after initial cleaning.

OPERATING INSTRUCTIONS

The Pampered Chef Rockcrok Dutch Oven is designed for exceptional versatility across various cooking environments:

- **Stovetop Use:** Suitable for gas, electric, and ceramic stovetops. Ensure the Dutch oven is centered on the burner for even heating.
- **Oven Use:** The Dutch oven is oven-safe. The glass lid is oven-safe up to 400°F (204°C). For temperatures exceeding 400°F, remove the glass lid.
- **Microwave Use:** The Dutch oven is microwave-safe. Remove the glass lid before placing in the microwave.
- **Grill Use:** The Dutch oven is grill-safe. The glass lid is **not** grill-safe and should be removed before placing the Dutch oven on a grill.
- **Thermal Shock Resistance:** Pans resist thermal shock, allowing them to be safely transferred directly from the refrigerator to a heat source.
- **Glass Lid:** The transparent glass lid allows you to monitor food as it cooks without lifting the lid, helping to retain heat and moisture.

MAINTENANCE AND CARE

Proper care ensures the longevity and performance of your Pampered Chef Rockcrok Dutch Oven:

- **Cleaning:** The Dutch oven and its glass lid are dishwasher-safe for convenient cleaning. For stubborn food residue, soak the pan in warm, soapy water before washing.
- **Freezer Storage:** The Rockcrok Dutch Oven is freezer-safe, allowing for easy storage of leftovers or meal prep.
- **Avoid Abrasives:** Do not use abrasive cleaners or scouring pads, as these can damage the glazed ceramic surface.
- **Storage:** Store the Dutch oven in a dry place. If stacking, place a soft cloth between the pan and lid to prevent scratches.

TROUBLESHOOTING

If food sticks to the pan, ensure adequate oil or liquid is used and that the pan is properly heated before adding ingredients. For best results, allow food to form a crust before attempting to move or stir it. The glazed ceramic surface is designed to be non-reactive and easy to clean, but proper cooking techniques are still recommended.

SPECIFICATIONS

Feature	Detail
Brand	Pampered Chef

Model Number	3140
Capacity	4 Quarts
Material	Glazed Ceramic (Pan), Glass (Lid)
Color	Black
Finish Type	Enameled
Shape	Round
Product Dimensions	11.4 x 11.4 x 5.3 inches
Item Weight	6.55 pounds
Lid Oven Safe Temperature	Up to 400°F (204°C)
Dishwasher Safe	Yes
Freezer Safe	Yes
Grill Safe	Yes (Pan only, remove lid)
UPC	099901031404

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact Pampered Chef customer service directly or visit their official website. Keep your purchase receipt for any warranty claims.