

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ambient Weather](#) /

› [Ambient Weather WS-09-01TC 8-Channel Wireless Refrigerator/Freezer Thermometer Alarm Set User Manual](#)

Ambient Weather WS-09-01TC

Ambient Weather WS-09-01TC 8-Channel Wireless Refrigerator/Freezer Thermometer Alarm Set User Manual

Model: WS-09-01TC

INTRODUCTION

The Ambient Weather WS-09-01TC is an 8-channel wireless thermometer system designed for monitoring temperatures in refrigerators, freezers, and other environments. This system includes a main console with a night light feature and multiple remote sensors with waterproof probes. It provides real-time temperature readings, programmable audible and visual alerts for temperature limits, and tracks maximum and minimum temperatures. This manual provides instructions for setup, operation, and maintenance of your device.

PACKAGE CONTENTS

- Main Display Console with Night Light
- Wireless Temperature Sensors with Waterproof Probes (Quantity: 2 included, supports up to 8)
- User Manual

PRODUCT OVERVIEW

The WS-09-01TC system allows for comprehensive temperature monitoring. The main console displays current temperatures from up to eight remote sensors, along with indoor temperature. It features a large, uncluttered display for easy readability and includes a night light that changes color based on the outdoor temperature sensor (if connected). The remote sensors are equipped with waterproof probes, making them suitable for various applications, including monitoring temperatures inside refrigerators, freezers, water, or soil.

Key features include:

- Monitors temperature in up to 8 remote locations.
- Includes two wireless temperature sensors with waterproof probes.
- Remote temperature range (lithium batteries): -40°F to 140°F (-40°C to 60°C).
- Remote temperature range (non-lithium batteries): -4°F to 140°F (-20°C to 60°C).

- Temperature update rate: 60 seconds.
- Programmable audible and visual alerts for temperature limits.



Image: The Ambient Weather WS-09-01TC system, showing the main display console, a night light console, and two wireless remote sensors with attached waterproof probes. The main console displays multiple temperature channels and alarm settings. The night light console shows indoor temperature and time. The remote sensors display their current channel temperature.

SETUP INSTRUCTIONS

1. Battery Installation:

- Open the battery compartment on the back of the main display console and each remote sensor.
- Insert the required batteries (typically AAA for console, AA for sensors, refer to device markings for exact type and quantity), observing correct polarity (+/-).
- Close the battery compartments securely.

2. Sensor Placement:

- Place the remote sensors in your desired monitoring locations (e.g., refrigerator, freezer, outdoor).
- For refrigerator/freezer applications, if the appliance has metal walls, the wireless signal may be blocked. In such cases, place the sensor unit **outside** the appliance and route the waterproof probe inside.
- Ensure sensors are within the wireless range of the main console.

3. Console Synchronization:

- Once batteries are installed in both the console and sensors, the console should automatically begin searching for and displaying sensor data. This process may take a few minutes.
- If a sensor does not appear, press the "CHANNEL" button on the console to cycle through channels or the "RESET" button on the sensor (if available) to re-transmit.

4. Initial Settings:

- Use the "ADJUST" or "SET" buttons on the console to configure units (Fahrenheit/Celsius) and set time if applicable. Refer to the specific button functions on your device.

OPERATING INSTRUCTIONS

Viewing Temperatures

- The main console displays the indoor temperature ("IN") and readings from connected remote sensors (e.g., "1", "2").
- Press the "CHANNEL" button to cycle through the available sensor channels or to view all channels in a rotating display mode.
- Each channel typically shows the current temperature, along with recorded maximum ("MAX") and minimum ("MIN") temperatures since the last reset.

Setting Temperature Alarms

1. Press the "ALARM" button to enter alarm setting mode.
2. Use the "CHANNEL" button to select the desired sensor channel for which you want to set an alarm.
3. Use the "+" and "-" (ADJUST) buttons to set the upper and lower temperature limits for the alarm.
4. Press "ALARM" again to confirm and exit alarm setting mode.
5. When the temperature exceeds or falls below the set limits, the console will emit an audible alarm and/or display a visual alert.

Clearing Max/Min Records

- To clear the recorded maximum and minimum temperatures for all channels, press the "CLEAR" button. This will reset them to the current temperature.

Night Light Function

- The console includes a night light feature that may change color based on the temperature reading from a designated outdoor sensor. Consult your device's specific instructions for activating and customizing this feature.

MAINTENANCE

- **Battery Replacement:** Replace batteries in both the console and remote sensors when the low battery indicator appears on the display, or if readings become erratic. Always replace all batteries in a unit at the same time with new ones of the same type.
- **Cleaning:** The device is freezer safe and can be wiped clean. Use a soft, damp cloth to clean the console and sensors. Avoid abrasive cleaners or solvents that could damage the plastic. Ensure probes are clean for accurate readings.
- **Storage:** If storing the device for an extended period, remove all batteries to prevent leakage and corrosion.

TROUBLESHOOTING

No temperature display or "---" on console:

- Check if batteries are installed correctly and are not depleted in both the console and the remote sensor. Replace if necessary.
- Ensure the remote sensor is within the effective wireless range (typically up to 300 feet line of sight) and free from major obstructions like thick walls or large metal objects.
- If monitoring inside a metal appliance (refrigerator/freezer), ensure the sensor unit is placed outside the appliance with only the probe inside.

- Try re-synchronizing the sensor by pressing the "CHANNEL" button on the console or the "RESET" button on the sensor.

Inaccurate temperature readings:

- Ensure the sensor probe is correctly positioned and not directly exposed to heat sources or drafts.
- Check battery levels. Low batteries can affect accuracy.
- If your model supports calibration, refer to the full manual for calibration procedures.

Alarm not sounding:

- Verify that the alarm limits are set correctly for the desired channel.
- Check if the alarm function is enabled.
- Ensure console batteries are not low.

SPECIFICATIONS

Model Name:	WS-09-01TC
Brand:	Ambient Weather
Connectivity Technology:	Wireless
Display Type:	Digital
Power Source:	Battery Powered (Batteries required: Yes)
Remote Temperature Range (Lithium Batteries):	-40°F to 140°F (-40°C to 60°C)
Remote Temperature Range (Non-Lithium Batteries):	-4°F to 140°F (-20°C to 60°C)
Upper Temperature Rating:	140 Degrees Fahrenheit
Response Time:	500 Milliseconds
Update Rate:	60 seconds
Number of Remote Locations:	Up to 8
Special Feature:	Alarm
Product Dimensions:	4.5 x 1 x 5 inches
Item Weight:	1 pounds
Outer Material:	Plastic
Product Care Instructions:	Freezer Safe, Wipe Clean

WARRANTY AND SUPPORT

Ambient Weather products typically come with a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Ambient Weather website for detailed warranty information and terms. For technical support, troubleshooting assistance, or to inquire about additional sensors, please contact Ambient Weather customer service directly.

You can often find contact information and FAQs on the [Ambient Weather Store](#) page.

Related Documents - WS-09-01TC

	<p>Ambient Weather WS-09 8-Channel Wireless Refrigerator/Freezer Thermometer User Manual User manual for the Ambient Weather WS-09 8-Channel Wireless Refrigerator/Freezer Thermometer, providing instructions for setup, operation, and troubleshooting.</p>
	<p>Ambient Weather F007PF 8-Channel Wireless Floating Pool and Spa Thermometer User Manual User manual for the Ambient Weather F007PF 8-Channel Wireless Floating Pool and Spa Thermometer, detailing setup, operation, troubleshooting, specifications, and accessories.</p>
	<p>Ambient Weather WS-24-C User Manual: Wireless Indoor/Outdoor Thermometer Comprehensive user manual for the Ambient Weather WS-24-C 8-Channel Wireless Indoor/Outdoor Thermometer, covering setup, operation, troubleshooting, specifications, and warranty information.</p>
	<p>Ambient Weather WS-24 Wireless Indoor/Outdoor Thermometer User Manual Comprehensive user guide for the Ambient Weather WS-24 8-Channel Wireless Indoor/Outdoor Thermometer, detailing setup, operation, troubleshooting, specifications, and warranty information.</p>
	<p>Ambient Weather WS-15 Wireless 8-Channel Thermometer User Manual User manual for the Ambient Weather WS-15 Wireless 8-Channel Thermometer with Plastic Waterproof Probe, detailing setup, operation, features, troubleshooting, and specifications.</p>

Ambient Weather
Ambient Weather WS-PF11 Wireless Floating Pool & Spa
Thermometer User Manual

Table of Contents

- 1 Introduction
- 2 Safety
- 3 Getting Started
- 4 Setup
- 5 Operation
- 6 Troubleshooting
- 7 Specifications
- 8 Maintenance
- 9 Appendix
- 10 Index

[Ambient Weather WS-PF11 User Manual: Pool & Spa Thermometer Guide](#)

Comprehensive user manual for the Ambient Weather WS-PF11 Wireless Floating Pool & Spa Thermometer. Learn about setup, operation, troubleshooting, specifications, and maintenance for your device.