

Manuals.plus /

› SONY /

› SONY DigitalCamera NEX-5T PowerZoom LensKit(White) NEX-5T NEX-5TL-W - International Version (No Warranty) User Manual

SONY NEX-5TL/W

SONY Digital Camera NEX-5T PowerZoom Lens Kit

USER MANUAL

Introduction

The SONY NEX-5T is a compact mirrorless interchangeable lens camera designed to deliver DSLR-quality photos and videos. Featuring a 16.1MP APS-C sensor, fast autofocus, and built-in Wi-Fi and NFC connectivity, it offers advanced imaging capabilities in a portable form factor. This manual provides essential information for setting up, operating, and maintaining your NEX-5T camera.

What's in the Box

- Camera Body
- Lens

Please ensure all components are present upon unboxing.

Product Overview



Front view of the SONY NEX-5T Digital Camera with the PowerZoom lens attached. This shows the main body, lens, and front controls.



Angled view of the SONY NEX-5T, highlighting the compact design and the attached PowerZoom lens from a slightly elevated perspective.



Front view of the SONY NEX-5T camera body without the lens, revealing the E-mount for interchangeable lenses and the APS-C sensor.



Side view of the SONY NEX-5T, showing the PowerZoom control on the lens, the E-mount release button, and the Wi-Fi/HDMI ports on the camera body.



Top view of the SONY NEX-5T, displaying the power switch, shutter button, mode dial, and movie recording button.

The NEX-5T features a sleek, minimalist design. Key components include the interchangeable E-mount lens system, a tilting LCD screen for flexible shooting angles, and various control buttons for intuitive operation. The camera's compact size makes it ideal for portability without compromising image quality.

Setup

1. Battery Installation

1. Open the battery cover located at the bottom of the camera.
2. Insert the supplied Lithium Ion battery pack, ensuring the correct orientation as indicated inside the compartment.
3. Close the battery cover until it clicks securely.
4. Charge the battery using the supplied AC adapter and USB cable before first use.

2. Memory Card Insertion

1. Open the memory card slot cover, usually located on the side or bottom of the camera.
2. Insert a compatible memory card (e.g., SD card) into the slot with the correct orientation until it locks into place.
3. Close the memory card slot cover.

3. Attaching the Lens

1. Align the white index mark on the lens with the white index mark on the camera body.
2. Mount the lens by rotating it clockwise until it clicks into place.
3. To detach, press the lens release button on the camera body and rotate the lens counter-clockwise.

4. Initial Settings

Upon first power-on, the camera may prompt you to set the date, time, and region. Follow the on-screen instructions to complete these initial settings.

Operating the Camera

Basic Photography

- **Power On/Off:** Use the ON/OFF switch located on the top of the camera.
- **Shooting Modes:** Rotate the mode dial to select your desired shooting mode (e.g., Intelligent Auto, Program Auto, Shutter Priority, Aperture Priority, Manual).
- **Focusing:** The camera utilizes a Fast Hybrid phase-detection AF system for quick and accurate focusing. Half-press the shutter button to autofocus.
- **Taking a Photo:** Fully press the shutter button to capture an image. The 16.1 MP APS-C sensor ensures high-quality results.
- **Continuous Shooting:** The camera supports a fast 10 fps shooting speed, ideal for capturing fast-moving subjects.

Video Recording

To record video, press the dedicated MOVIE button. Press it again to stop recording. The camera supports high-definition

video recording.

Playback

Press the Playback button (usually marked with a triangle icon) to review your captured photos and videos on the LCD screen.

Connectivity (Wi-Fi & NFC)

The NEX-5T features built-in Wi-Fi and NFC for easy sharing and remote control. Use the Sony PlayMemories Mobile app on your smartphone or tablet to connect to the camera, transfer images, and control shooting functions remotely.

Maintenance

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water.
- **Cleaning the Lens:** Use a lens brush or blower to remove dust. For smudges, use a lens cleaning solution and a microfiber cloth. Avoid touching the lens surface directly.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries frequently to prolong their lifespan.
- **Storage:** When not in use for extended periods, store the camera in a dry, dust-free environment, preferably with a desiccant to prevent mold growth.

Troubleshooting

Problem	Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Check if the battery is depleted.
Images are blurry.	Check focus settings. Ensure sufficient lighting. Use a tripod in low light. Clean the lens.
Memory card error.	Reinsert the memory card. Try a different memory card. Format the card (this will erase all data).
Wi-Fi/NFC connection issues.	Ensure Wi-Fi/NFC is enabled on both camera and smart device. Restart both devices. Check app settings.

Specifications

Feature	Detail
Model Name	NEX 5T
Maximum Webcam Image Resolution	16.1 MP
Photo Sensor Technology	CMOS
Image Stabilization	Hybrid
Supported File Format	JPEG, RAW
Compatible Mountings	Sony E
Batteries Required	1 Lithium Ion
Product Dimensions	4.36 x 1.53 x 2.31 inches
Item Weight	9.7 ounces
Date First Available	September 5, 2013

Warranty and Support

Please note that this is an International Version of the SONY Digital Camera NEX-5T and comes with **No Warranty** from the manufacturer in certain regions. For technical support or service inquiries, please refer to the official SONY support website or contact your local SONY service center. Keep your purchase receipt for any potential service needs. For further assistance, you may visit the [Sony Store on Amazon](#).

