

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nescafé](#) /
- › [Nescafé Gold Blend Barista Coffee Machine User Manual](#)

Nescafé PM9631

Nescafé Gold Blend Barista Coffee Machine User Manual

Model: PM9631 | Brand: Nescafé

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Nescafé Gold Blend Barista coffee machine, Model PM9631. Designed for ease of use, this machine allows you to enjoy a variety of coffee beverages using Nescafé Gold Blend and Nescafé Eco & System Pack refills.

1. SETUP

1.1 Unpacking and Initial Cleaning

Carefully remove all components from the packaging. Before first use, clean the water tank, milk frother, and drip tray with warm, soapy water. Rinse thoroughly and dry.



Figure 1: Front view of the Nescafé Gold Blend Barista coffee machine, showing its compact design and control panel.

1.2 Water Tank Filling

Locate the water tank (capacity: 0.8L) at the back of the machine. Remove the lid and fill with fresh, cold drinking water up to the MAX line. Replace the lid securely.

1.3 Power Connection

Connect the power cord to a suitable 100V 50/60Hz electrical outlet. The machine has a power consumption of 1460W.

2. OPERATING INSTRUCTIONS

2.1 Powering On

Press the power button to turn on the machine. Allow a few moments for the machine to heat up. The indicator light will signal when it is ready for use.

2.2 Preparing Coffee Beverages

The Nescafé Gold Blend Barista offers five coffee menu options with simple button operation:

- **Black Coffee:** Standard black coffee.
- **Black Coffee (Mug Size):** Larger serving of black coffee.
- **Espresso Type Coffee:** A concentrated coffee with a rich crema.
- **Cappuccino:** Coffee with frothed milk.
- **Caffé Latte:** Coffee with steamed milk.

Insert the compatible Nescafé Gold Blend or Nescafé Eco & System Pack refill into the designated compartment. Place your cup on the drip tray and select your desired beverage using the control buttons.

かんたんボタン操作で、 5種類のカフェメニューが楽しめる!

ラテ系メニュー



カプチーノ

ふわふわの泡立ちと、
コーヒーの味と香りを引き
立てるクリーミーな味わいが
楽しめるラテ系コーヒー。



カフェラテ

ふわふわの泡立ちと、
クリーミーで優しい
味わいが楽しめる
ラテ系コーヒー。



300ml
サイズの
カップで

「ネスレ プライト」
スプーン2杯



300ml
サイズの
カップで

「ネスレ プライト」
スプーン2杯

ブラック系メニュー



エスプレッソタイプコーヒー

コクのある味わいと
金色のクレマが特徴。



100ml
サイズの
カップで



ブラックコーヒー

本来の香りをそのまま楽しむことが
できる何も加えないコーヒー。



200ml
サイズの
カップで



ブラックコーヒー(マグサイズ)

たっぷり飲めるマグサイズの
ブラックコーヒー。



250ml
サイズの
カップで

さらに いつもの「バリスタ」の楽しみ広がる!

氷を入れて

アイスカフェメニューも!

フレーバーカフェメニューも!



アイス カフェラテ



アイス エスプレッソ



「ブライト キャラメルラテ用」
または
「ブライト ショコラテ用」
を使うと!

Figure 2: Visual guide to the five coffee menu options available on the Nescafé Gold Blend Barista machine, including latte and black coffee variations.



Figure 3: Examples of coffee beverages that can be prepared with the Nescafé Gold Blend Barista, showcasing different coffee types and milk-based drinks.

2.3 Milk Frothing

The machine is equipped with a milk frother to create fluffy, hot milk for cappuccino and latte. Follow the specific instructions for milk preparation as indicated by the machine's controls for milk-based beverages.

2.4 Compatible Products

This machine is designed for use with Nescafé Gold Blend and Nescafé Eco & System Pack refills. It is not compatible with bagged or bottled eco-system packs, regular ground coffee, or Nescafé Exella products.

ご使用いただけるつめかえ製品

NEW! ママもほっと一息

<p>ネスカフェ ゴールドブレンド エコ&システムパック 70g/110g</p> <p>上品な香りと マイルドな味わい</p>	<p>ネスカフェ ゴールドブレンド カフェインレス エコ&システムパック 60g</p> <p>独自の製法で カフェインを97%カット。 上品な香りとマイルドな味わい</p>	<p>ネスカフェ 香味焙煎 (ココの豊潤 深煎り/まるやか淡麗 中煎り) エコ&システムパック 60g</p> <p>濃厚な香り、深みを かさねたココと 透明感に満ちた後味</p>	<p>ネスカフェ プレジデント エコ&システムパック 75g</p> <p>みずみずしい味わい、 どこまでも深いココと 豊かな香り</p>
--	---	--	---

Figure 4: A selection of Nescafé Gold Blend and Eco & System Pack refills that are compatible with the Barista machine.

2.5 Warm Cup Mode

To enhance the taste of your coffee, the machine is equipped with a warm cup mode. Utilize this feature to pre-warm your cup before brewing.

2.6 Auto Power Off

For energy saving and safety, the machine features an auto power off function that activates approximately 5 minutes after the last use.

3. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your coffee machine. The machine is designed for easy partial decomposition, making cleaning simple.

3.1 Daily Cleaning

- Empty and clean the drip tray after each use.
- Rinse the milk frother components thoroughly after preparing milk-based drinks.
- Wipe down the exterior of the machine with a damp cloth.

3.2 Water Tank Cleaning

Clean the water tank regularly with warm, soapy water to prevent mineral buildup. Rinse well before refilling.

3.3 Descaling

Depending on water hardness, periodic descaling may be necessary. Refer to the manufacturer's website or contact customer support for recommended descaling procedures and products.

4. TROUBLESHOOTING

If you encounter issues with your Nescafé Gold Blend Barista machine, please refer to the following common solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; Auto power off activated.	Ensure power cord is securely plugged in; Press power button to reactivate.
Coffee is not brewing.	Water tank empty; Coffee refill not inserted correctly.	Fill water tank; Ensure coffee refill is properly seated.
Milk frother not producing foam.	Frother components are dirty or blocked.	Clean frother components thoroughly.
Coffee tastes weak or unusual.	Incorrect coffee refill; Machine needs descaling.	Ensure compatible Nescafé refills are used; Perform descaling if necessary.

If the problem persists after attempting these solutions, please contact Nescafé customer support.

5. SPECIFICATIONS

Feature	Detail
Model Number	PM9631
Dimensions (W x D x H)	28.5 cm (11.22 in) x 35.9 cm (14.13 in) x 17.6 cm (6.93 in)
Weight	3.6 kg (7.94 lbs)
Power Supply	100V AC, 50/60Hz
Power Consumption	1460W
Pump Pressure	Up to 15 atm
Water Tank Capacity	0.8 L
Operating Temperature	5 °C ~ 35 °C (41 °F ~ 95 °F)
Included Components	Measuring cup, Milk Frother
Coffee Input Type	Pods (Nescafé Gold Blend, Nescafé Eco & System Pack)
Operation Mode	Fully Automatic
Special Features	Thermal (Warm Cup Mode), Auto Power Off (approx. 5 min)

6. WARRANTY AND SUPPORT

For information regarding product warranty, registration, or technical support, please refer to the documentation included with your purchase or visit the official Nescafé website. Keep your proof of purchase for warranty claims.

Manufacturer: Nescafé

Date First Available: September 4, 2013