



Manuals.plus /

› Nestle /

› Nestle Nescafe Gold Blend Barista Coffee Machine PM9631 User Manual

Nestle PM9631

Nestle Nescafe Gold Blend Barista Coffee Machine PM9631

USER MANUAL

Introduction

This manual provides essential instructions for the safe and efficient operation of your Nestle Nescafe Gold Blend Barista Coffee Machine, model PM9631. Please read this manual thoroughly before first use and keep it for future reference.

The Nescafe Gold Blend Barista PM9631 is a fully automatic drip coffee machine designed for convenient preparation of various coffee beverages at home or in the office. It features a compact design and simple button interface for ease of use.

Setup

1. **Unpacking:** Carefully remove the coffee machine and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Positioning:** Place the machine on a stable, flat, and heat-resistant surface, away from water sources and direct sunlight. Ensure adequate ventilation around the unit.
3. **Initial Cleaning:** Before first use, wipe the exterior of the machine with a damp cloth. Remove the water tank and rinse it thoroughly with fresh water.
4. **Fill Water Tank:** Fill the water tank with fresh, cold drinking water up to the MAX fill line. Do not exceed this line.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the machine's requirements (100 Volts).
6. **First Use Rinse Cycle:** Perform an initial rinse cycle without coffee to clean the internal system. Refer to the 'Operating Instructions' section for how to start a brew cycle.



Image: The Nescafe Gold Blend Barista PM9631 coffee machine, showcasing its design and a coffee being prepared.

Operating Instructions

The PM9631 operates with ground coffee and features a simple button interface for selecting your desired beverage.

1. **Power On:** Press the power button to turn on the machine. Wait for the indicator light to stabilize,

indicating the machine is ready.

2. **Add Coffee:** Open the coffee input compartment and add the appropriate amount of ground coffee. The machine is designed for ground coffee input.
3. **Place Cup:** Position your cup or mug on the drip tray beneath the dispenser.
4. **Select Beverage:** Use the control buttons to select your desired coffee type. The machine offers various options, including:
 - **Cappuccino:** For a frothy coffee with milk.
 - **Caffe Latte:** A creamy coffee beverage.
 - **Espresso Type:** A concentrated coffee shot.
 - **Black Coffee:** Standard black coffee.
 - **Black Coffee (Mug Size):** A larger serving of black coffee.
 - **Iced Coffee Options:** For preparing cold coffee beverages (requires adding ice separately).
5. **Start Brewing:** Press the start button corresponding to your selection. The machine will begin the brewing process.
6. **Enjoy:** Once brewing is complete, carefully remove your cup. The machine will automatically turn off or enter standby mode after a period of inactivity.

かんたんボタン操作で、 5種類のカフェメニューが楽しめる!

ラテ系メニュー



カプチーノ

ふわふわの泡立ちと、
コーヒーの味と香りを引き
立てるクリーミーな味わいが
楽しめるラテ系コーヒー。



カフェラテ

ふわふわの泡立ちと、
クリーミーで優しい
味わいが楽しめる
ラテ系コーヒー。



300ml
サイズの
カップで

「ネスレ ブライト」
スプーン2杯



300ml
サイズの
カップで

「ネスレ ブライト」
スプーン2杯

ブラック系メニュー



エスプレッソタイプコーヒー

コクのある味わいと
金色のクレマが特徴。



100ml
サイズの
カップで



ブラックコーヒー

本来の香りをそのまま楽しむことが
できる何も加えないコーヒー。



200ml
サイズの
カップで



ブラックコーヒー(マグサイズ)

たっぷり飲めるマグサイズの
ブラックコーヒー。



250ml
サイズの
カップで

さらに いつもの「バリスタ」の楽しみ広がる!

氷を入れて

アイスカフェメニューも!

フレーバーカフェメニューも!



アイス
カフェラテ




アイス
エスプレッソ



「ブライト キャラメルラテ用」
または
「ブライト ショコラテ用」
を使うと!

Image: Visual guide to the coffee menu options available on the Nescafe Gold Blend Barista machine.

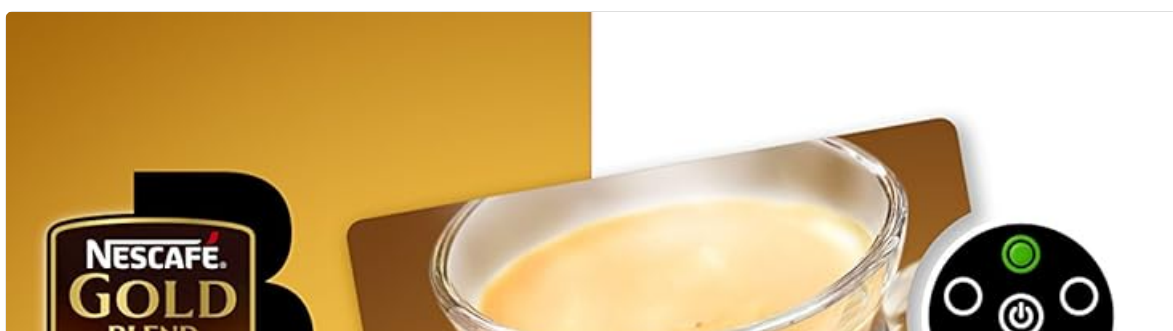

BLEND
Barista
バリスタ®

espresso type

black coffee

black coffee [mug size]

cappuccino

cafe latte



Image: Detailed illustration of various coffee types and their preparation steps using the machine's buttons.

Maintenance

Regular cleaning and maintenance ensure optimal performance and longevity of your coffee machine.

1. **Daily Cleaning:** After each use, rinse the drip tray and coffee dispenser. Wipe the exterior of the machine with a soft, damp cloth.
2. **Water Tank Cleaning:** The water tank should be rinsed daily and cleaned thoroughly with mild detergent and warm water weekly.
3. **Reusable Filter:** The machine uses a reusable filter. Remove and rinse the filter after each use. Clean it thoroughly with warm water and a brush as needed.
4. **Descaling:** Over time, mineral deposits can build up in the machine. Perform descaling regularly according to the hardness of your water. Use a descaling solution specifically designed for coffee machines and follow the product instructions.
5. **Dishwasher Safety: Note:** The machine components are NOT dishwasher safe. Clean all removable parts by hand.



Image: The coffee machine in a setting with prepared beverages, emphasizing the importance of regular cleaning for hygiene and taste.

Troubleshooting

If you encounter issues with your coffee machine, refer to the following common problems and solutions:

- **Machine Does Not Turn On:**
Ensure the power cord is securely plugged into a working electrical outlet. Check if the outlet is receiving power.
- **Coffee Not Brewing:**
Verify that the water tank is filled with water. Ensure the coffee input compartment has ground coffee.

Check if the machine has completed its heating cycle (indicator light stable).

- **Weak Coffee:**

Ensure you are using the correct amount of ground coffee for your desired strength. Check that the reusable filter is clean and not clogged.

- **Excessive Noise During Operation:**

Some operational noise is normal for this type of machine during brewing. If the noise is unusually loud or accompanied by other issues, contact customer support.

- **Water Leaking:**

Check that the water tank is correctly seated and not overfilled. Inspect seals and connections for any visible damage.

For issues not listed here, or if problems persist, please contact Nestle customer support.

Specifications

Feature	Specification
Brand	Nestle
Model Number	PM9631
Manufacturer	Nescafe
Capacity	0.8 Liters
Colour	Red
Coffee Maker Type	Drip Coffee Machine
Style	Modern Red Steel
Recommended Uses	Home, Office
Item Weight	7.94 Pounds
Included Components	Filter
Operation Mode	Fully Automatic
Wattage	1460 watts
Voltage	100 Volts
Human Interface Input	Buttons
Coffee Input Type	Ground
Filter Type	Reusable
Number of Items	1
Dishwasher Safe	No

Warranty and Support

Specific warranty details for the Nestle Nescafe Gold Blend Barista Coffee Machine PM9631 are not

provided in the product data. For warranty information, product registration, or customer support, please refer to the documentation included with your purchase or visit the official Nestle website for your region.

It is recommended to register your product upon purchase to facilitate any future support needs.

申 込 書

下取りをご希望の方は①②③をご記入の上、下取りするマシンと同梱して下記住所にご発送ください。

下取りマシンの送り先住所 〒135-0022 東京都江東区三好2-17-9 株式会社みぼろ 営業業務部 第3グループ 庄子 薫(下取りマシン在中) ※お客様にて、着払い(当社負担)でお送りください。

① ネスレ会員に登録する情報をご記入ください。

※[ネスレ会員利用規約]をウェブサイトにてご確認ください。

「ネスレ会員登録」お客さま情報 記入欄	
フリガナ	性別
お名前 (必須)	<input type="radio"/> 男 <input type="radio"/> 女
生年月日 (必須)	西暦 ※13歳未満の方は登録できません。13歳以上16歳未満の方は保護者の同意が必要となります。 年 月 日
メールアドレス (必須)	@
フリガナ	
ご住所 (必須)	〒
お電話番号 (必須)	() - ※必ず市外局番からご記入ください。
型番 (必須)	
シリアルナンバー (必須)	本体底面プレートのバーコードの下にある右端の9桁もしくは19桁の番号がシリアルナンバーです。 ※マシン登録に必要です。 1234567AB 数字 アルファベット
購入店名 (必須)	
購入年月日 (必須)	年 月 日

ご記入いただきましたお客さまの個人情報は会員情報として厳重に管理いたします。また、製品等の発送、より良い当社製品・サービスの開発や、個人を特定しない統計情報として利用させていただくほか、お客さまへのご連絡やお問い合わせ、ネスレからの情報をお知らせする際に利用させていただく場合があります。なお、当該業務の委託に必要な範囲内で委託先に提供する場合がございます。個人情報をお客さまの許可なく第三者に提供いたしません。

② 購入証明書類を貼ってください。

購入証明書類貼付欄

お買い上げいただいた「ネスカフェ ドルチェ グスト」または「ネスカフェ ゴールドブレンド バリスタ」の購入証明書類をこちらにテープ等で貼付してください。

対象期間

2018年2月1日(木)~4月30日(月)

購入証明書類 a)~c)のいずれかが必要です

- a) お買い上げ明細書原本
- b) 領収書原本またはコピー (購入した日付、店舗、商品名、金額が記載されたもの)
- c) 納品書の原本

③ 下取り対象マシンの商品情報をご記入ください。

商品のメーカー名	
商品の品番、または型番	

Image: An example of a product registration or application form, which may be included with the product in certain markets (e.g., Japan).