

[Manuals.plus](#) /

› [CUCKOO](#) /

› CUCKOO CRP-HZ0683FR Electric Induction Heating Pressure Rice Cooker User Manual

CUCKOO CRP-HZ0683FR

CUCKOO CRP-HZ0683FR Electric Induction Heating Pressure Rice Cooker User Manual

Model: CRP-HZ0683FR | Brand: CUCKOO

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your CUCKOO CRP-HZ0683FR Electric Induction Heating Pressure Rice Cooker. This appliance is designed for cooking various types of rice and other dishes using advanced induction heating and pressure cooking technology. Please read this manual thoroughly before initial use and retain it for future reference.



Image 1.1: Front view of the CUCKOO CRP-HZ0683FR Electric Induction Heating Pressure Rice Cooker, showcasing its control panel and modern design.

2. SAFETY PRECAUTIONS

To prevent injury or damage to the appliance, always adhere to the following safety guidelines:

- Ensure the appliance is placed on a stable, level surface away from heat sources and water.
- Do not immerse the main unit in water or other liquids.
- Always ensure the lid is properly locked before operating the pressure cooking function. The unit features a lid locking device for safety.
- Exercise caution when steam is released from the pressure release valve. Keep hands and face clear. The unit has automatic steam and pressure emission.
- Unplug the appliance from the power outlet when not in use, before cleaning, and during assembly or disassembly of parts.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or

has been damaged in any manner.

- The appliance is equipped with auto temperature control and an alarm for overheating to enhance user safety.

3. PRODUCT COMPONENTS

The CUCKOO CRP-HZ0683FR includes the following components:

- Main Rice Cooker Unit
- Inner Pot (DIASHIELD coated)
- Measuring Cup
- Rice Scoop
- Steam Plate
- Instruction Manual (this document)



Image 3.1: All included components of the CUCKOO CRP-HZ0683FR Rice Cooker, including the main unit, inner pot, measuring cup, rice scoop, and steam plate.



Image 3.2: Close-up view of the X-wall DIASHIELD coated inner pot, designed for optimal heat distribution and non-stick performance.

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for potential future transport or storage.
2. **Initial Cleaning:** Before first use, wash the inner pot, measuring cup, rice scoop, and steam plate with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a flat, stable, and heat-resistant surface. Ensure adequate ventilation around the unit.
4. **Inner Pot Insertion:** Place the clean, dry inner pot into the main unit, ensuring it sits correctly and is level.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The LCD display will illuminate.

5. OPERATING INSTRUCTIONS

The CRP-HZ0683FR features a fully programmable interface with 15 cooking functions, fuzzy logic, and voice navigation in English, Chinese, and Korean.

5.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the water level markings inside the inner pot, corresponding to the amount of rice and desired rice type (e.g., white, brown, mixed).
4. **Close Lid:** Close the lid securely until it locks into place.

5. **Select Function:** Use the 'MENU/SELECTION' button to cycle through the available cooking functions (e.g., White Rice, Brown Rice, GABA Rice, Multi-Cook). The fuzzy logic and intelligent cooking algorithm will detect the grain type and optimize cooking.
6. **Start Cooking:** Press the 'COOK' button to begin the cooking cycle. The induction heating system will start.
7. **Completion:** Once cooking is complete, the cooker will switch to 'KEEP WARM' mode and emit an audible signal.

5.2 Voice Navigation

The appliance provides voice prompts for various operations and status updates. To change the language or adjust the volume, refer to the specific settings menu on the LCD display, typically accessed via the 'SET' button.



Image 5.1: Interior view of the rice cooker with the lid open, showing the stainless steel inner lid and steam cap assembly.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your rice cooker.

1. **Before Cleaning:** Always unplug the power cord and allow the appliance to cool completely.
2. **Inner Pot:** The X-wall diamond coated inner pot is non-stick and non-scratch. Wash it with warm, soapy water using a soft sponge. Avoid abrasive cleaners or metal scrubbers.
3. **Inner Lid and Steam Cap:** The stainless steel inner lid and removable covering can be detached for thorough cleaning. Wash with warm, soapy water, rinse, and dry completely before reattaching. The one-touch cover lid release button facilitates easy removal.
4. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or immerse the unit in water.
5. **Steam Vent:** Ensure the steam vent is clear of any food debris.



Image 6.1: Interior view of the rice cooker with the inner pot removed, showing the heating element area and the removable stainless steel inner lid.

7. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common solutions:

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Insufficient water; incorrect rice type selected; lid not properly closed.	Ensure correct water-to-rice ratio; select appropriate cooking function; verify lid is securely locked.
Rice is too soft/mushy	Too much water; incorrect rice type selected.	Reduce water slightly for next cook; ensure correct cooking function is chosen.
Cooker does not start	Not plugged in; lid not closed; 'COOK' button not pressed.	Check power connection; ensure lid is locked; press 'COOK' button firmly.
Steam leaks from lid	Lid gasket dirty or improperly seated; lid not closed properly.	Clean and properly seat the lid gasket; ensure lid is securely locked.

If the problem persists after attempting these solutions, please contact CUCKOO customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	CUCKOO
Model Name	CRP-HZ0683FR
Capacity	6 Cups
Power Source	Corded Electric
Voltage	110 Volts
Wattage	1455 watts
Color	Black
Material	Steel
Lid Material	Stainless Steel
Item Weight	12.8 Pounds
Product Dimensions	14.8 x 10.6 x 10.1 inches
Special Feature	Alarm, Non-Stick, Programmable
Product Care Instructions	Wipe with Damp Cloth

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official CUCKOO website or contact their customer service department. Details regarding warranty coverage and service procedures are typically provided with your purchase documentation.

Please have your model number (CRP-HZ0683FR) and purchase date available when contacting support.