

## Beko HIC 64403 T

# Beko HIC 64403 T Ceramic Hob User Manual

Model: HIC 64403 T | Brand: Beko

[Overview](#)

[Safety](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &  
Support](#)

## 1. PRODUCT OVERVIEW

---

The Beko HIC 64403 T is a 60 cm built-in ceramic hob featuring four Hi-Light cooking zones and sensitive touch controls. Designed for efficient and safe cooking, it includes nine power levels, a booster function for rapid heating, and a timer for precise cooking control. Safety features such as a child lock, residual heat indicator, automatic shut-off, and overflow protection are integrated for user peace of mind.

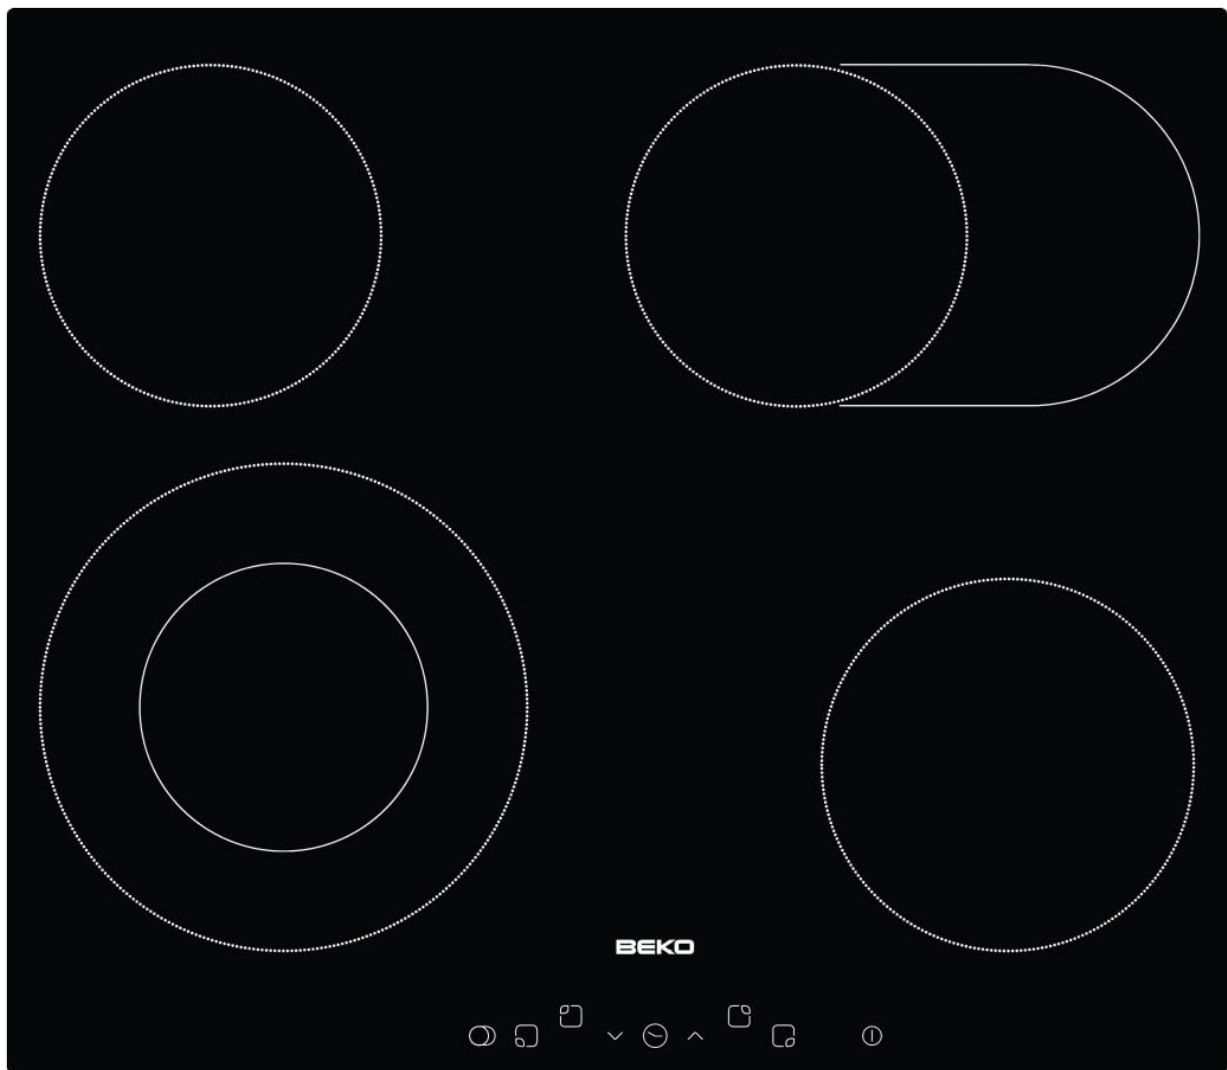 


Figure 1: Top view of the Beko HIC 64403 T ceramic hob, showcasing its four cooking zones and touch control panel.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

Read all instructions carefully before using the appliance. Retain this manual for future reference.

- **Electrical Safety:** Ensure the appliance is correctly installed and earthed by a qualified electrician. Do not operate with wet hands.
- **Hot Surfaces:** The hob surface and cooking zones become very hot during and after use. Avoid touching hot surfaces. Use oven mitts.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Supervise children to ensure they do not play with the appliance. Activate the child lock feature.
- **Overheating:** Do not leave cooking unattended, especially when cooking with fats or oils, as they can ignite.
- **Cleaning:** Disconnect the appliance from the power supply before cleaning. Do not use abrasive cleaners or sharp metal scrapers.
- **Ventilation:** Ensure adequate ventilation around the appliance as specified in the installation instructions.
- **Repairs:** Do not attempt to repair the appliance yourself. Contact authorized service personnel for all repairs.

### 3. INSTALLATION AND SETUP

This ceramic hob is designed for built-in installation. Proper installation is crucial for safe and efficient operation. Refer to the separate installation template provided with the product for precise cutout dimensions.

#### 3.1. Dimensions and Cabinet Preparation

Ensure the kitchen cabinet opening meets the required dimensions for a secure fit and proper ventilation.

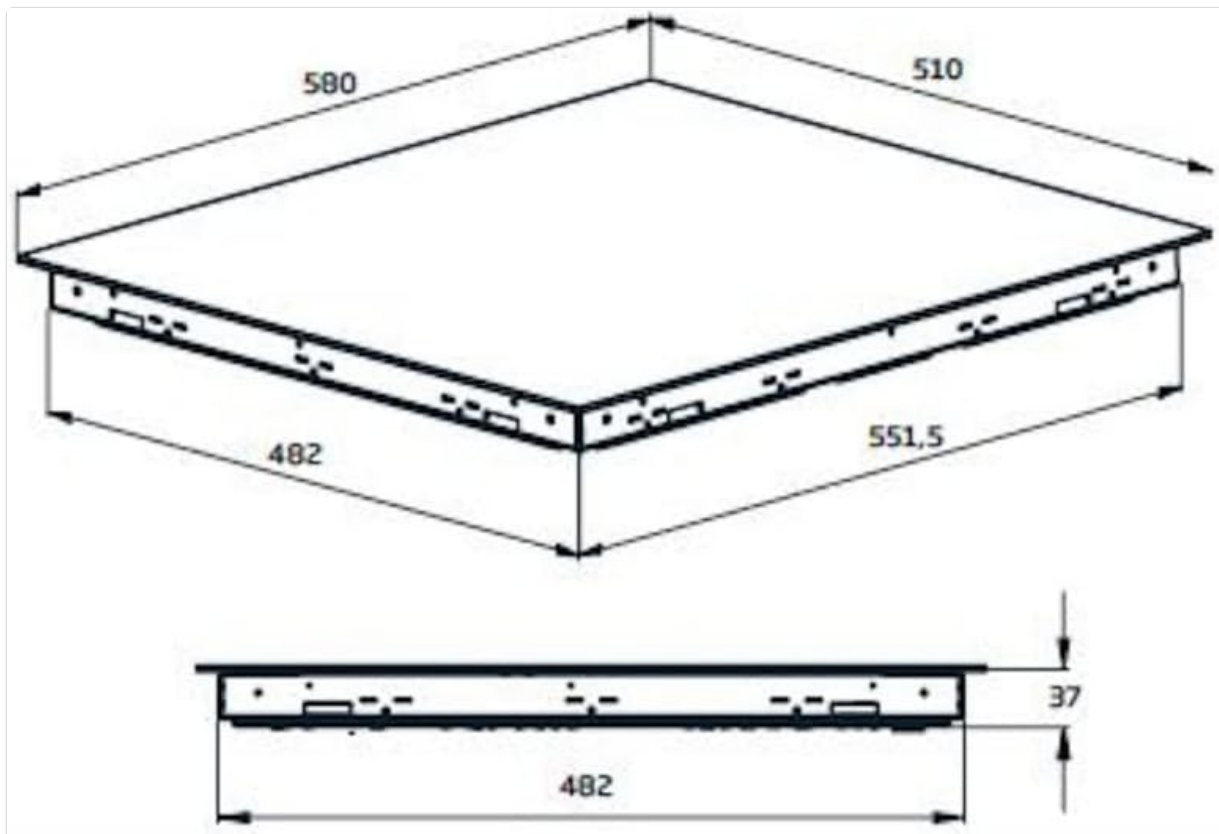


Figure 2: Dimensional drawing of the Beko HIC 64403 T ceramic hob, showing overall and cutout measurements (in mm).

- **Overall Dimensions (L x W x H):** Approximately 57.99 cm x 51 cm x 5.51 cm.
- **Built-in Width:** 560 mm.
- **Built-in Depth:** 490 mm.
- Ensure sufficient clearance for heat dissipation.

#### 3.2. Electrical Connection

The electrical connection must be performed by a qualified electrician in accordance with local wiring regulations and safety standards. The appliance requires a wired power source.

- **Voltage:** 230 Volts.
- **Power:** 2 Watts (Note: This value from specifications seems unusually low for a hob, typically it would be much higher, e.g., 2000W or 2kW per zone. Please refer to the product label for the correct total power rating for electrical connection).
- Ensure the main power supply is disconnected before making any electrical connections.

### 4. OPERATING INSTRUCTIONS

The Beko HIC 64403 T ceramic hob features intuitive touch controls for easy operation.

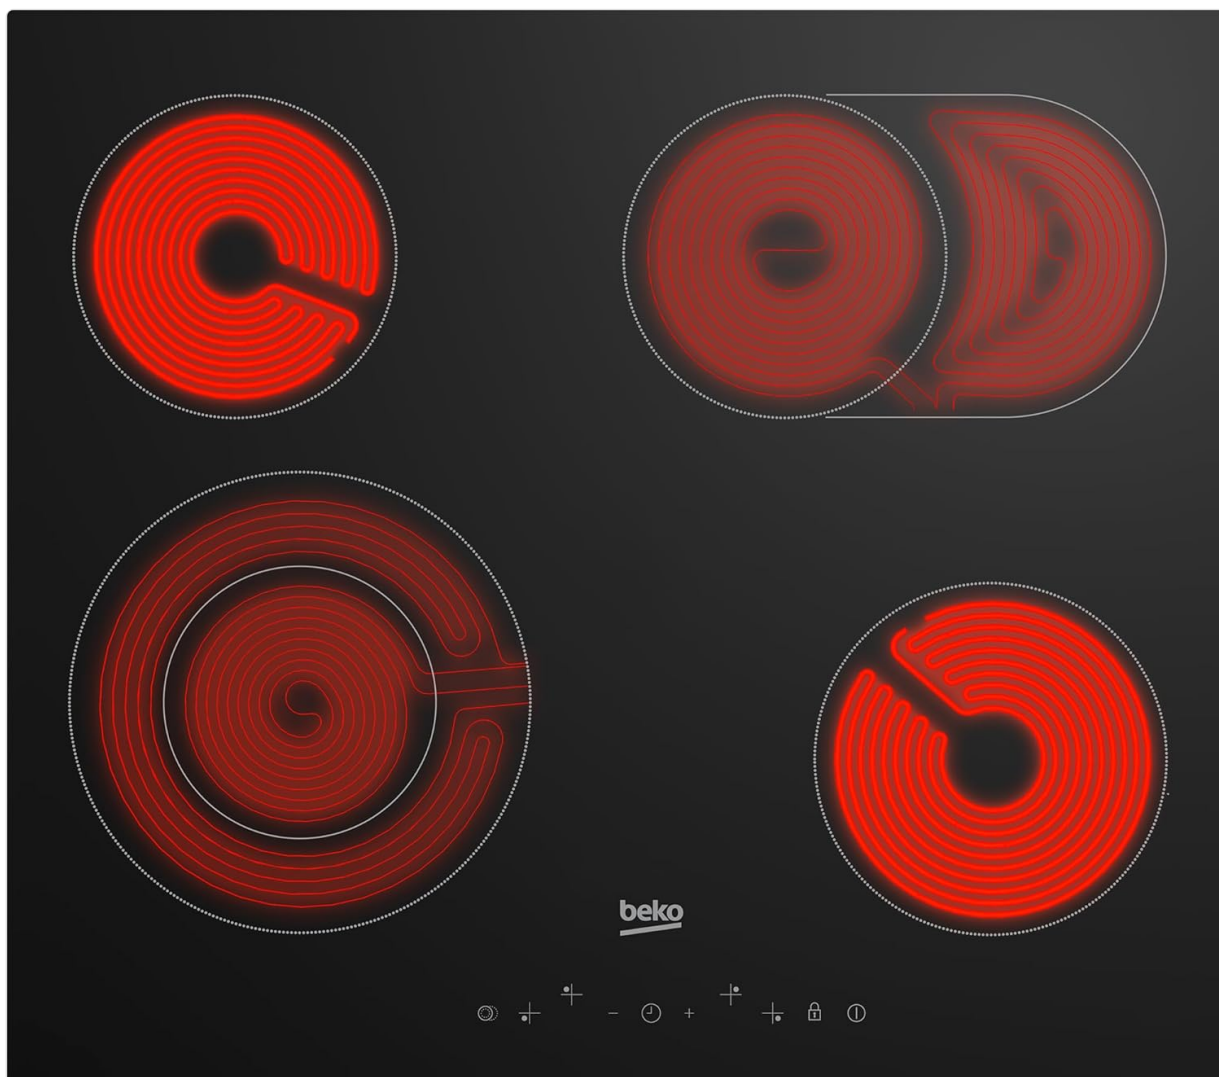


Figure 3: The ceramic hob in operation, showing illuminated heating elements.

#### 4.1. Control Panel Overview

The control panel is located at the front of the hob and consists of touch-sensitive buttons for each function and cooking zone.

#### 4.2. Turning On/Off

- To turn on: Touch the power button (⏻). The display will show '0' for all zones.
- To turn off: Touch the power button (⏻) again.

#### 4.3. Selecting a Cooking Zone and Adjusting Power

- Select the desired cooking zone by touching its corresponding selection button.
- Use the '+' and '-' buttons to adjust the power level from 1 to 9.

#### 4.4. Booster Function

- The hob features 4 booster functions for rapid heating.
- To activate: Select a cooking zone and touch the booster button (often indicated by a 'P' or similar symbol). The zone will heat at maximum power for a set period.

#### 4.5. Timer Function

- The hob has 4 independent timers.
- To set: Select a cooking zone, then touch the timer button (often indicated by a clock symbol). Use '+' and '-' to set the desired cooking time.
- An audible alarm will sound when the timer expires, and the cooking zone will automatically switch off.

#### 4.6. Child Lock

- To activate: Touch and hold the child lock button (often indicated by a padlock symbol) for a few seconds. The control panel will lock, preventing accidental changes.
- To deactivate: Touch and hold the child lock button again.

#### 4.7. Residual Heat Indicator

- After a cooking zone is turned off, an 'H' will appear in its display if the surface is still hot. This indicates that the zone is still hot enough to cause burns.
- Do not touch the cooking zone until the 'H' disappears.

#### 4.8. Automatic Shut-off and Overflow Protection

- The hob will automatically shut off if a cooking zone is left on for an extended period without adjustment.
- In case of liquid overflow onto the control panel, the hob will automatically switch off to prevent damage and ensure safety.

### 5. CARE AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your ceramic hob.

#### 5.1. Cleaning the Ceramic Surface

- Always ensure the hob is cool and disconnected from the power supply before cleaning.
- For light soiling: Wipe with a damp cloth and a small amount of mild dish soap. Rinse and dry thoroughly.
- For stubborn stains or burnt-on food: Use a specialized ceramic hob cleaner and a non-abrasive scraper. Follow the cleaner's instructions.
- Avoid using abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the ceramic surface.

#### 5.2. General Care

- Do not use the hob as a work surface or storage area.
- Avoid dropping heavy or sharp objects on the ceramic surface, as this can cause cracks or breakage.
- Ensure the underside of pots and pans are clean and dry before placing them on the hob to prevent marks.

### 6. TROUBLESHOOTING GUIDE

---

Before contacting service, consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check circuit breaker; Deactivate child lock.
Cooking zone not heating.	Incorrect power level selected; Zone not activated.	Increase power level; Ensure zone is selected and power is set.
Hob switches off automatically.	Overflow on control panel; Extended unattended operation.	Clean control panel and restart; This is a safety feature.
Display shows 'H'.	Residual heat indicator.	This is normal. The zone is still hot. Wait for it to cool down.
Unusual noises during operation.	Normal operation sounds (e.g., fan for cooling electronics).	This is usually normal. If sounds are excessive or unusual, contact service.

## 7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Beko
Model Number	HIC 64403 T
Type	Ceramic Hob (Hi-Light)
Number of Cooking Zones	4
Control Type	Touch Control
Power Levels	9
Booster Function	Yes (4 boosters)
Timer Function	Yes (4 timers)
Child Lock	Yes
Residual Heat Indicator	Yes
Automatic Shut-off	Yes
Overflow Protection	Yes
Surface Material	Vitroc ceramic (Ceramic Glass)
Color	Black
Dimensions (L x W x H)	57.99 cm x 51 cm x 5.51 cm
Built-in Width	560 mm

Feature	Specification
Built-in Depth	490 mm
Weight	8.1 Kilograms
Voltage	230 Volts
Power	2 Watts (Please verify total power on product label for electrical connection)
EAN	8690842309984

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your product or visit the official Beko website. Keep your proof of purchase for any warranty claims.

If you encounter issues not covered in the troubleshooting guide or require professional assistance, please contact Beko customer support or an authorized service center. Contact details can typically be found on the Beko website or in your product documentation.