

SEIKO QHL062Y

Seiko QHL062Y Digital Alarm Clock User Manual

Model: QHL062Y

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Seiko QHL062Y Digital Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

SAFETY INFORMATION

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the clock or subjecting it to strong impacts.
- Use only the specified battery type (AA x 2). Do not mix old and new batteries or different types of batteries.
- Dispose of used batteries according to local regulations.
- Keep the clock away from strong magnetic fields.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Seiko QHL062Y Digital Alarm Clock
- Detachable Stand
- AA Batteries (x2)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the clock's components and controls.

Front View



Image Description: This image displays the front of the Seiko QHL062Y Digital Alarm Clock. The clock features a yellow plastic casing with a rectangular digital LCD display in the center. The display is currently unlit, showing faint digits. The overall design is clean and minimalist.

Side View with Stand



Image Description: This image shows a side profile of the Seiko QHL062Y Digital Alarm Clock. The clock is mounted on its detachable yellow wire stand, which provides an angled viewing position. The yellow plastic body of the clock is visible, along with the simple, functional design of the stand.

Rear View with Controls and Battery Cover



Image Description: This image presents the rear of the Seiko QHL062Y Digital Alarm Clock. On the left side, there is an 'ON/OFF' slide switch for the alarm and a small 'RESET' button below it. A 'DC 5V' input port is also visible. The central part features a removable cover for the battery compartment. On the right, three circular buttons ('+', 'O', '-') are arranged vertically, with 'MODE / SET' printed below them, and a speaker grille at the bottom right.

Rear View with Battery Compartment Open



Image Description: This image shows the back of the clock with the battery compartment cover detached and placed next to it. The open compartment reveals two slots for AA batteries, complete with spring contacts for power connection. The 'ON/OFF' switch, 'RESET' button, 'DC 5V' input, and the control buttons ('+', 'O', '-') are also visible.

Close-up of Rear Controls



Image Description: A detailed close-up of the rear controls of the Seiko QHL062Y Digital Alarm Clock. This view clearly shows the 'ON/OFF' slide switch for the alarm, the small recessed 'RESET' button, and the 'DC 5V' power input jack. To the right, the three circular control buttons are labeled: the top button is '+', the middle is 'O' (likely for mode selection or confirmation), and the bottom is '-'. Below these buttons, 'MODE / SET' is printed, indicating their primary functions.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Slide or gently pry open the cover to expose the battery slots.
3. Insert two AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

Note: The clock can also be powered via a DC 5V adapter (not included) using the DC 5V input port.

2. Attaching the Detachable Stand

1. Align the two prongs of the wire stand with the corresponding slots on the bottom rear of the clock.
2. Gently push the stand into the slots until it clicks into place.
3. Ensure the clock is stable on the stand.

OPERATING INSTRUCTIONS

The clock features three main control buttons on the back: **+**, **O** (Mode/Set), and **-**.

1. Setting Time and Date

1. Press the **MODE / SET** button repeatedly to cycle through display modes (Time, Date, Alarm, Stopwatch, Timer). Stop when the time display is flashing or you enter the setting mode.
2. When the desired segment (e.g., hour, minute) is flashing, use the **+** and **-** buttons to adjust the value.
3. Press **MODE / SET** again to confirm the setting and move to the next segment.
4. Continue until all time and date settings are complete.

2. Setting the Alarm

1. Press the **MODE / SET** button until the alarm time display appears (often indicated by an alarm icon).
2. Use the **+** and **-** buttons to set the desired alarm hour and minute.
3. Press **MODE / SET** to confirm.
4. To activate the alarm, slide the **ON/OFF** switch on the back of the clock to the 'ON' position. An alarm indicator will appear on the display.
5. To deactivate the alarm, slide the **ON/OFF** switch to the 'OFF' position.

3. Snooze Function

When the alarm sounds, press the large button on the top of the clock to activate the snooze function. The alarm will temporarily stop and sound again after approximately 5 minutes.

4. Display Light

Press the large button on the top of the clock to illuminate the display for a few seconds. This is useful for viewing the time in low-light conditions.

5. Calendar Display

Press the **MODE / SET** button until the date (month/day/year) is displayed on the screen.

MAINTENANCE

Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the casing or display.

Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the batteries. Follow the battery installation steps in the 'Setup' section.

TROUBLESHOOTING

- **Display is blank or dim:**

Check battery installation and replace with fresh AA batteries if necessary. Ensure batteries are inserted with correct polarity.

- **Clock not keeping accurate time:**

Replace batteries. If the issue persists, perform a reset by pressing the 'RESET' button on the back with a pointed object (e.g., a paperclip). Note that resetting will erase all settings, and you will need to set the time and date again.

- **Alarm does not sound:**

Ensure the alarm is set correctly and the 'ON/OFF' switch on the back is in the 'ON' position. Check battery level.

- **Buttons are unresponsive:**

Try replacing the batteries. If unresponsive after battery replacement, perform a reset.

SPECIFICATIONS

Brand	SEIKO
Model Number	QHL062Y
Display Type	Digital LCD
Color	Yellow
Power Source	2 x AA Batteries (included) or DC 5V (adapter not included)
Product Dimensions (without stand)	4.3 x 10 x 2.3 cm (1.77"W x 4.09"H - approximate)
Product Dimensions (with stand)	9.9 x 10 x 4.5 cm
Item Weight	0.14 Kilograms (4.9 ounces)
Material	Plastic
Special Features	Beep Alarm, Snooze, Light, Calendar, Detachable Stand

WARRANTY INFORMATION

Specific warranty details for the Seiko QHL062Y Digital Alarm Clock may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for detailed information regarding warranty coverage and terms.

SUPPORT

For further assistance or inquiries, please visit the official SEIKO website or contact their customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

