

OXO 2184800

OXO Salt & Pepper Shaker Set Instruction Manual

INTRODUCTION

This manual provides essential information for the proper use and care of your OXO Salt & Pepper Shaker Set. Designed for both seasoning dishes and precise measurement during cooking, these shakers combine functionality with a sleek design.



Image: The OXO Salt & Pepper Shaker Set, featuring two clear-bodied shakers with stainless steel tops and black accents.

SETUP

Filling the Shakers

1. To fill, twist the stainless steel lid counter-clockwise to remove it from the clear body.
2. The wide mouth opening allows for easy and mess-free refilling with your preferred salt or pepper.
3. Once filled, align the lid and twist clockwise until securely fastened.



Image: A close-up of the OXO Salt & Pepper Shaker, demonstrating the removable lid for refilling.

OPERATING INSTRUCTIONS

Dispensing Salt or Pepper

- **Standard Shaking:** For a light seasoning, simply invert the shaker and gently shake to dispense salt or pepper through the top hole pattern. Each shaker features different hole patterns for optimal dispensing of salt or pepper.
- **Pour Spout:** For larger quantities or precise measuring during cooking or baking, locate the side pour spout. Gently push the lever to open the spout and pour the desired amount. Push the lever back to close the spout securely.

MAINTENANCE

Cleaning Instructions

- The OXO Salt & Pepper Shaker Set is designed for hand washing only.

- Disassemble the shaker by twisting off the lid.
- Wash both the clear body and the lid with warm, soapy water.
- Rinse thoroughly and allow all parts to dry completely before reassembling or refilling.
- Do not use abrasive cleaners or scrubbers, as these may damage the finish.

TROUBLESHOOTING

Common Issues

- **Clogging:** If the shaker holes become clogged, ensure the contents are dry. Humidity can cause salt or pepper to clump. Gently tap the shaker or use a small, dry brush to clear the holes.
- **Difficulty Dispensing:** Check that the lid is securely fastened and the pour spout is fully open if using that feature. Ensure the shaker is not overfilled, which can impede flow.

SPECIFICATIONS

Product Dimensions	4.2 x 2.4 x 4.9 inches
Item Weight	7.2 ounces
Manufacturer	OXO
Model Number	2184800
Material	Stainless Steel accents, Clear BPA-free body
Care Instructions	Hand wash only

WARRANTY AND SUPPORT

For specific warranty information or product support, please refer to the documentation included with your purchase or visit the official OXO website. Keep your proof of purchase for any warranty claims.