

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Eureka Forbes](#) /
- › [Eureka Forbes Easy Clean Plus 800-Watt Vacuum Cleaner User Manual](#)

Eureka Forbes GFCDFECLP00000

Eureka Forbes Easy Clean Plus 800-Watt Vacuum Cleaner User Manual

Brand: Eureka Forbes | **Model:** GFCDFECLP00000

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Eureka Forbes Easy Clean Plus 800-Watt Vacuum Cleaner. Please read these instructions carefully before using the appliance and retain them for future reference. This compact and lightweight vacuum cleaner is designed for indoor use, offering both suction and blower functions for versatile cleaning.

SAFETY INFORMATION

- Do not operate the vacuum cleaner continuously for more than 10-15 minutes to prevent overheating and ensure product longevity.
- The appliance is equipped with a thermal cut-off mechanism that automatically switches off the device if it overheats. Allow the unit to cool down before resuming operation.
- Ensure the power supply matches the voltage specified on the appliance (230 V AC, 50 Hz).
- Keep hands, feet, loose clothing, and hair away from moving parts and openings during operation.
- Do not vacuum liquids, hot ashes, burning cigarettes, or sharp objects.
- Always unplug the appliance from the power outlet before cleaning or performing maintenance.
- Do not use the appliance if the power cord or plug is damaged.

PRODUCT COMPONENTS

Your Eureka Forbes Easy Clean Plus vacuum cleaner comes with the following components:

- Vacuum Cleaner Unit
- Flexible Hose Pipe
- 2 Extension Tubes
- Carpet/Floor Brush
- Crevice Nozzle

- Upholstery Brush
- Multi-purpose Brush
- Blower Adaptor
- Shoulder Strap
- User Manual
- Warranty Card
- Demo CD (for illustrative purposes)



Figure 1: All components included with the Eureka Forbes Easy Clean Plus 800-Watt Vacuum Cleaner.

Accessories



ACCESSORY ADAPTER
Connect Other Accessories



MULTI-PURPOSE BRUSH
For Crevices, Corners, and Table Tops



FLEXIBLE HOSE
Flexible Cleaning

Figure 2: Detailed view of the accessory adapter, multi-purpose brush for crevices and table tops, and flexible hose for cleaning.

Accessories



BLOWER ADAPTER

For Using Blowing Function



SHOULDER STRAP

For Easy Handling

Figure 3: Detailed view of the blower adapter for using the blowing function and the shoulder strap for easy handling.

Accessories

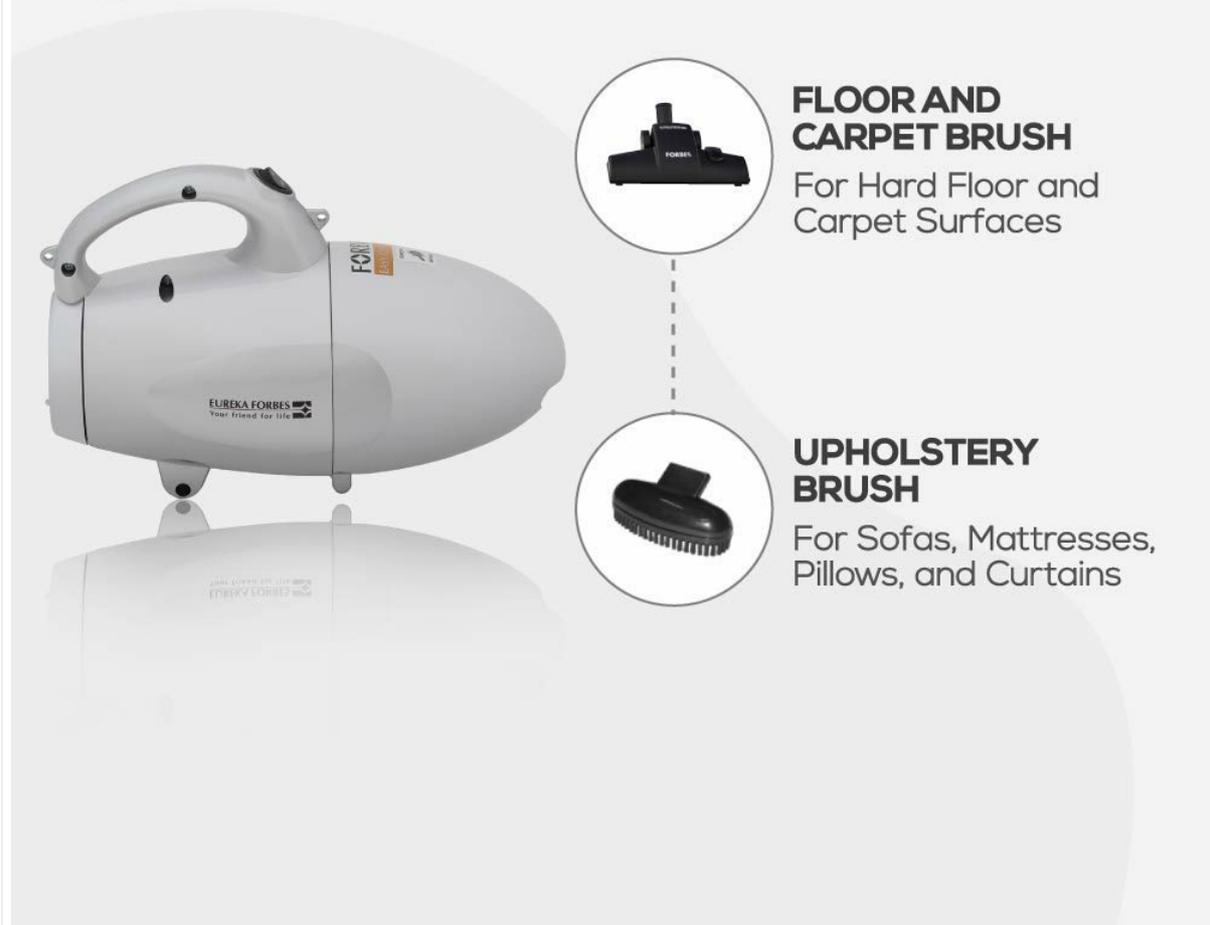


Figure 4: Detailed view of the floor and carpet brush for various floor surfaces, and the upholstery brush for sofas, mattresses, pillows, and curtains.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Accessory Attachment:**
 - For suction, attach the flexible hose to the suction opening at the front of the main unit.
 - For blowing, attach the flexible hose to the blower opening at the rear of the main unit.
 - Connect the desired cleaning accessory (e.g., carpet/floor brush, crevice nozzle, upholstery brush, multi-purpose brush) to the end of the flexible hose or extension tubes.
 - Use the extension tubes to reach higher areas or for floor cleaning with the carpet/floor brush.
3. **Shoulder Strap:** Attach the shoulder strap to the designated hoops on the handle of the vacuum cleaner for convenient carrying during use.
4. **Power Connection:** Ensure the appliance is switched off before plugging the 18-foot power cord into a suitable 230V AC, 50Hz power outlet.

OPERATING INSTRUCTIONS

General Operation

1. After proper setup, switch on the appliance using the on/off switch, typically located for thumb access.
2. Move the cleaning attachment over the surface to be cleaned.
3. Observe the 10-15 minute continuous usage limit to prevent overheating. Allow the unit to cool down if it switches off automatically.
4. After use, switch off the appliance and unplug it from the power outlet.

Suction Function

The suction function is ideal for collecting dust and debris from various surfaces. Ensure the flexible hose is connected to the front suction port. The 800W motor provides a suction pressure of 1600 mm of water column, capable of picking up small particles.

Blower Function

To use the blower function, attach the flexible hose to the rear blower port. This function is useful for dislodging dust from hard-to-reach areas, blowing leaves, or drying surfaces. The maximum airflow is 14 litres per second.

Your browser does not support the video tag.

Video 1: An overview of the Eureka Forbes Easy Clean Plus 800-Watt Vacuum Cleaner, showcasing its components and functions. This video provides a visual guide to the product's features and accessories.

MAINTENANCE

- **Dust Bowl Emptying:** This vacuum cleaner is bagless and collects dust in its permanent dust bowl. Empty the dust bowl regularly to maintain optimal suction performance.
- **Filter Cleaning:** The appliance uses a synthetic/cloth filter. Clean the filter periodically according to the instructions in the full user manual to ensure efficient operation and prevent clogging.
- **Exterior Cleaning:** Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the vacuum cleaner in a cool, dry place when not in use. Its compact size (280 mm x 140 mm x 180 mm) and lightweight design (1.8 kg) make storage easy.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common solutions:

- **Appliance stops during use:** This is likely due to the thermal cut-off mechanism activating. Unplug the unit and allow it to cool down for at least 30 minutes before restarting. Ensure the dust bowl is not full and the filter is clean.
- **Reduced suction power:** Check if the dust bowl is full and needs emptying. Inspect the filter for clogs and clean it if necessary. Ensure all hose and accessory connections are secure and free from blockages.
- **Unusual noise:** Turn off and unplug the vacuum cleaner. Check for any foreign objects lodged in the hose, nozzles, or main unit.
- **Attachments coming loose:** Ensure attachments are firmly twisted or pushed into place.

For further assistance, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Eureka Forbes
Model Name	Easy Clean Plus 800-Watt
Model Number	GFCDFECLP00000
Function	Suction & Blower
Motor Horsepower	800 Watts
Voltage	230 V AC, 50 Hz
Maximum Suction	1600 mm of water column
Air Flow	14 Litres / Second
Dust Capacity	0.5 Litres
Filter Type	Cloth / Synthetic
Power Cord Length	Approx. 18 feet (5 meters)
Item Weight	1.8 Kilograms
Dimensions (L x W x H)	25 cm x 12.6 cm x 17.5 cm (approx. 9.8L x 9.8W x 6.9H inches)
Usage Area	Indoor
Special Feature	Lightweight, Portable

WARRANTY AND SUPPORT

Your Eureka Forbes Easy Clean Plus 800-Watt Vacuum Cleaner comes with a **1-year warranty** from the date of purchase. This warranty covers defects arising from faulty designs, workmanship, and materials. For warranty claims, technical support, or any product-related inquiries, please refer to the Warranty Card included in your package or contact Eureka Forbes customer service.

Customer Support Contact: 18602661177

This product does not require installation by a technician. For any assistance, please use the provided contact number.