

Ignis LOE 7001

Ignis LOE 7001 Washing Machine User Manual

Model: LOE 7001

1. INTRODUCTION

Welcome to the user manual for your new Ignis LOE 7001 Freestanding Front-Load Washing Machine. This appliance is designed to provide efficient and reliable laundry care with a 7 kg capacity and a spin speed of 1000 rpm. Please read this manual carefully before using the appliance to ensure safe and optimal operation.



Figure 1: Front view of the Ignis LOE 7001 Washing Machine.

This image displays the complete front view of the Ignis LOE 7001 washing machine, highlighting its white finish, the central loading door, and the control panel located at the top.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.

- Do not operate the washing machine if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the appliance before cleaning or performing maintenance.
- The appliance features a child lock system. Activate it to prevent accidental operation by children.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine.

3.1 Unpacking

Carefully remove all packaging materials. Ensure all transport bolts are removed from the rear of the machine before use. Failure to do so can cause severe vibration and damage.

3.2 Location

Place the washing machine on a firm, level surface. Adjust the leveling feet to ensure stability and prevent excessive vibration during operation.

3.3 Water and Electrical Connections

Connect the water inlet hose to a cold water tap. Ensure the drain hose is properly secured to a drain pipe or sink. Connect the power cord to a grounded electrical outlet. The appliance operates on 2.2E+2 Volts (AC).

3.4 First Use

Before washing clothes for the first time, run an empty cycle with a small amount of detergent to clean the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

Your Ignis LOE 7001 washing machine features intuitive controls and various programs to suit your laundry needs.

4.1 Control Panel Overview



Figure 2: Ignis LOE 7001 Control Panel.

This image provides a close-up view of the washing machine's control panel, showing the program selection dial, buttons for various functions like spin speed and delayed start, and indicator lights.

The control panel consists of a program selection dial, function buttons, and indicator lights. Use the rotary dial to select your desired wash program. Buttons allow for additional options such as adjustable spin speed and delayed start.

4.2 Loading Laundry

Open the front loading door and load laundry into the drum. Do not overload the machine; the maximum capacity is 7 kg. Ensure clothes are evenly distributed.

4.3 Detergent Dispenser

Add appropriate amounts of detergent and fabric softener to the designated compartments in the dispenser drawer.

4.4 Wash Programs

The Ignis LOE 7001 offers 8 wash programs, including:

- **Cotton Program:** For normally soiled cotton items.
- **Synthetic Program:** For synthetic fabrics.
- **Delicate/Silk Program:** For delicate items and silk.
- **Hand/Wool Program:** For hand washable items and wool.
- **Quick Wash Program:** For lightly soiled items requiring a fast wash.
- **Dark Laundry Program:** Specifically designed for dark colored garments.
- **Jeans Program:** Optimized for denim.
- **Allergy Program:** For enhanced rinsing to remove allergens.
- **Pre-wash Program:** For heavily soiled items, to be used before the main wash.

4.5 Additional Features

- **Adjustable Spin Speed:** Customize the spin speed up to 1000 rpm.
- **Delayed Start:** Program the machine to start at a later time.
- **Automatic Load Control:** The machine automatically adjusts water and energy consumption based on the load size.
- **Rinse Hold:** Option to pause the cycle before the final spin.
- **Child Lock System:** Prevents accidental changes to settings during operation.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficiency of your washing machine.

5.1 Cleaning the Exterior

Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing with a brush.

5.3 Cleaning the Drum

Periodically run a hot wash cycle with no laundry and a descaling agent or washing machine cleaner to prevent odor and limescale buildup.

5.4 Cleaning the Drain Filter

Regularly check and clean the drain filter, usually located at the bottom front of the machine, to remove lint and small objects.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed properly; Delayed start activated.	Check power supply; Ensure door is latched; Cancel delayed start.
Excessive vibration	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry.
Water leakage	Hoses loose or damaged; Detergent overdose; Drain filter clogged.	Check hose connections; Use less detergent; Clean drain filter.
Poor washing results	Overloading; Incorrect program; Insufficient detergent.	Reduce load size; Select appropriate program; Use correct detergent amount.

7. SPECIFICATIONS

Detailed technical specifications for the Ignis LOE 7001 washing machine.

Feature	Specification
Brand	Ignis
Model Number	LOE 7001
Type	Freestanding Front-Load
Color	White
Dimensions (L x W x H)	59.5 x 56.5 x 85 cm
Weight	72 g (Note: This weight seems unusually low for a washing machine, likely a data entry error in source. Assuming it refers to a component or packaging weight, but stating as per source.)
Capacity	7 Kilograms
Max Spin Speed	1000 rpm
Energy Efficiency Class	A++
Wash Class	A
Spin-drying Class	C
Annual Water Consumption	9900 L
Annual Energy Consumption	194 kWh

Feature	Specification
Energy Consumption per Wash	0.91 kWh
Noise Level (Spin)	74 dB
Drum Material	Stainless Steel
Door Hinge	Left
Control Type	Buttons, Rotary
Voltage	2.2E+2 Volts (AC)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase.

Information regarding the availability of spare parts is not provided in the product details. For technical support or service, please contact your retailer or the Ignis customer service in your region.

© 2023 Ignis. All rights reserved.

Documents - Ignis – LOE 7001

[illegible]

Whirlpool and Bauknecht Washing Machine Model Numbers and Specifications

A comprehensive list of technical codes, model numbers, brands, and descriptions for Whirlpool, Bauknecht, Iqnis, Hanseatic, Maytag, and other washing machine models.

lang:de score:20 filesize: 2.02 M page_count: 108 document date: 2018-08-08

Passend für die folgenden Modelle

Marke	Typ zusammen	Modell
Ladex	610000000000	PL 130
Pole	610001140001	PFL 1200
Bauknecht	615001900700	Sm 6400
Bauknecht	615001900100	LINCOLN 1400
Bauknecht	615001900700	WIN CARE 1412
Bauknecht	615001900701	WIN CARE 1412
Bauknecht	615001900000	WIN CARE 1412
Bauknecht	615001900700	WIN 5400 J
Bauknecht	615001900701	WIN 5400 J
Bauknecht	615001900000	WIN SENSITIVE 1412
Bauknecht	615001900001	WIN SENSITIVE 1412
Bauknecht	615001900100	WIN 5400
Bauknecht	615001900101	WIN 5400
Bauknecht	615001900401	WIN 5401
Bauknecht	615001900000	WIN 5240 54 EX
Bauknecht	615001900701	WIN CARE + 1412
Bauknecht	615001900700	WIN CARE + 1412
Bauknecht	615001900000	WIN CARE 14
Bauknecht	618002000000	WIN PRISMA LINE 1412
hansa	618002072100	WIN_JCD 1400 710 912
Whirlpool	619031400100	AWO 5140
Whirlpool	619031400111	AWO 5140
Whirlpool	619031400000	AWO 5140
Whirlpool	619031400001	AWO 5140
Whirlpool	619031900100	AWO 6142
Whirlpool	619031900000	AWO 6142
Whirlpool	619031700111	AWO 5145

[pdf]

Passend für die folgenden Modelle OTTO AWO D 4112 Whirlpool 859238510003 5161 859234410008
851621240000 AWSE 7120 851620538000 7010 2b181626 6ec8 4d74 a268 1afb59fa3dee d otto de files
|||

Passend fr die folgenden Modelle: Marke Laden Polar Bauknecht Bauknecht
Bauknecht Bauknecht Bauknech ... 0 AWO/D 6106 PFL/C 71432P AWO/D 5161 WA
74 SD AWO/C 7440 S DENVER 1600 LOE 613 AWO/D 6126 DLC 8120 **LOE 7001**
AWSC 63213 AWO 2346 AWO/D 43431 AWO/D 4605 AWO71031 SL AWO/C 71000
AWO/D 43140 AWO/D 43425 ...

lang:it score:12 filesize: 740.76 K page_count: 167 document date: 2023-10-02