

FILCO FFBT67MRL/EB

FILCO Majestouch MINILA Air Red Axis 67-Key Bluetooth Mechanical Keyboard User Manual


Model: FFBT67MRL/EB

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your FILCO Majestouch MINILA Air Red Axis 67-Key Bluetooth Mechanical Keyboard. Please read this manual thoroughly before using the product to ensure proper function and longevity.

CHERRY MX 赤軸

1億回以上
の押下
耐久性

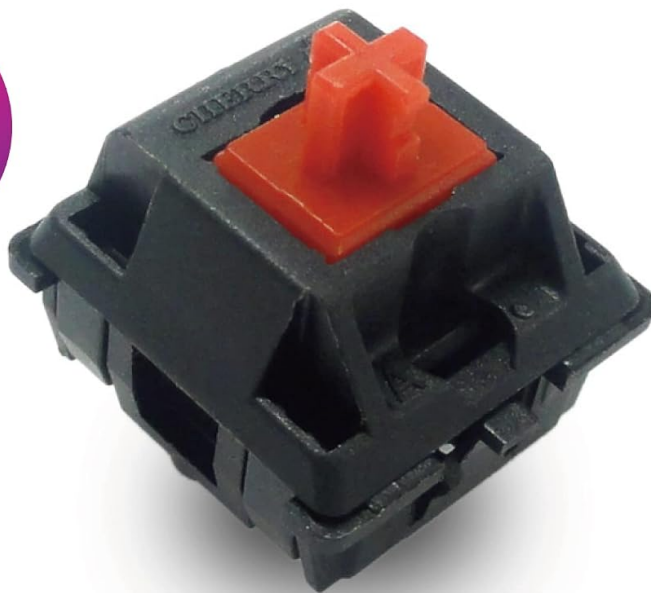

クリック感	押下圧	ストローク	接点
なし	45cN	4.0mm	2.0mm

- ・ キーを押し下げるほどスイッチが重くなっていくリニアストロークタイプ
- ・ 滑らかな軽いキータッチでさくさく入力できます
- ・ 静かにタイピングしたい方にも人気のスイッチです

Image: The FILCO Majestouch MINILA Air Red Axis 67-Key Bluetooth Mechanical Keyboard, showcasing its compact design.

SAFETY INFORMATION

- Do not expose the keyboard to liquids or excessive moisture.
- Avoid extreme temperatures.
- Do not attempt to disassemble or modify the keyboard. This may void the warranty and cause damage.
- Keep out of reach of small children.

SETUP

1. Battery Installation

The keyboard requires two AA batteries for operation. These are included as trial batteries.

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert two AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: The underside of the keyboard showing the battery compartment and DIP switches.

2. Bluetooth Pairing

The keyboard uses Bluetooth 3.0 Class 2 (HID profile compliant) for wireless connection. It can store up to 3 paired devices.

1. Ensure the keyboard is powered on using the switch on the underside.
2. Activate Bluetooth on your device (PC, tablet, game console).
3. On the keyboard, press and hold the **Fn** key and one of the **Q**, **W**, **E** keys simultaneously for 3 seconds to enter pairing mode for that profile. The corresponding indicator light will flash.
4. On your device, search for Bluetooth devices and select "FILCO MINILA Air" from the list.
5. If prompted, enter the pairing code displayed on your screen using the keyboard and press **Enter**.
6. Once paired, the indicator light on the keyboard will stop flashing and remain solid.
7. To switch between paired devices, press **Fn + Q**, **Fn + W**, or **Fn + E**.



Image: A diagram showing the keyboard's ability to connect to and switch between three Bluetooth devices.

3. DIP Switch Settings

The keyboard features DIP switches on the underside to customize key functions. By default, all DIP switches are OFF. Refer to the diagram below for switch functions.



Image: A close-up view of the DIP switches located on the bottom of the keyboard.

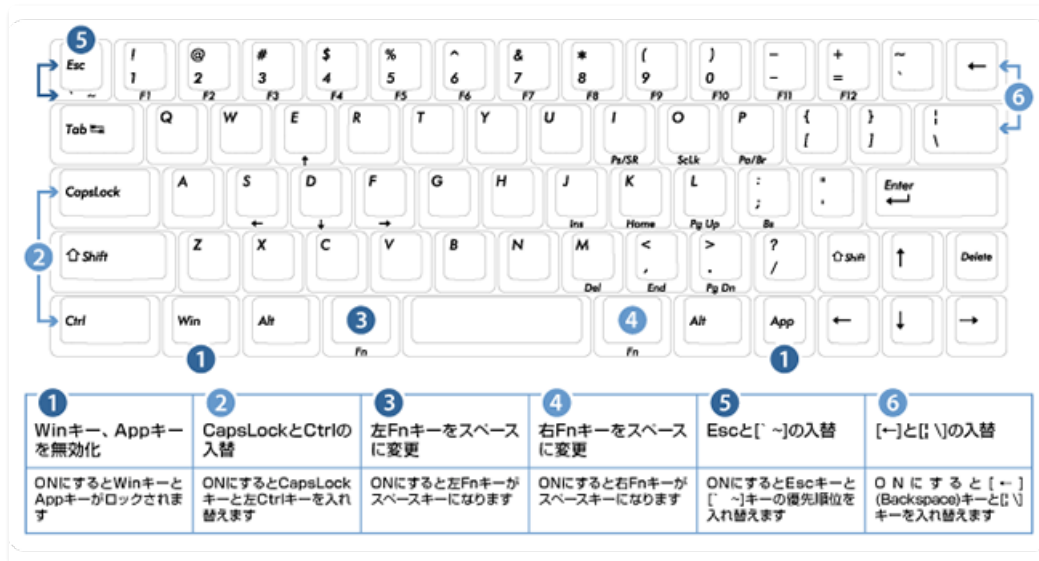


Image: Diagram detailing the functions of each DIP switch on the keyboard.

- **DIP Switch 1:** Disables Win Key and App Key.
- **DIP Switch 2:** Changes CapsLock key to Ctrl key.
- **DIP Switch 3:** Changes Left Fn key to Space key.
- **DIP Switch 4:** Changes Right Fn key to Space key.
- **DIP Switch 5:** Swaps Esc and [~] keys.
- **DIP Switch 6:** Swaps [←] and [!] keys.

OPERATING INSTRUCTIONS

Key Functions

The FILCO Majestouch MINILA Air features a compact 67-key English layout with a double Fn key design, allowing for efficient access to various functions.



Image: The FILCO Majestouch MINILA Air keyboard, highlighting the dual Fn keys for enhanced functionality.

- **Fn Key Combinations:** Many keys have secondary functions accessible by holding down one of the **Fn** keys and pressing the desired key. These functions are typically indicated on the keycaps.
- **Arrow Keys:** Dedicated arrow keys are available for navigation.
- **Backspace/Delete:** The keyboard includes a dedicated Backspace key.

Key Layout

The keyboard uses a US English 67-key QWERTY layout. Familiarize yourself with the key positions for optimal typing.



Image: A detailed diagram of the FILCO Majestouch MINILA Air 67-key US English layout.

MAINTENANCE

Cleaning

- Use a soft, dry cloth to wipe the surface of the keyboard.
- For dust and debris between keys, use compressed air or a small brush.
- Do not use harsh chemicals or abrasive cleaners.

Keycap Replacement

Your keyboard comes with replacement keycaps and a FILCO Key Puller tool.

1. Use the provided Key Puller to gently remove the desired keycap by hooking it onto the keycap and pulling upwards.
2. Align the new keycap with the switch stem and press down firmly until it clicks into place.



Image: The FILCO Key Puller tool shown with several replacement keycaps.

TROUBLESHOOTING

Keyboard Not Connecting via Bluetooth

- Ensure the keyboard is powered on and has fresh batteries.
- Verify Bluetooth is enabled on your device.
- Try re-pairing the keyboard by following the Bluetooth Pairing steps in the Setup section.
- Check if the keyboard is already connected to another device. Switch profiles using **Fn + Q/W/E**.
- Move the keyboard closer to your device to rule out range issues.
- Restart both the keyboard (power off/on) and your device.

Keys Not Responding or Stuck

- Check for any physical obstructions under the keycaps. Use the Key Puller to remove keycaps and clean underneath.
- Ensure the keyboard is fully charged or has fresh batteries.
- If experiencing repeated characters or input delays, this might indicate Bluetooth interference. Try to minimize other wireless devices operating nearby or move to a less congested area.
- If the issue persists, try resetting the keyboard (refer to the manufacturer's website for specific reset procedures if not covered here).

SPECIFICATIONS

Brand	FILCO
Model Number	FFBT67MRL/EB
Key Switch	Cherry MX Red (Linear)

Number of Keys	67
Key Layout	US English QWERTY
Key Pitch	19mm
Key Stroke	4mm
Interface	Bluetooth 3.0 Class 2 (HID profile compliant)
Compatible Devices	PC, Laptop, Tablet, Game Console
Dimensions (L x W x H)	29.7 x 12.4 x 4.0 cm (4.6 cm with stand)
Weight	680g (excluding batteries)
Color	Red Axis
Special Feature	Double Fn key, Key code change function (DIP switches)
Included Components	AA batteries (x2), Replacement keycaps, FILCO Key Puller



Image: A close-up view of the Cherry MX Red mechanical switch, known for its linear feel.

WARRANTY INFORMATION

Your FILCO Majestouch MINILA Air keyboard comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact FILCO customer service through their official website or the retailer where you purchased the product. For more information, visit the [FILCO Brand Store on Amazon](#).