

Rosieres RF462IN

Rosieres RF462IN Electric Oven User Manual

Model: RF462IN

INTRODUCTION

Thank you for choosing the Rosieres RF462IN Electric Oven. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions carefully before installation and operation, and keep them for future reference.

The Rosieres RF462IN is a 58-liter electric oven designed for reliable performance and ease of use, featuring a stainless steel finish and 2000 watts of power.

SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the oven is connected to a properly grounded electrical outlet with the correct voltage (230 Volts) and current rating. Do not use extension cords.
- **Hot Surfaces:** The oven and its accessories become very hot during operation. Always use oven mitts when handling hot items. Keep children and pets away from the appliance.
- **Ventilation:** Ensure adequate ventilation around the oven as specified in the installation instructions. Do not block ventilation openings.
- **Cleaning:** Disconnect the oven from the power supply before cleaning. Use only recommended cleaning agents and methods.
- **Flammable Materials:** Do not store flammable materials in or near the oven.
- **Supervision:** Never leave the oven unattended during operation, especially when grilling or using high temperatures.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your oven. It is recommended that installation be performed by a qualified technician.

1. Unpacking

Carefully remove all packaging materials from the oven. Inspect the oven for any signs of damage during transit. If damage is found, do not install or operate the oven and contact your retailer immediately.



Figure 1: Front view of the Rosieres RF462IN Electric Oven. This image illustrates the appliance's stainless steel exterior and general design.

2. Placement and Ventilation

Install the oven into a suitable cabinet opening according to the provided installation template (not included in this manual). Ensure there is adequate space for ventilation around the appliance. Do not obstruct the air vents.

3. Electrical Connection

Connect the oven to a dedicated 230 Volt, 2000 Watt electrical circuit. The electrical connection must comply with local electrical codes. A qualified electrician should perform this connection.

4. Initial Cleaning

Before first use, wipe the interior of the oven with a damp cloth and mild detergent. Run the oven empty at a high temperature (e.g., 200°C) for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

OPERATING INSTRUCTIONS

Familiarize yourself with the oven's controls before cooking.

1. Control Panel Overview

The Rosieres RF462IN oven typically features control knobs for temperature selection and cooking function, along with a timer. Refer to the specific markings on your appliance for exact functions.

- **Function Selector Knob:** Used to choose the desired cooking mode (e.g., conventional bake, fan-assisted, grill).
- **Temperature Selector Knob:** Used to set the desired cooking temperature in degrees Celsius.
- **Timer/Clock:** May include a minute minder, cooking duration timer, or delayed start function.

2. Preheating the Oven

For best cooking results, preheat the oven to the desired temperature before placing food inside. Turn the function selector to the desired cooking mode and the temperature selector to the required temperature. The oven indicator light will illuminate and turn off once the set temperature is reached.

3. Cooking Functions

Your oven may include various cooking functions. Common functions include:

- **Conventional Bake:** Heat from top and bottom elements, suitable for roasting and baking.
- **Fan-Assisted Bake:** Even heat distribution for multi-level cooking.
- **Grill:** Intense heat from the top element, ideal for browning and toasting.
- **Defrost:** Gentle air circulation without heat for thawing frozen foods.

Select the appropriate function based on your recipe requirements.

4. Using the Timer

To set a cooking duration or a minute minder, refer to the specific instructions for your oven's timer type. Typically, you rotate the timer knob to the desired time. Some models may have electronic timers with buttons for setting.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Rosieres RF462IN oven.

1. Exterior Cleaning

Wipe the stainless steel exterior with a soft cloth dampened with warm, soapy water. For stubborn marks, use a non-abrasive stainless steel cleaner. Always wipe in the direction of the grain. Do not use abrasive cleaners or scouring pads.

2. Interior Cleaning

Allow the oven to cool completely before cleaning. Remove all racks and accessories. Wipe the interior surfaces with a damp cloth and mild detergent. For baked-on food, use a specialized oven cleaner, following the product's instructions carefully. Ensure all cleaner residue is removed before using the oven again.

3. Replacing the Oven Light

Ensure the oven is disconnected from the power supply. Unscrew the protective glass cover and then the old bulb. Replace with a new oven-specific bulb (check wattage and type in specifications, typically heat-resistant up to 300°C). Reattach the glass cover.

4. Care for Accessories

Oven racks and trays can be washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before returning them to the oven.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Oven does not heat.	No power supply; circuit breaker tripped; oven not turned on.	Check power connection; reset circuit breaker; ensure oven controls are set correctly.
Oven light not working.	Bulb is faulty or loose.	Replace the oven light bulb (see Maintenance section).
Uneven cooking.	Incorrect temperature setting; food placed too close to elements; blocked vents.	Verify temperature; ensure proper rack placement; check for obstructions.
Excessive smoke during cooking.	Food spills or grease buildup; excessive fat in food.	Clean oven interior thoroughly; trim excess fat from food.

If the problem persists after attempting these solutions, please contact qualified service personnel.

SPECIFICATIONS

The following are the technical specifications for the Rosieres RF462IN Electric Oven:

- **Model Number:** RF462IN
- **Brand:** Rosieres
- **Type:** Electric Oven
- **Capacity:** 58 Liters
- **Power:** 2000 Watts
- **Voltage:** 230 Volts
- **Weight:** 37000 Grams (37 kg)
- **Finish:** Stainless Steel (Brushed)
- **GTIN (Global Trade Identification Number):** 08016361864832

Specifications are subject to change without notice for product improvement.

WARRANTY AND CUSTOMER SUPPORT

For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Rosieres website. For technical assistance or spare parts, please contact Rosieres customer support.

Keep your purchase receipt as proof of purchase for warranty claims.

