

## Severin WA 2106

# SEVERIN WA 2106 Duo Waffle Maker Instruction Manual

Model: WA 2106 | Brand: Severin

## 1. INTRODUCTION

Thank you for choosing the SEVERIN WA 2106 Duo Waffle Maker. This appliance is designed to prepare two delicious heart-shaped waffles simultaneously. Its user-friendly features, including an adjustable thermostat and non-stick cooking plates, ensure a convenient and enjoyable waffle-making experience. Please read this instruction manual carefully before first use to ensure safe operation and optimal performance.



*Image 1.1: The SEVERIN WA 2106 Duo Waffle Maker in its closed position.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions when using electrical appliances:

- Read all instructions carefully before use and keep them for future reference.
- This appliance is intended for household use only.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the rating label matches your mains voltage.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance surfaces become hot during use. Use oven mitts or a cloth when handling hot parts.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always place the appliance on a stable, heat-resistant surface.
- Do not use abrasive cleaning agents or sharp objects on the non-stick plates.

## 3. PRODUCT COMPONENTS

The SEVERIN WA 2106 Duo Waffle Maker consists of the following main parts:

1. **Housing:** The main body of the appliance, designed to be heat-resistant.
2. **Cooking Plates:** Two heart-shaped non-stick plates for preparing waffles.
3. **Thermostat Control Knob:** Used to adjust the desired browning level (Min to Max).
4. **Indicator Lights:** Power (red) and Ready (green) lights to show appliance status.
5. **Handle:** For opening and closing the waffle maker.
6. **Non-slip Rubber Feet:** For stability during use.
7. **Cord Winder:** For convenient storage of the power cord.



*Image 3.1: The open waffle maker revealing the heart-shaped cooking plates.*

## 4. SETUP AND FIRST USE

---

### 4.1 Unpacking

- Remove all packaging materials and promotional labels from the appliance.
- Check that all components are present and undamaged.

### 4.2 Initial Cleaning

- Wipe the cooking plates with a damp cloth or sponge.
- Wipe the exterior of the appliance with a soft, damp cloth.
- Dry all parts thoroughly.

### 4.3 First Heating (Burn-off)

Before using for the first time, it is recommended to perform a burn-off cycle to eliminate any manufacturing odors:

1. Place the waffle maker on a stable, heat-resistant surface.
2. Plug the appliance into a suitable power outlet. The red power indicator light will illuminate.
3. Set the thermostat control knob to the maximum setting.
4. Allow the appliance to heat up for approximately 5-10 minutes. A slight odor or smoke may be noticeable; this is normal.
5. Unplug the appliance and allow it to cool completely.
6. Wipe the cooking plates again with a damp cloth. The appliance is now ready for use.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Preheating

1. Close the waffle maker and plug it into a power outlet. The red power indicator light will turn on.
2. Set the thermostat control knob to your desired browning level. For a darker waffle, select a higher setting (closer to MAX).
3. Allow the appliance to preheat. The green 'ready' indicator light will illuminate when the desired temperature is reached. This typically takes 3-5 minutes.



## Thermostat réglable et témoins lumineux pour un contrôle précis du temps de cuisson

*Image 5.1: The waffle maker features an adjustable thermostat and indicator lights for precise cooking control.*

### 5.2 Making Waffles

1. Once the green 'ready' light is on, open the waffle maker.
2. Lightly grease the non-stick cooking plates with a little oil or butter, especially for the first batch.
3. Pour approximately 100-120ml of waffle batter onto the center of each heart-shaped plate. Do not overfill, as the batter will expand.
4. Carefully close the lid. Do not press down forcefully.
5. The green 'ready' light may turn off during cooking and will re-illuminate when the waffle maker reaches the set temperature again.
6. Cook for approximately 3-6 minutes, depending on your desired browning and the batter consistency.
7. To check if waffles are done, carefully open the lid. If they are golden brown and easily lift off the plates, they are ready.
8. Remove the waffles using a wooden or heat-resistant plastic spatula. **Do not use metal utensils** as they can damage the non-stick coating.

9. Close the lid to maintain heat for the next batch.

## Gaufrier compact pour gaufres norvégiennes moelleuses

Pour préparer rapidement et facilement des gaufres croustillantes en forme de cœur



*Image 5.2: The compact design allows for quick and easy preparation of two heart-shaped waffles.*

### 5.3 After Use

- Once you have finished making waffles, unplug the appliance from the power outlet.
- Allow the waffle maker to cool completely before cleaning or storing.

## 6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your SEVERIN WA 2106 Duo Waffle Maker.

### 6.1 Cleaning the Cooking Plates

- Ensure the appliance is unplugged and completely cool.
- Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, a small amount of mild dish soap can be used, then wipe clean with a damp cloth.
- Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.

- Never immerse the appliance in water.

## 6.2 Cleaning the Exterior

- Wipe the exterior housing with a soft, damp cloth.
- Dry thoroughly.

## 6.3 Storage

- Ensure the waffle maker is clean and completely dry before storing.
- The appliance can be stored vertically to save space. Use the integrated cord winder for tidy storage of the power cable.



*Image 6.1: Key features include a heat-resistant body, non-slip feet, 1200W power, vertical storage, cord winder, and non-stick coating for easy cleaning.*

## 7. TROUBLESHOOTING

If you encounter issues with your waffle maker, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker.
Waffles stick to the plates.	Plates not greased; too much sugar in batter; plates not preheated sufficiently.	Lightly grease plates before each use. Reduce sugar in batter. Ensure green 'ready' light is on before adding batter.
Waffles are not evenly browned.	Thermostat setting too low; uneven batter distribution.	Increase the thermostat setting. Ensure batter is evenly spread on the plates.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. The odor should dissipate after the initial burn-off cycle.

## 8. TECHNICAL SPECIFICATIONS

- **Model:** WA 2106
- **Brand:** Severin
- **Power:** 1200 Watts
- **Voltage:** 220.0 V
- **Material:** Stainless Steel (housing), Non-stick coating (plates)
- **Color:** Black
- **Product Dimensions (L x W x H):** 35.1 x 24.2 x 9.8 cm
- **Item Weight:** 2.31 Kilograms
- **Special Feature:** Non-stick coating, Adjustable thermostat, Vertical storage
- **Country of Origin:** China

## 9. WARRANTY INFORMATION

SEVERIN products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact your retailer. Keep your proof of purchase for any warranty claims.

## 10. CUSTOMER SUPPORT

Should you have any questions, require technical assistance, or need to report a problem with your SEVERIN WA 2106 Duo Waffle Maker, please contact SEVERIN customer service or your local retailer. Contact information can typically be found on the product packaging or the official SEVERIN website.

For more information about Severin products, you can visit the official Severin store: [Severin Brand Store](#)

