

Brandt ETE6736K

Brandt ETE6736K Tumble Dryer

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Brandt ETE6736K condenser tumble dryer. Please read these instructions carefully before using the appliance and keep them for future reference.

The Brandt ETE6736K is a front-load condenser tumble dryer designed for household use, offering a convenient solution for drying laundry.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly earthed.
- Do not allow children to play with or operate the appliance.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- Do not install or store the appliance where it will be exposed to the weather.
- Do not operate the appliance if it is damaged. Contact authorized service personnel.

SETUP

1. Unpacking

Carefully remove all packaging materials. Check the appliance for any transport damage. Report any damage immediately to your supplier.

2. Location Requirements

- Place the dryer on a firm, level floor.
- Ensure adequate ventilation around the appliance. Do not block ventilation openings.
- Avoid installing the dryer in rooms where the temperature may fall below 5°C, as this can affect performance.

3. Electrical Connection

Connect the dryer to a properly earthed power outlet. Ensure the voltage and frequency match the specifications on the rating plate of the appliance. Do not use extension cords or multiple socket adapters.

4. Leveling

Adjust the adjustable feet at the bottom of the dryer to ensure it is perfectly level. A level appliance reduces vibration and noise during operation.



Image: Front view of the Brandt ETE6736K Tumble Dryer. This image shows the general appearance of the appliance, including the front-loading door and control panel.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The control panel typically consists of a program selector dial, function buttons, and indicator lights. Refer to the diagram on your appliance for specific button functions.

- **Program Selector Dial:** Used to choose the desired drying program based on fabric type and desired dryness level.
- **Start/Pause Button:** Initiates or pauses the selected drying cycle.
- **Function Buttons:** May include options for reduced heat, anti-crease, or delayed start.

2. Loading Laundry

- Open the dryer door.

- Load laundry loosely into the drum, ensuring not to overload. Overloading can reduce drying efficiency and cause creasing.
- Close the door firmly.

3. Selecting a Program

Turn the program selector dial to the desired drying program. Common programs include Cotton, Synthetics, Delicates, and Refresh. Consult the program chart on your appliance or in the quick start guide for detailed descriptions.

4. Starting a Cycle

Press the Start/Pause button to begin the drying cycle. The indicator light will illuminate.

5. End of Cycle

At the end of the cycle, an audible signal may sound, and the indicator light will change. Remove laundry promptly to minimize creasing.

6. Emptying the Water Tank

As a condenser dryer, water extracted from the laundry collects in a removable tank. This tank must be emptied after each drying cycle. Pull out the water tank, empty it, and reinsert it securely.

7. Cleaning the Lint Filter

The lint filter collects lint and fibers from your laundry. It must be cleaned after every cycle to maintain drying efficiency and prevent fire hazards. Open the door, remove the filter, clean off lint, and replace it.

MAINTENANCE

1. Cleaning the Exterior

Wipe the exterior surfaces of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

2. Cleaning the Condenser Unit

The condenser unit should be cleaned periodically (e.g., every few months or as indicated by the appliance). Refer to your appliance's specific instructions for accessing and cleaning the condenser. This typically involves removing the kick plate and rinsing the condenser under running water.

3. Cleaning the Water Tank

Periodically rinse the water tank with clean water to prevent mold or odor buildup.

TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Dryer does not start	No power; Door not closed; Program not selected; Start button not pressed.	Check power supply; Close door firmly; Select program; Press Start button.

Problem	Possible Cause	Solution
Laundry not drying properly	Lint filter blocked; Water tank full; Overloaded; Incorrect program selected.	Clean lint filter; Empty water tank; Reduce load size; Select appropriate program.
Excessive noise/vibration	Appliance not level; Foreign objects in drum.	Adjust leveling feet; Check drum for loose items.
Water leaking	Water tank not inserted correctly; Condenser unit blocked.	Reinsert water tank properly; Clean condenser unit.

If the problem persists after attempting these solutions, please contact authorized service personnel.

SPECIFICATIONS

- **Model:** Brandt ETE6736K
- **Type:** Condenser Tumble Dryer
- **Loading Type:** Front Load
- **Capacity:** 6 kg (based on typical dryer capacity for 82 Liters drum volume)
- **Dimensions (H x W x D):** 85 cm x 60 cm x 45 cm (approximate, based on 45 x 60 x 85 cm product dimensions)
- **Power Supply:** 220-240V~, 50Hz (typical for European appliances)
- **Energy Class:** C (as per product title)
- **Product ID:** ETE6736K
- **GTIN:** 03660767566897

Note: Specifications are subject to change without notice. Refer to the rating plate on your appliance for precise details.

WARRANTY INFORMATION

Your Brandt ETE6736K tumble dryer comes with a manufacturer's warranty. The terms and conditions of the warranty are detailed in the separate warranty card provided with your appliance. Please retain your proof of purchase for warranty claims.

The warranty typically covers manufacturing defects and faulty materials under normal domestic use. It does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

CUSTOMER SUPPORT

For technical assistance, spare parts, or service requests, please contact your local Brandt authorized service center. You can usually find contact details on the Brandt official website or in the documentation supplied with your appliance.

When contacting customer support, please have the model number (ETE6736K) and serial number of your appliance ready. This information is typically found on the rating plate located on the appliance itself (e.g., inside the door frame or at the back).

