



Manuals.plus /

› **Minecraft** /

› Minecraft Baby Mooshroom Plush Toy Instruction Manual

Minecraft 16528

Minecraft Baby Mooshroom Plush Toy

Model: 16528

Brand: Minecraft (Manufactured by Jazwares)

INTRODUCTION

This instruction manual provides essential information for the safe and proper use, care, and maintenance of your Minecraft Baby Mooshroom Plush Toy. This plush toy is designed for fans of the Minecraft video game, offering a tangible representation of the popular Baby Mooshroom character.

Please read this manual thoroughly before use and retain it for future reference.



Figure 1: Front view of the Minecraft Baby Mooshroom Plush Toy, showcasing its red body, black ears, and pixelated facial features.

SETUP

The Minecraft Baby Mooshroom Plush Toy requires no assembly. It is ready for use directly out of its packaging.

1. Carefully remove the plush toy from its packaging.
2. Inspect the toy for any signs of damage or loose parts. If any damage is found, discontinue use and contact customer support.
3. Remove all tags and plastic fasteners before giving the toy to a child.

OPERATING INSTRUCTIONS

This plush toy is designed for imaginative play and decorative purposes. It is suitable for children aged 12 months and older.

- Encourage creative play scenarios with the plush toy.
- The toy can be displayed on shelves, beds, or desks as a decorative item.
- No batteries or power source are required for operation.

MAINTENANCE

Proper care will ensure the longevity of your plush toy.

Cleaning Instructions:

- **Spot Cleaning:** For minor stains, gently wipe the affected area with a damp cloth and mild soap. Rinse with a clean damp cloth and air dry.
- **Hand Washing:** For more thorough cleaning, hand wash the plush toy in cool water with a mild detergent. Gently squeeze out excess water (do not wring) and air dry completely.
- **Do Not Machine Wash:** Machine washing may damage the plush material or stitching.
- **Do Not Bleach or Iron:** Avoid using bleach or ironing the plush toy.

Storage:

- Store the plush toy in a clean, dry place away from direct sunlight to prevent fading.

TROUBLESHOOTING

This section addresses common concerns regarding the plush toy.

Problem	Solution
Plush toy becomes dirty.	Refer to the "Cleaning Instructions" in the Maintenance section.
Stitching appears loose or damaged.	Discontinue use to prevent further damage or potential hazards. Small repairs can be made by hand. For significant damage, contact customer support.
Color fading.	Ensure the plush toy is stored away from direct sunlight.

SPECIFICATIONS

Feature	Detail
Brand Name	Minecraft
Manufacturer	Jazwares
Model Number	16528
Character	Minecraft Baby Mooshroom
Toy Figure Type	Stuffed Toy
Material Type	Plush
Color	Multi-colored (predominantly red)
Item Dimensions (L x W x H)	7"L x 4"W x 5"H (approx. 17.8 cm x 10.2 cm x 12.7 cm)
Item Weight	0.13 Pounds (approx. 59 grams)
Number of Pieces	1
Age Range	12 months to 180 months (1 to 15 years)
Assembly Required	No
Batteries Required	No
Educational Objective	Encourage imaginative play and familiarity with Minecraft's concepts

WARRANTY INFORMATION

This product is sold without an explicit manufacturer's warranty. Please refer to the retailer's return policy for details on returns or exchanges.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Minecraft Baby Mooshroom Plush Toy, please contact the retailer where the product was purchased. For general inquiries about Minecraft merchandise, you may visit the official Minecraft website.