

Manuals.plus /

› Cornat /

› CORNAT TECB3362 Shower Hose Instruction Manual

Cornat TECB3362

CORNAT TECB3362 Stainless Steel Shower Hose Instruction Manual

Model: TECB3362 | Length: 150 cm | Material: Stainless Steel | Finish: Chrome

1. INTRODUCTION

This manual provides essential information for the safe and correct installation, operation, and maintenance of your CORNAT TECB3362 Stainless Steel Shower Hose. Please read these instructions carefully before installation and retain them for future reference.

The CORNAT TECB3362 is a high-quality, flexible shower hose designed for connecting a hand shower to a shower mixer or wall outlet. It features a durable stainless steel construction with a chrome finish, ensuring longevity and a sleek appearance in your bathroom.

2. SAFETY INFORMATION

- Ensure the water supply is turned off before beginning any installation work to prevent water damage.
- Use appropriate tools and avoid overtightening connections, which can damage threads or seals.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Do not use abrasive cleaners or harsh chemicals on the hose, as this can damage the finish and material.
- Regularly inspect the hose for signs of wear, kinks, or leaks. Replace immediately if damage is detected.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- 1 x CORNAT TECB3362 Stainless Steel Shower Hose (150 cm)
- 2 x Sealing Washers (typically pre-installed or included)

4. SETUP AND INSTALLATION

Follow these steps for proper installation of your shower hose.

1. **Preparation:** Turn off the main water supply to your shower or bathroom. If replacing an old hose, unscrew it from both the shower mixer/wall outlet and the hand shower. Clean any residue from the connection points.
2. **Inspect Washers:** Ensure that a sealing washer is correctly seated in each end of the new shower hose. These washers are crucial for preventing leaks.
3. **Connect to Mixer/Outlet:** Screw one end of the CORNAT TECB3362 shower hose onto the outlet of your shower mixer or wall connection. Hand-tighten first, then use a wrench to gently tighten an additional quarter to half turn. Avoid overtightening.
4. **Connect to Hand Shower:** Screw the other end of the shower hose onto your hand shower. Again, hand-tighten first, then gently tighten with a wrench.
5. **Check for Leaks:** Slowly turn the main water supply back on. Check all connections for any signs of leakage. If leaks occur, gently tighten the connections further. If leaks persist, ensure washers are correctly seated and undamaged.



Image 1: The CORNAT TECB3362 Shower Hose, illustrating its flexible design and chrome finish, ready for connection to a shower system.

5. OPERATING INSTRUCTIONS

The CORNAT TECB3362 shower hose is a passive component of your shower system. Its operation is directly linked to the functionality of your shower mixer and hand shower.

- Ensure the hose hangs freely and is not kinked or twisted during use, which can restrict water flow or damage the

hose.

- Avoid excessive pulling or stretching of the hose, as this can strain the connections and potentially cause leaks or damage.

6. MAINTENANCE

Proper maintenance will extend the life of your shower hose and maintain its appearance.

- **Cleaning:** Clean the exterior of the hose regularly with a soft cloth and mild soap and water. Rinse thoroughly and dry with a soft cloth.
- **Avoid Harsh Cleaners:** Do not use abrasive sponges, scouring pads, or chemical cleaners containing acids, alcohol, or ammonia, as these can damage the chrome finish and stainless steel.
- **Inspection:** Periodically inspect the hose for any signs of wear, such as cracks, bulges, or corrosion. Check the connections for tightness and ensure the sealing washers are in good condition.
- **Kink Prevention:** Ensure the hose is not consistently bent or kinked in the same spot, as this can lead to material fatigue and leaks.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaking from connections	Loose connection, damaged or missing sealing washer.	Tighten connections gently. Check and replace sealing washers if necessary. Ensure washers are seated correctly.
Reduced water flow	Hose is kinked, debris in the hose or hand shower, or mineral buildup.	Straighten the hose. Disconnect and flush the hose. Clean the hand shower's spray nozzles and filter.
Hose appears damaged (cracks, bulges)	Material fatigue, excessive bending, or age.	The hose needs to be replaced.

8. SPECIFICATIONS

Model	TECB3362
Brand	Cornat
Material	Stainless Steel
Color/Finish	Chrome
Item Length	150 Centimeters (1.5 meters)
Item Weight	0.29 Kilograms
Maximum Pressure	7 Bars
Outside Diameter	8 Millimeters

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance or technical inquiries, please visit the official Cornat website or contact their customer service department.

