

[manuals.plus](#) /› [Transcend](#) /› [Transcend 4GB microSDHC Memory Card with SD Adapter User Manual](#)

## Transcend 4GB microSDHC Memory Card

# Transcend 4GB microSDHC Memory Card with SD Adapter User Manual

Model: 4GB microSDHC Memory Card

## INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Transcend 4GB microSDHC Memory Card with SD Adapter. This product is designed to expand storage capacity for compatible devices, such as smartphones, and facilitate data transfer.

The microSDHC card offers reliable data storage, and the included SD adapter allows for compatibility with devices that use standard SD card slots.

## PACKAGE CONTENTS

Please verify that your package contains the following items:

- 1 x Transcend 4GB microSDHC Memory Card
- 1 x SD Adapter



Image: Transcend 4GB microSDHC Memory Card and SD Adapter. The microSDHC card is small and black, typically inserted into the larger black SD adapter.

## SETUP

### Inserting the microSDHC Card into a Compatible Device

1. Locate the microSD card slot on your device (e.g., smartphone, tablet). Refer to your device's user manual for exact location.
2. Orient the microSDHC card with the gold contacts facing down or as indicated by your device's slot.
3. Gently push the card into the slot until it clicks into place. Do not force the card.
4. Your device should recognize the new storage. You may need to format the card if prompted by the device.

### Using the SD Adapter

1. Insert the microSDHC card into the designated slot on the SD adapter until it clicks.
2. Insert the SD adapter into a device with a standard SD card slot (e.g., camera, laptop, card reader).
3. Ensure the write-protect switch on the side of the SD adapter is in the "unlocked" (up) position if you intend to write data to the card.

## OPERATING

### Storing Data

Once the microSDHC card is recognized by your device, you can use it to store various types of data, including photos, videos, music, and documents. The method for saving data to the card varies by device:

- **Smartphones/Tablets:** Many apps allow you to select the storage location (internal or external). You can also move existing files from internal storage to the microSDHC card via the device's file

manager.

- **Cameras:** Set the camera's storage option to save photos and videos directly to the microSDHC card.
- **Computers (via SD Adapter):** The card will appear as a removable drive. You can drag and drop files to and from the card.

## Transferring Data

To transfer data between the microSDHC card and a computer:

1. Insert the microSDHC card into the SD adapter, then insert the adapter into your computer's SD card slot or a USB card reader.
2. Open "My Computer" or "This PC" (Windows) or "Finder" (macOS) and locate the removable drive corresponding to the memory card.
3. Drag and drop files to copy them to or from the card.
4. Always safely eject the removable drive from your operating system before physically removing the card or adapter to prevent data corruption.

## MAINTENANCE

---

- **Proper Removal:** Always safely eject the memory card from your device or computer before physical removal to prevent data loss or corruption.
- **Physical Protection:** Store the microSDHC card in its protective case or the SD adapter when not in use to prevent damage to the contacts or card body.
- **Environmental Conditions:** Avoid exposing the card to extreme temperatures, direct sunlight, moisture, or strong magnetic fields. This card is noted as "Water Proof", but it is still advisable to avoid unnecessary exposure to liquids.
- **Data Backup:** Regularly back up important data from your memory card to another storage device (e.g., computer hard drive, cloud storage) to prevent permanent data loss.
- **Cleaning:** If necessary, gently wipe the gold contacts with a clean, dry, lint-free cloth. Do not use abrasive materials or liquid cleaners.

## TROUBLESHOOTING

---

### Card Not Detected

- **Reinsert Card:** Remove the card and reinsert it firmly into the slot.
- **Check Compatibility:** Ensure your device supports microSDHC cards and the specified capacity (4GB).
- **Try Another Device:** Test the card in a different compatible device or card reader to determine if the issue is with the card or the original device.
- **Check SD Adapter Switch:** If using the SD adapter, ensure the write-protect switch is in the unlocked position.

### Data Transfer Errors

- **Insufficient Space:** Verify that there is enough free space on the card for the data you are trying to transfer.
- **File System Issues:** If the card is new or has been used in multiple devices, it might require

formatting. **Note: Formatting will erase all data on the card.**

- **Safe Ejection:** Always ensure the card is safely ejected from the computer or device before removal.

## Slow Performance

- **Card Fullness:** Performance can degrade when a card is nearly full. Try freeing up space.
- **Device Limitations:** The speed of data transfer can also be limited by the device or card reader being used.

## SPECIFICATIONS

<b>Brand</b>	Transcend
<b>Flash Memory Type</b>	Micro SDHC
<b>Memory Storage Capacity</b>	4 GB
<b>Hardware Interface</b>	microSDHC
<b>Compatible Devices</b>	Smartphone
<b>Special Feature</b>	Water Proof
<b>Item Weight</b>	0.48 ounces (approx. 13.6 grams)
<b>UPC</b>	021859470530
<b>ASIN</b>	B00F9HHC50

## WARRANTY AND SUPPORT

Transcend memory cards are typically covered by a limited warranty. For specific warranty terms, duration, and conditions, please refer to the warranty information included with your product packaging or visit the official Transcend website.

For technical support, product registration, or further assistance, please visit the Transcend support page or contact their customer service directly. Contact information can usually be found on the Transcend website or product packaging.

**No Official Product Videos Available:** At this time, there are no official product videos provided by the seller for this specific memory card model.