

[Manuals.plus](#) /

› [Rockland](#) /

› Rockland Expandable Spinner Carry On, 19-Inch, Black - Instruction Manual

Rockland F2281-BLACK

Rockland Expandable Spinner Carry On, 19-Inch, Black - Instruction Manual

PRODUCT OVERVIEW

The Rockland Expandable Spinner Carry On is designed for convenient and efficient travel. This 19-inch carry-on features multi-directional spinner wheels for effortless maneuverability and an expandable design to accommodate additional packing needs. Its lightweight construction helps avoid excess weight surcharges, making it an ideal companion for various trips.

Key Features:

- Four multi-directional spinner wheels for 360-degree rotation and easy movement.
- Sturdy internal aluminum telescoping handle with push-button mechanism.
- Two exterior pockets for quick access to essentials.
- Interior mesh and zip pocket, plus an elastic pocket for organized packing.
- Expandable design for increased packing capacity.
- Fully lined interior to protect contents.
- Constructed from 100% Polyester.

SETUP AND FIRST USE

Unpacking:

Carefully remove the carry-on from its packaging. Inspect the luggage for any signs of damage during transit. Remove any protective films or tags.

Handle Operation:

To extend the telescoping handle, press the button located on the top of the handle and pull upwards. To retract, press the button again and push the handle downwards until it is fully collapsed.

Wheel Functionality:

The four multi-directional spinner wheels are designed to rotate 360 degrees. Test the wheels by gently pushing the luggage in various directions to ensure smooth movement.





Side view of the Rockland 19-Inch Carry On with its telescoping handle extended, demonstrating its full height.





Bottom view of the Rockland 19-Inch Carry On, highlighting the four multi-directional spinner wheels for easy movement.

OPERATING INSTRUCTIONS

Packing the Main Compartment:

Open the main zipper to access the spacious interior. Utilize the internal straps to secure your clothing and prevent shifting during travel. The fully lined interior helps protect your belongings.



Interior view of the Rockland 19-Inch Carry On, showing the main compartment with securing straps and a patterned lining.

Using Exterior Pockets:

The carry-on features two exterior pockets. These are ideal for storing items you need to access quickly, such as travel documents, small electronics, or snacks.

Expanding the Luggage:

For additional packing space, locate the expansion zipper around the perimeter of the main compartment. Unzip this to increase the depth of the luggage.

Maneuvering:

Use the telescoping handle to push or pull the luggage. The spinner wheels allow for upright rolling, reducing strain on your arm and shoulder.





A person standing next to the Rockland 19-Inch Carry On, demonstrating its size and ease of handling with the extended telescoping handle.

Product Video:

Official product video showcasing the features and design of the Rockland Pasadena Collection, including the spinner wheels, handles, and pockets.

CARE AND MAINTENANCE

Cleaning:

For general cleaning, wipe the exterior with a damp cloth and mild soap. Avoid harsh chemicals that may damage the fabric. For stubborn stains, a soft brush can be used gently.

Zipper Care:

Periodically check zippers for any debris or obstructions. If zippers become stiff, apply a small amount of zipper lubricant or wax to ensure smooth operation.

Wheel Maintenance:

Keep the spinner wheels free of dirt and hair. If wheels become difficult to roll, clean around the axle area. Avoid exposing wheels to extreme temperatures or prolonged moisture.

Storage:

Store the luggage in a cool, dry place away from direct sunlight when not in use. Ensure it is empty and clean before storing to prevent odors or mildew.

TROUBLESHOOTING

Stuck Telescoping Handle:

Ensure the release button is fully depressed. Check for any obstructions in the handle mechanism. Gently wiggle the handle while pressing the button to free it.

Wheels Not Spinning Smoothly:

Inspect the wheels for trapped debris such as lint, hair, or dirt. Clean the wheel axles thoroughly. If a wheel is damaged, contact customer support for replacement options.

Zipper Snagging:

If a zipper snags, gently pull the fabric away from the zipper teeth and try to move the slider. Do not force the zipper, as this may cause damage. Ensure the luggage is not overpacked, which can put stress on zippers.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	13.5 x 8 x 19 inches
Item Weight	6 pounds
Capacity	32.4 Liters
Material	100% Polyester
Wheels	Four multi-directional spinner wheels
Handle	Sturdy aluminum telescoping handle
Model Number	F2281-BLACK



Detailed image showing the dimensions of the 19-Inch luggage: 13.5 inches width, 8 inches depth, and 19 inches height.

Rockland

Infographic illustrating recommended luggage sizes for different trip durations, showing a 55cm/21.6in bag for a 2-day trip, 69cm/27.2in for a 1-week trip, 75cm/29.5in for a 2-week trip, and >80cm/31.5in for >2-week trips, alongside human figures for scale.

WARRANTY AND SUPPORT

For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official Rockland website. Keep your proof of purchase for any warranty claims.