

PowerA CPFA123252-01

PowerA MOGA Pro Power Mobile Gaming Controller User Manual

Model: CPFA123252-01

PRODUCT OVERVIEW

The PowerA MOGA Pro Power is a full-sized, console-style mobile gaming controller designed for extended play sessions. It offers precise controls and includes a rechargeable 2200 mAh battery that can also charge your connected Android device.

Key Features:

- Full-sized console-style comfort for extended play.
- Rechargeable 2200 mAh battery allows charging of your phone while you play.
- Precision controls with dual clickable analog sticks, shoulder buttons, triggers, a D-pad, and four action buttons.
- Includes a Micro-B charging cable, a MOGA Boost charging cable, and a tablet stand.
- Compatible with Android 2.3+ devices.



Image: PowerA MOGA Pro Power controller with a smartphone mounted in the Smart Lock arm.

SETUP

1. Charging the Controller

Before initial use, fully charge your MOGA Pro Power controller. Connect the included Micro-B charging cable to the controller's Micro-USB port and a USB power source.

2. Mounting Your Device

The controller features a MOGA Smart Lock arm to securely hold your smartphone. Gently extend the arm and place your smartphone within the grips. Ensure your device is centered and stable.



Image: A smartphone securely mounted in the MOGA Smart Lock arm of the controller.

3. Bluetooth Pairing

The MOGA Pro Power controller offers two modes: Mode A (MOGA Pivot App) and Mode B (HID Standard Bluetooth). For most modern Android devices (Android 5.0 and above) and broader game compatibility, **Mode B (HID) is recommended.**

1. Locate the A/B/OFF switch on the front of the controller.
2. Slide the switch to the 'B' position to activate HID mode.
3. On your Android device, go to **Settings > Bluetooth** and ensure Bluetooth is enabled.
4. The controller should appear in the list of available devices (e.g., "MOGA Pro Power"). Select it to pair.
5. Once paired, the indicator lights on the controller will confirm connection.

Note: Mode A is designed for the MOGA Pivot app, which may have limited game support and can sometimes experience connectivity issues. If you encounter problems, always try Mode B first.

4. Connecting to a Tablet or TV

For tablets, use the included tablet stand. For TV connectivity, if your Android device supports MHL (Mobile

High-Definition Link) output, you can connect it to your TV using an appropriate MHL cable (sold separately) for a larger screen gaming experience.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the controller, slide the A/B/OFF switch to either 'A' or 'B' position. To power off, slide the switch to 'OFF'.

2. Using the Controls

The MOGA Pro Power features a standard console-style layout:

- **Dual Analog Sticks:** Provide precise 360-degree movement and are clickable (L3/R3).
- **D-Pad:** A directional pad for discrete directional input. While functional, some users may find it stiff for highly precise platforming games.
- **Action Buttons (A, B, X, Y):** Standard four-button layout for in-game actions.
- **Shoulder Buttons (L1, R1) and Triggers (L2, R2):** Located on the top of the controller for additional actions. The triggers offer a good feel and responsiveness.
- **START/SELECT Buttons:** For in-game menu navigation and options.



Image: Front view of the PowerA MOGA Pro Power controller, highlighting the analog sticks, D-pad, and action buttons.

3. Charging Your Phone While Playing

Connect your phone to the controller using the MOGA Boost charging cable. The controller's internal 2200 mAh battery will provide power to your phone, extending your gaming sessions. Be aware that charging your phone will consume the controller's battery faster.

4. Gaming Experience

Once paired in Mode B, most controller-compatible Android games will automatically recognize the MOGA Pro Power. For emulators, ensure the emulator settings are configured to use a standard HID gamepad.

Your browser does not support the video tag.

Video: Official PowerA MOGA product video demonstrating features and gameplay. This video showcases the controller's design, phone mounting, and in-game use with various mobile titles.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your controller, regularly clean it with a soft, dry cloth. The polished black plastic surfaces and grooves can attract dust, dirt, and fingerprints. For stubborn grime, a slightly damp cloth can be used, but ensure no moisture enters the ports or internal components.

Battery Care

To prolong the life of the internal rechargeable battery, avoid fully discharging it frequently. If storing the controller for an extended period, charge it to approximately 50% capacity and store in a cool, dry place.

TROUBLESHOOTING

Controller Not Connecting via Bluetooth

- Ensure the controller is switched to 'B' mode (HID).
- Verify Bluetooth is enabled on your Android device.
- Forget the device in your phone's Bluetooth settings and attempt to re-pair.
- Restart both your phone and the controller.
- Ensure the controller battery is sufficiently charged.

Buttons or Analog Sticks Unresponsive

- Confirm the controller is properly paired and connected.
- Test the controller with a different game or a gamepad testing app to rule out game-specific issues.
- Ensure no debris is obstructing the buttons or sticks.

Phone Not Charging from Controller

- Ensure the MOGA Boost charging cable is securely connected to both the controller and your phone.
- Verify the controller has sufficient battery charge.
- Check if your phone's charging port is clean and free of obstructions.

SPECIFICATIONS

Controller Type	Gamepad
Power Source	Battery Powered (1 Lithium Polymer battery included)

Hardware Interface	USB, Bluetooth
Platform Compatibility	Electronic Game (Android 2.3+ devices)
Item Weight	0.4 Kilograms
Item Dimensions	7.79 x 5.36 x 2.6 inches
Model Number	CPFA123252-01
UPC	617885005480

WARRANTY INFORMATION

PowerA products typically come with a limited warranty. For specific details regarding the warranty period and terms for your MOGA Pro Power controller, please refer to the warranty card included in the product packaging or visit the official PowerA website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact PowerA customer service. You can usually find contact information on the official PowerA website or within your product packaging.

Online Resources:

- Visit the [PowerA Store on Amazon](#) for product information and accessories.
- Check the official PowerA website for FAQs and support documentation.