

TIMEX T2P183

TIMEX Chronograph Black Dial Men's Watch - T2P183 User Manual

Model: T2P183

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your TIMEX Chronograph Black Dial Men's Watch, model T2P183. Designed for durability and precision, this timepiece features a reliable Analog-quartz movement, a chronograph function, and the signature INDIGLO® night-light. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.

Your watch is equipped with a black stainless steel band, a black dial with Arabic numeral display, and is water resistant to 50 meters. It combines classic styling with practical features for everyday wear.

SETUP

Unpacking and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. Ensure all protective films are removed from the crystal and case back before use.



Image: Front view of the TIMEX Chronograph Black Dial Men's Watch, model T2P183, showcasing its black dial, chronograph sub-dials, and stainless steel band.

Adjusting the Band

The stainless steel band may require adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this procedure performed by a qualified jeweler or watch technician to prevent damage to the band or watch.



Image: The TIMEX Chronograph Black Dial Men's Watch worn on a wrist, demonstrating its fit and appearance.

OPERATING INSTRUCTIONS

Time and Date Setting

1. **Pull the Crown:** Gently pull the crown (the knob on the side of the watch) out to position 2 (the outermost position). The second hand will stop.
2. **Set the Time:** Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time. To ensure the AM/PM is set correctly, advance the time until the date changes. If the date changes at noon, you are 12 hours off.
3. **Set the Date:** Push the crown in to position 1 (the middle position). Rotate the crown to set the date.
Note: Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism.
4. **Push the Crown In:** Once the time and date are set, push the crown back into position 0 (the innermost position) to start the watch.

Chronograph Function

The chronograph function allows you to measure elapsed time. Your watch features three sub-dials for seconds, minutes, and hours of elapsed time.

1. **Start:** Press the upper pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be displayed on the sub-dials.
3. **Reset:** With the chronograph stopped, press the lower pusher to reset all chronograph hands to their zero positions.

INDIGLO® Night-Light

To activate the INDIGLO® night-light, press and hold the crown. The entire dial will illuminate for easy reading in low-light conditions. Release the crown to turn off the light.

Water Resistance

This watch is water resistant to 50 meters (164 feet). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet to prevent water intrusion.

- **50M (5 ATM):** Suitable for showering, swimming in shallow water. Not suitable for diving or prolonged submersion.
- **Important:** Water resistance is not a permanent condition and may eventually be compromised by wear and tear or accidental damage. Always ensure the crown is fully pushed in before exposing the watch to water.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, regularly wipe the case and band with a soft, dry cloth. For stainless steel bands, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

Battery Replacement

Your watch is powered by a quartz movement and requires a battery. When the battery runs low, the watch may stop or the INDIGLO® light may dim. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Keeping it in its original box or a watch case can help protect it from dust and scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running slow.	Low battery.	Replace battery by a professional watch technician.
INDIGLO® light is dim or not working.	Low battery.	Replace battery by a professional watch technician.
Water inside the watch.	Crown not fully pushed in; exposure to excessive water pressure.	Immediately take the watch to a service center. Do not attempt to dry it yourself.
Chronograph hands do not reset to zero.	Requires calibration.	Consult the TIMEX service center for adjustment.

SPECIFICATIONS

Feature	Detail
Model Number	T2P183

Feature	Detail
Model Name	Timex Style Kaleidoscope Men's Chrono
Movement Type	Analog Quartz
Display Type	Chronograph
Dial Color	Black
Case Shape	Round
Case Diameter	42 Millimetres
Band Color	Black
Band Material	Stainless Steel
Water Resistance	50 Meters (5 ATM)
Special Features	Chronograph, INDIGLO® Night-Light, Date Display
Item Weight	141 g
Manufacturer	Timex


WARRANTY AND SUPPORT






Your TIMEX Chronograph Black Dial Men's Watch, model T2P183, comes with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims, service, or technical support, please refer to the official TIMEX website or contact their authorized service centers. Keep your proof of purchase for warranty validation.

For more information, visit the official [TIMEX Store](#).

Related Documents - T2P183

	<p>Timex Victory Sailing Watch Instruction Manual 704-095001</p> <p>Official instruction manual for the Timex Victory Sailing Watch (model 704-095001). Learn about its features, how to set time and calendar, use the chronograph, tide ring, race timer, tack ratio, and understand the limited warranty and service information.</p>
---	--

	<p>Timex Watch User Manual: Features, Operation, and Care</p> <p>Comprehensive user manual for Timex watches, detailing features like analog and digital time, multiple time zones, alarms, chronographs, timers, water resistance, and bracelet adjustment.</p>
	<p>Timex Ironman 10/30/50 Lap/Transit Watch User Manual and Guide</p> <p>Comprehensive user manual and guide for the Timex Ironman 10, 30, and 50 Lap/Transit digital sports watch, covering basic operation, chronograph, timer, alarm, INDIGLO night-light, water resistance, battery, and warranty information.</p>
	<p>Timex Analog Watch User Manual - Features, Settings, and Care</p> <p>Comprehensive user guide for Timex Analog watches, covering setup, features like INDIGLO® Night-Light, water resistance, alarms, perpetual calendar, and maintenance. Available in multiple languages.</p>
	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex T100 User Guide: Operation, Features, and Maintenance</p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p>

Documents - TIMEX – T2P183

no relevant documents