

[manuals.plus](#) /

› [Raindrip](#) /

› [Raindrip R675CT Analog 3-Dial Water, Sprinkler Timer with Rain Delay for Drip Irrigation, Garden, Self-Watering User Manual](#)

Raindrip R675CT

Raindrip R675CT Analog 3-Dial Water Timer Instruction Manual

Model: R675CT

INTRODUCTION

The Raindrip R675CT Analog 3-Dial Water Timer is designed to automate your drip irrigation system, providing efficient and consistent watering for your garden. Its intuitive three-dial interface allows for easy programming of watering schedules, manual watering, and rain delays. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your water timer.



Image: Front view of the Raindrip R675CT Analog 3-Dial Water Timer, showing its three control dials and hose connections.

1. Battery Installation

The R675CT water timer is battery-operated. Ensure you have fresh batteries for proper operation. The battery compartment is typically located on the side or back of the unit.



Image: Bottom view of the water timer, highlighting the battery compartment for installation.

2. Connecting to Water Source

Connect the inlet of the water timer directly to an outdoor faucet or hose bibb. The timer is compatible with Garden Hose Thread (GHT). If connecting to a different tubing size, an appropriate adapter (not included) may be required.



Image: The Raindrip R675CT water timer securely attached to an outdoor faucet, ready for use.

3. Connecting to Irrigation System

Connect your drip irrigation supply tubing or hose to the outlet of the water timer. Ensure all connections are tight to prevent leaks.



Image: Side view of the water timer, illustrating the inlet connection at the top and the outlet connection at the bottom for the irrigation system.

The Raindrip R675CT features three easy-to-use control dials for programming your watering schedule.



EASY TO PROGRAM




Select run time



Set frequency



Pause or add to your watering schedule

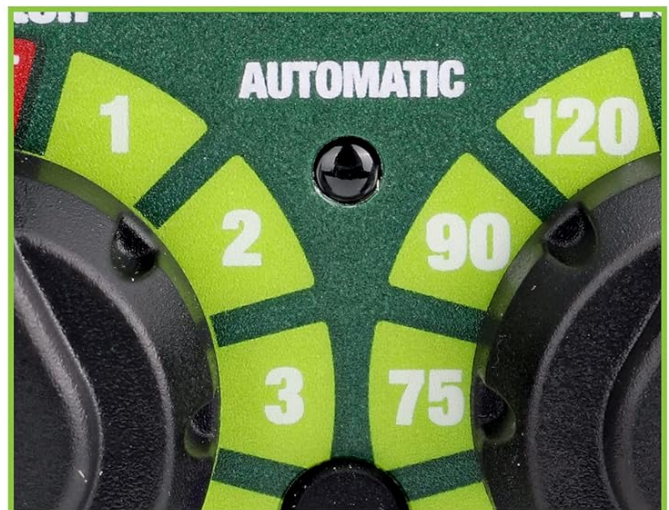

Battery life indicator

Image: Detailed view of the three control dials on the Raindrip R675CT, labeled for 'How Often', 'How Long', and 'Manual Water/Rain Delay'.

1. Set Watering Frequency (How Often Dial)

Turn the 'How Often' dial to select the desired interval between watering cycles. Options range from 1 hour to 1 week (72 hours). The timer will initiate the first watering cycle immediately after setting this dial.

2. Set Run Time (How Long Dial)

Turn the 'How Long' dial to specify the duration of each watering cycle. Options range from 3 minutes to 120 minutes. Set to 'OFF' to disable automatic watering.

3. Manual Watering / Rain Delay (Manual Water/Rain Delay Dial)

- **Manual Water:** Turn this dial to a specific minute setting (e.g., 3, 5, 10, 15 minutes) to initiate a manual watering cycle without affecting your programmed schedule. The timer will water for the selected duration and then return to its programmed schedule.
- **Rain Delay:** Turn this dial to delay watering for a set period (24, 48, or 72 hours). This feature is useful during periods of rain to conserve water. The timer will resume its programmed schedule after the delay period ends.

Indicator Light

An indicator light on the timer blinks to confirm that changes have been made to the settings, providing visual feedback for successful programming.

MAINTENANCE

Battery Replacement

The battery-operated timer signals when batteries are running low. Replace batteries promptly to ensure continuous operation. When batteries run out, the timer's unique water-saving feature will turn the valve to the "off" position, stopping the flow of water to prevent waste.



Cleaning

Periodically inspect the inlet screen filter for debris and clean it as needed to maintain optimal water flow and prevent clogging.

TROUBLESHOOTING

- **Timer not watering:** Check battery level and replace if low. Ensure the 'How Long' dial is not set to 'OFF'. Verify water supply is on.
- **Watering inconsistently:** Low batteries can cause erratic behavior. Replace batteries. Ensure dials are set firmly to desired positions.
- **Leaks at connections:** Ensure all connections to the faucet and irrigation system are tightened securely. Use plumber's tape on threads if necessary to create a better seal. Avoid cross-threading plastic components during installation.
- **No indicator light:** Check battery installation and ensure batteries are fresh.

SPECIFICATIONS

Feature	Detail
Model Number	R675CT
Color	Black/Grey
Material	Plastic
Product Dimensions	3"D x 5"W x 6"H
Item Weight	3.19 ounces
Number of Settings	3 (Frequency, Run Time, Manual/Delay)
Power Source	Batteries (not included)
Compatibility	Garden Hose Thread (GHT)
Included Components	1 Analog Timer




WARRANTY & SUPPORT

Raindrip stands by their product and offers a 1-year, 100% satisfaction guarantee. If your product breaks, Raindrip will send you a new one for free; you only need to cover shipping and handling costs.

For further assistance or inquiries, please visit the official Raindrip website or contact their customer support.

Visit the [Raindrip Store on Amazon](#) for more products and information.



	<p>Raindrip R675CT Timer Installation and Programming Guide</p> <p>This guide provides instructions for installing and programming the Raindrip R675CT automatic water timer, including setup, frequency, run time, and troubleshooting.</p>
	<p>Raindrip Hose-end Smart Water Timer and Wi-Fi Gateway Instruction Manual</p> <p>Instruction manual for the Raindrip Hose-end Smart Water Timer and Wi-Fi Gateway, detailing installation, programming, and weather-based watering features. App-enabled for smartphone control.</p>
	<p>National Hardware Show 2021: Lawn, Garden & Outdoor Living Attendee List</p> <p>A partial attendee list for the 2021 National Hardware Show, highlighting companies participating in the Lawn, Garden & Outdoor Living sector.</p>

Documents - Raindrip – R675CT



[\[pdf\]](#) Guide Declaration of Conformity Warranty Catalog

RaindripInstltnGuide web Installation Inspiration A Better Way to Water Guide Unilog is quick easy and tool free We ve organized our parts by step Grab bag number one get started STEP 2 Connect the timer your outdoor faucet 75 ft Supply Tubing Universal Faucet Timer supply line start measuring out where you will need cut tubing water each container Hose Thread 1 Tee End Plug 50 Pre assembled 5 Wire Stakes 10 Goof Plugs 4 Feeder Lines with Circle Included in Kit No SDFSTH1P only Filter Pressure Regulator Y Connector sold separately R560DP raindrip Container Hanging Basket Timer* C1QGosWLsIS 100000775 Catalog ecx images amazon I m media na ssl assets unilogcorp 187 ITEM DOC

A Better Way to Water Installation Inspiration Guide No Tools Necessary 20-Minute Installation ... ypes of feeder lines you can use to customize water flow rates. Flower, Shrub Tree Kit 1 2 3 **R675CT**..... Universal Faucet Timer FR3050751UB Filter/Pressure Regulator R616CB.....

lang:en score:33 filesize: 6.31 M page_count: 11 document date: 2014-03-03

Warranty: Limited three year warranty from date of purchase.
(original receipt required for warranty claim)
2855 S. East Ave.
Fresno, CA 93725
Technical Service: 888-825-4716 Visit Raindrip.com/timers

Manufacturers' warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.

[\[pdf\]](#) Warranty

[click here](#) Raindrip R675CT Analog 3 Dial Water Sprinkler Timer with Rain Delay for Drip Irrigation

Garden Self Watering 61pDaU6BevS m media amazon images I |||

Manufacturers warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions. ...

lang:en score:15 filesize: 109.54 K page_count: 1 document date: 2015-04-28