

## Weber 53060001

# Weber Q2000 Liquid Propane Grill Instruction Manual

Model: Q2000 (53060001)

Brand: Weber

## PRODUCT OVERVIEW

The Weber Q2000 Liquid Propane Grill, a restyled version of the Weber Q 200, offers robust performance and sleek design. It features enhanced functional and aesthetic elements, including a larger grip handle, ergonomic side handles, sturdy cradles, and spacious fold-out side tables. Designed for versatility, its split grates allow for combined grilling and griddle cooking (griddle sold separately). This grill is suitable for camping, tailgating, or as a stationary grill in outdoor living spaces. Constructed with a seamless stainless steel burner, cast-aluminum lid, and body, it ensures durability and consistent performance. It operates with disposable 14.1 or 16.4 oz. LP cylinders (sold separately).



Figure 1: Front view of the Weber Q2000 Liquid Propane Grill with side tables extended.

## SETUP INSTRUCTIONS

The Weber Q2000 grill comes fully assembled out of the box, simplifying the initial setup process. Follow these steps to prepare your grill for first use:

1. **Unpacking:** Carefully remove the grill and all components from the packaging. Ensure all protective materials are removed.
2. **Side Table Deployment:** Extend the fold-out side tables for additional workspace. These tables provide greater rigidity

and convenience during grilling.

3. **Propane Cylinder Connection:** Connect a disposable 14.1 or 16.4 oz. LP cylinder (sold separately) to the designated connection point on the grill. Ensure a secure, leak-free connection.
4. **Drip Pan Installation:** Place the removable catch pan beneath the grill body to collect drippings for easy cleanup.



Figure 2: Connecting the disposable LP cylinder to the grill.



Figure 3: Location of the removable catch pan for easy cleanup.

## OPERATING INSTRUCTIONS

Operating your Weber Q2000 grill is straightforward, designed for reliable performance.

1. **Pre-heating:** Open the grill lid. Turn the infinite control burner valve to the high setting. Press the push-button ignition to light the burner. Allow the grill to pre-heat for approximately 10-15 minutes with the lid closed to reach desired cooking temperature.
2. **Temperature Control:** Adjust the infinite control burner valve to regulate the heat. The cast-aluminum lid and body are designed to retain heat efficiently, ensuring even cooking.
3. **Cooking:** Place food on the porcelain-enameled cast-iron cooking grates. The split grates allow for versatile cooking options.
4. **Post-Cooking:** After cooking, turn off the burner valve and disconnect the propane cylinder when the grill is cool.



Figure 4: Push-button ignition for reliable startup.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and operation of the Weber Q2000 Liquid Propane Grill.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Weber Q2000 grill.

- **Grates Cleaning:** After each use, once the grates have cooled, clean them with a grill brush to remove food residue. The porcelain-enameled cast-iron grates are designed for easy cleaning.
- **Drip Pan Emptying:** Regularly check and empty the removable catch pan to prevent grease buildup and potential flare-ups.
- **Exterior Cleaning:** Wipe down the exterior surfaces of the grill, including the lid and side tables, with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Burner Inspection:** Periodically inspect the stainless steel burner for any blockages or damage. Ensure the burner ports are clear for even flame distribution.

## TROUBLESHOOTING

If you encounter issues with your Weber Q2000 grill, refer to these common troubleshooting tips:

- **Grill Not Lighting:** Ensure the propane cylinder is properly connected and has gas. Check that the burner valve is open. If the ignition button does not spark, check the igniter electrode and wire connection.
- **Low Flame/Uneven Heat:** Verify that the propane cylinder is not low or empty. Check for any kinks in the gas hose.

- Ensure the burner ports are clear of debris.
- **Flare-ups:** Excessive flare-ups can be caused by grease buildup. Ensure the drip pan is clean and the cooking grates are free of heavy residue. Trim excess fat from meats before grilling.

SPECIFICATIONS

Feature	Detail
Brand	Weber
Model Name	53060001
Product Dimensions	24.3"D x 51.4"W x 26"H
Fuel Type	Gas (Liquid Propane)
Heating Power	12,000 BTU-per-hour
Cooking Surface Area	280 Square Inches
Burner Count	1 (Stainless Steel)
Grates Material	Porcelain-enameled Cast-Iron
Lid and Body Material	Cast Aluminum
Special Features	Push Button Ignition, Folding Side Table, Removable Catch Pan
Item Weight	42 Pounds

IMPORTANT SAFETY INFORMATION

**Proposition 65 Warning:** Handling the brass material on this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects or other reproductive harm. (Wash hands after handling this product.)

**Combustion byproducts:** Combustion byproducts produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

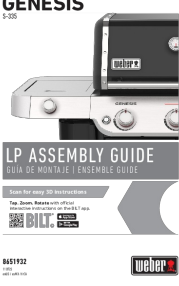 


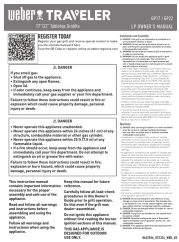 
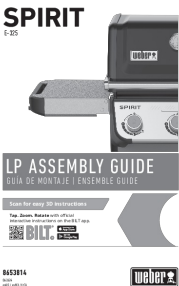 
Always read and follow all safety instructions provided in the full user manual before operating the grill.

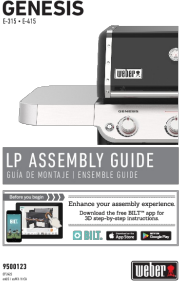 
ADDITIONAL RESOURCES

For a comprehensive guide and detailed instructions, please refer to the official User Manual (PDF):

Download User Manual (PDF)

## Related Documents - 53060001

	<p><a href="#">Weber Genesis S-335 LP Gas Grill Assembly Guide</a></p> <p>Comprehensive assembly instructions for the Weber Genesis S-335 LP Liquid Propane Gas Grill. This guide provides detailed steps, parts lists, tool requirements, and important safety information, with all content presented in English for clarity and accessibility.</p>
	<p><a href="#">Weber Spirit E-210/E-310 LP Gas Grill Assembly Guide</a></p> <p>Comprehensive assembly instructions for the Weber Spirit E-210 and E-310 Liquid Propane (LP) gas grills. This guide details required tools, lists all parts and hardware, and provides step-by-step instructions for building your grill.</p>
	<p><a href="#">Weber Spirit EX-315 SX-315 LP Gas Grill Owner's Manual</a></p> <p>Comprehensive owner's manual for the Weber Spirit EX-315 and SX-315 LP gas grills, covering safety, installation, operation, maintenance, troubleshooting, and grilling tips. Includes WEBER CONNECT technology details.</p>
	<p><a href="#">Weber Traveler 17"/22" Tabletop Griddle LP Owner's Manual</a></p> <p>Comprehensive owner's manual for the Weber Traveler 17"/22" Tabletop Griddle. Includes installation, operation, safety, maintenance, and troubleshooting instructions.</p>
	<p><a href="#">Weber Spirit E-325 LP Gas Grill Assembly Guide</a></p> <p>Step-by-step instructions for assembling your Weber Spirit E-325 LP gas grill, including parts lists, hardware identification, and assembly procedures.</p>

 <p>The image shows the cover of the Weber Genesis E-315/E-415 LP Assembly Guide. At the top, it says 'GENESIS E-315-E-415'. Below that is a photo of the grill. The title 'LP ASSEMBLY GUIDE' is prominently displayed, with 'GUÍA DE MONTAJE   ENSEMBLE GUIDE' underneath. A small graphic shows a smartphone with the Weber app, and text encourages downloading the app for step-by-step instructions. The Weber logo is at the bottom right, and the part number '9580123' is at the bottom left.</p>	<p><a href="#">Weber Genesis E-315/E-415 LP Assembly Guide</a></p> <p>Comprehensive step-by-step assembly instructions for the Weber Genesis E-315 and E-415 LP gas grills, including parts identification, assembly procedures, and important pre-assembly and post-assembly information.</p>
---	--