Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Weber /
- Weber Q1000 Liquid Propane Grill User Manual

Weber 50060001

Weber Q1000 Liquid Propane Grill User Manual

Model: 50060001

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings before operating your Weber Q1000 grill.

- **Proposition 65 Warning:** Handling the brass material on this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling this product.
- **Combustion Byproducts Warning:** Combustion byproducts produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.
- Always operate the grill outdoors in a well-ventilated area.
- Keep children and pets away from the hot grill.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Ensure all connections are tight and leak-free before lighting.

PRODUCT OVERVIEW

The Weber Q1000 Liquid Propane Grill is a compact and portable grilling solution, restyled for enhanced functionality and aesthetics. It features a durable cast-aluminum construction, making it ideal for both home use and on-the-go adventures like tailgating.



Front view of the Weber Q1000 Liquid Propane Grill with its lid closed, showcasing its compact design and sturdy base.

Key Features:

- One stainless steel burner producing 8500 BTU-per-hour for efficient heating.
- 189 square-inch total cooking area, suitable for various foods.
- Porcelain-enameled cast-iron cooking grates for even heat distribution and easy cleaning.
- Durable cast aluminum lid and body construction.
- Push-button ignition for reliable and quick starts.
- Infinite control burner valve settings for precise temperature management.
- Ergonomic side handles and sturdy front and rear cradles for portability.
- Split grates allow for a grate/griddle cooking combination (griddle sold separately).
- Uses disposable 14.1 or 16.4 oz. LP cylinders (sold separately).
- Fully assembled out of the box for immediate use.

SETUP

The Weber Q1000 grill comes fully assembled, simplifying the initial setup process. Follow these steps to prepare your grill for first use:

- 1. Unpacking: Carefully remove the grill from its packaging. Inspect for any shipping damage.
- 2. **Placement:** Place the grill on a stable, level, non-combustible surface outdoors, away from any flammable materials or structures. Ensure adequate clearance from walls and other objects.
- 3. LP Cylinder Connection:



Image showing the connection point for a disposable LP cylinder on the side of the grill.

- Ensure the control knob is in the "OFF" position.
- Screw a new 14.1 or 16.4 oz. disposable LP cylinder (sold separately) into the regulator connection on the side of the grill. Hand-tighten only. Do not overtighten.
- Check for gas leaks by applying a soapy water solution to the connection point. Bubbles indicate a leak. If a leak is detected, tighten the connection or replace the cylinder. Do not operate the grill if a leak is present.
- 4. **Burn-Off:** Before cooking for the first time, operate the grill on high for 15 minutes with the lid closed to burn off any manufacturing residues.

OPERATING THE GRILL

Lighting the Grill:

- 1. Ensure the LP cylinder is securely connected and the control knob is in the "OFF" position.
- 2. Open the grill lid.
- 3. Turn the control knob to the "START/HIGH" position.

4. Immediately press and hold the push-button igniter.



Close-up of the red push-button igniter located on the side of the grill.

- 5. Once the burner ignites, release the igniter button.
- 6. If the burner does not light within 5 seconds, turn the control knob to "OFF", wait 5 minutes for gas to dissipate, and repeat the lighting procedure.

Cooking with the Grill:

• **Preheating:** Close the lid and allow the grill to preheat for 10-15 minutes on high. The porcelain-enameled cast-iron cooking grates will retain heat effectively.



View of the durable porcelain-enameled cast-iron cooking grates, designed for even heat distribution.

• **Temperature Control:** Adjust the heat by turning the infinite control burner valve. You can achieve temperatures from low to high, suitable for various cooking needs.



The infinite control burner valve, allowing precise temperature adjustments for optimal cooking.

• Versatile Cooking: The 189 square-inch cooking area can accommodate a variety of foods, from burgers and hot dogs to larger items like pizza or chops.



A pizza being cooked on the grill, demonstrating its capacity for diverse culinary creations.



Grilled meat chops and corn on the cob, showcasing the grill's ability to cook multiple items simultaneously.

- Lid Use: Keep the lid closed as much as possible during cooking to maintain consistent temperatures and enhance flavor.
- **Griddle Option:** The split grates allow for replacing one grate with a Q 1000-series compatible griddle (sold separately) for alternative cooking methods like breakfast items.

Shutting Down the Grill:

- When finished cooking, turn the control knob to the "OFF" position.
- Allow the grill to cool completely before cleaning or moving.
- Disconnect the LP cylinder when the grill is not in use for extended periods.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your Weber Q1000 grill.

• Cooking Grates: After each use, once the grates have cooled slightly but are still warm, brush them clean with a grill brush. For deeper cleaning, the porcelain-enameled cast-iron grates can be washed with warm soapy water.

• Catch Pan: The grill features a removable catch pan for easy grease management. Regularly remove and clean the catch pan to prevent grease buildup and flare-ups.



A hand demonstrating the removal of the disposable foil catch pan from the grill for easy cleaning.

- Exterior: Wipe down the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Burner Tube:** Periodically inspect the burner tube for blockages (e.g., spider webs, food debris). Clean with a wire brush or a small wire if necessary.
- **Storage:** Store the grill in a dry, protected area when not in use, especially during off-season. If storing outdoors, use a Weber grill cover.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner won't light	No gas flow; clogged burner; faulty igniter.	Check LP cylinder connection and gas level. Clean burner ports. Ensure igniter sparks.

Problem	Possible Cause	Solution
Low heat output	Low gas supply; regulator issue; clogged burner.	Replace LP cylinder. Reset regulator (refer to LP cylinder instructions). Clean burner.
Flare-ups	Excessive grease buildup; high heat.	Clean catch pan and cooking grates regularly. Reduce heat setting.
Uneven heating	Clogged burner ports; warped grates.	Clean burner ports. Inspect grates for damage.

SPECIFICATIONS

Feature	Detail
Brand	Weber
Model Name	Q1000 (50060001)
Fuel Type	Liquid Propane (disposable cylinders)
Heat Output	8500 BTU-per-hour
Cooking Area	189 sq. inches
Grates Material	Porcelain-enameled Cast-Iron
Body/Lid Material	Cast Aluminum
Ignition Type	Push-button
Dimensions (Lid Closed)	16.5"D x 27"W x 14.5"H
Item Weight	27.5 Pounds
Assembly Required	No (fully assembled)



Detailed diagram illustrating the dimensions and cooking area of the Weber Q1000 grill.

WARRANTY INFORMATION

The Weber Q1000 Liquid Propane Grill comes with a5-year limited warranty. Please retain your proof of purchase for warranty claims. For full details on warranty coverage, terms, and conditions, refer to the official Weber website or the documentation included with your product.

SUPPORT AND ADDITIONAL RESOURCES

For further assistance, detailed instructions, or to purchase accessories, please refer to the following resources:

- Official User Manual (PDF): Download PDF Manual
- Weber Official Website: Visit weber.com for product registration, FAQs, recipes, and customer service contact information.
- Compatible Accessories: Consider the Weber Q 1000-series compatible griddle or the Weber Portable Cart model

© 2024 Weber-Stephen Products LLC. All rights reserved.

Related Documents - 50060001



Weber Genesis S-335 LP Gas Grill Assembly Guide

Comprehensive assembly instructions for the Weber Genesis S-335 LP Liquid Propane Gas Grill. This guide provides detailed steps, parts lists, tool requirements, and important safety information, with all content presented in English for clarity and accessibility.



Weber Spirit E-210/E-310 LP Gas Grill Assembly Guide

Comprehensive assembly instructions for the Weber Spirit E-210 and E-310 Liquid Propane (LP) gas grills. This guide details required tools, lists all parts and hardware, and provides step-by-step instructions for building your grill.



SPIRIT

Weber Spirit EX-315 SX-315 LP Gas Grill Owner's Manual

Comprehensive owner's manual for the Weber Spirit EX-315 and SX-315 LP gas grills, covering safety, installation, operation, maintenance, troubleshooting, and grilling tips. Includes WEBER CONNECT technology details.



Weber Flame iQ Owner's Guide for Baby Q

Comprehensive owner's guide for the Weber Flame iQ accessory, detailing its features, operation, safety precautions, and troubleshooting for Weber Baby Q models Q1000 and Q1200.



Weber SB38 S Built-In Gas Grill Installation Guide

Comprehensive installation guide for the Weber SB38 S Built-In Gas Grill, covering safety, planning, construction, gas supply, and assembly requirements for natural gas installations.



Weber Spirit E-325 LP Gas Grill Assembly Guide

Step-by-step instructions for assembling your Weber Spirit E-325 LP gas grill, including parts lists, hardware identification, and assembly procedures.