



[Manuals.plus](#) /

› [Eurmax](#) /

› Eurmax NOMATTER 10x10ft Pop Up Canopy Tent Instruction Manual

Eurmax NOMATTER 10x10ft

Eurmax NOMATTER 10x10ft Pop Up Canopy Tent Instruction Manual

Model: NOMATTER 10x10ft

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Eurmax NOMATTER 10x10ft Pop Up Canopy Tent. This manual provides essential information for the safe and effective setup, operation, and maintenance of your canopy. Designed for ease of use and durability, this canopy offers reliable shelter for various outdoor activities.



Figure 1: Fully assembled Eurmax NOMATTER 10x10ft Pop Up Canopy Tent.

Key Features:

- **Durable Construction:** Features a high-grade engineered frame with powder-coated finish for rust resistance.
- **Maximized Headroom:** Unique design eliminates central cross bars, providing a spacious interior.
- **Enhanced Protection:** Vented top design for improved airflow and UPF 50+ UV protection. Crafted from extra-thick, water-resistant polyester material.
- **Easy Setup:** Designed for quick assembly, often by one person, with pinch-free buttons for leg height adjustment.
- **Portability:** Includes a heavy-duty roller bag for convenient transport and storage.

2. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your Eurmax NOMATTER canopy tent. While designed for one-person setup, having an additional person can make the process even smoother.

1. **Unpack the Frame:** Remove the canopy frame from its roller bag and place it in the desired setup location.
2. **Partially Open the Frame:** Gently pull the outer legs of the frame outwards until it is about halfway open.
3. **Attach the Top Cover:** Drape the canopy top cover over the partially opened frame. Secure the cover to the frame using the attached straps.
4. **Fully Extend the Frame:** From underneath the canopy, push up on the central knob until the frame fully locks into place.
5. **Extend and Adjust Legs:** Press the pinch-free buttons on each leg and extend them to your desired height (6FT, 6.3FT, or 6.6FT). Ensure all legs are securely locked.
6. **Secure the Canopy:** For stability, especially in windy conditions, use the provided sandbags (fill with sand) and stakes to anchor the canopy to the ground.

Eurmax Canopy

The **#1** Canopy & Patio Umbrella
Factory Store in North America

HEADQUARTER:

4183 Temple City Blvd, Suite B,
El Monte, CA 91731

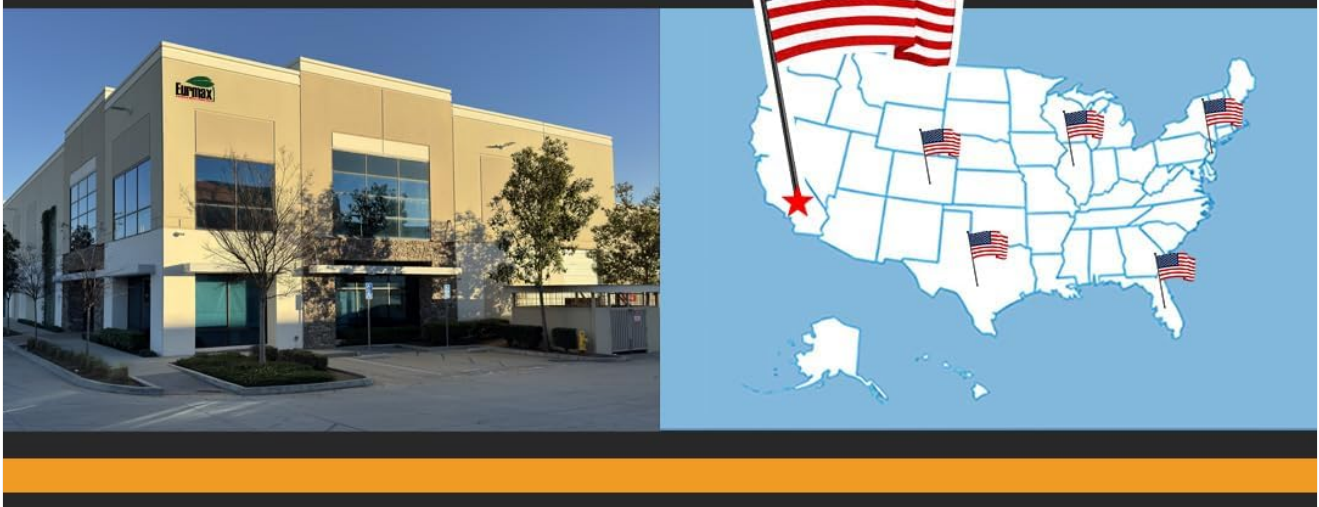


Figure 2: Visual guide for the three main steps of canopy setup.

Setup Video Guide:

Your browser does not support the video tag.

3. OPERATING INSTRUCTIONS

Once your canopy is set up, operating it primarily involves adjusting its height and ensuring its stability during use.

Adjusting Height:

Each leg of the canopy features a pinch-free button mechanism. To adjust the height:

1. Locate the red pinch-free button on each leg.
2. Press the button and slide the inner leg up or down to the desired height setting.
3. Ensure the button clicks into place, indicating the leg is securely locked at the new height.

Stability and Usage:

- Always use the provided sandbags (filled with sand) and stakes to secure the canopy to the ground, especially in outdoor environments.
- Avoid using the canopy in extreme weather conditions such as heavy winds, storms, or snow.
- Do not hang heavy objects from the canopy frame.
- Regularly check all connections and locking mechanisms to ensure they are secure during use.

EASY SET UP AND TAKE DOWN

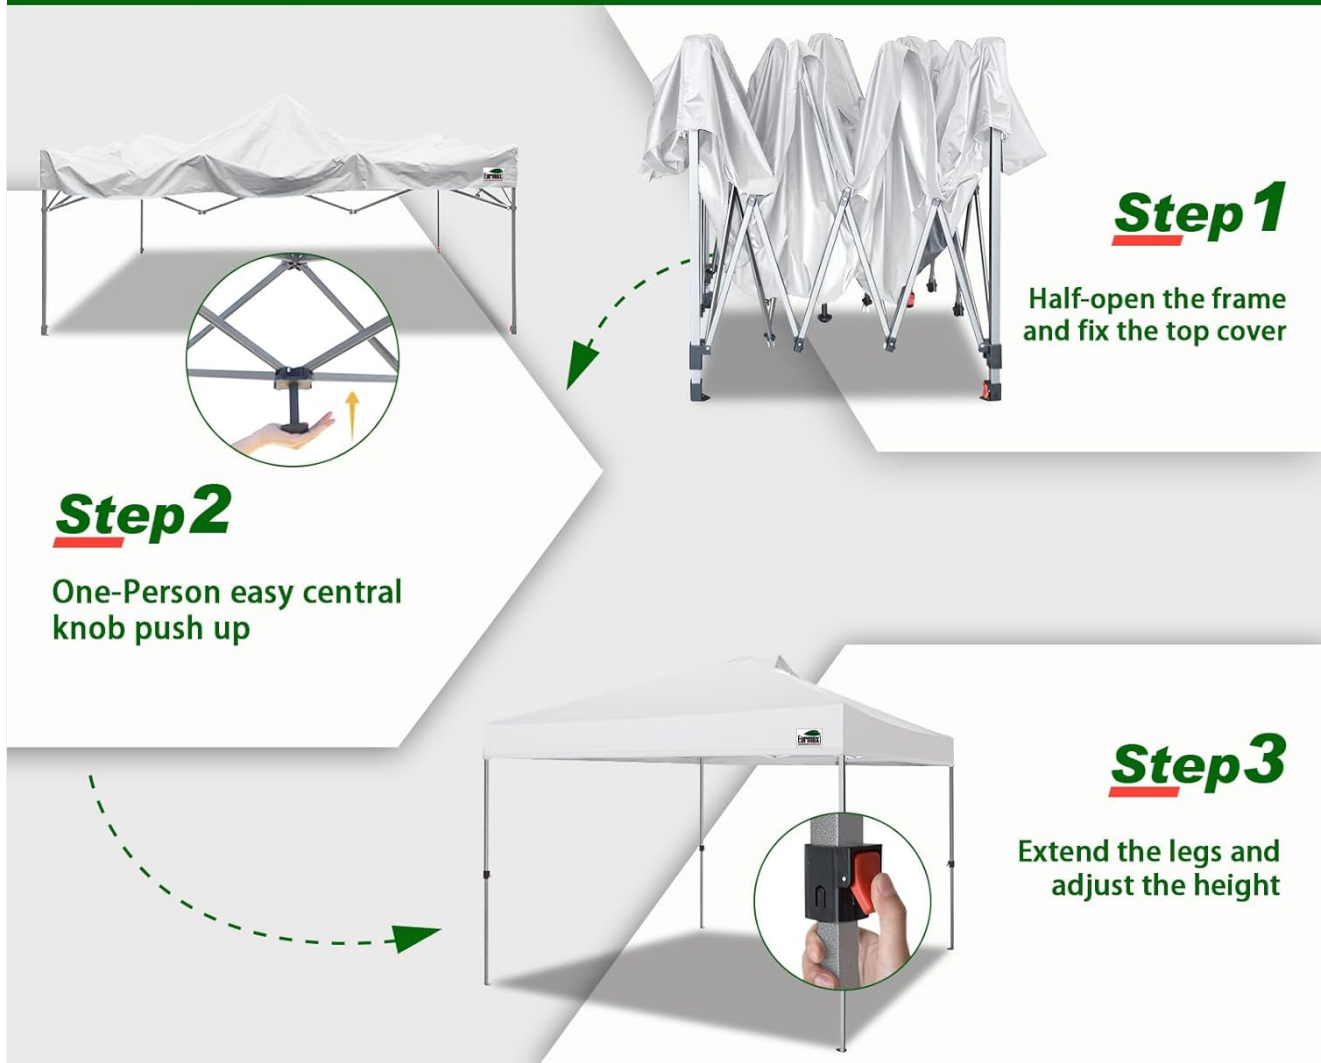


Figure 3: Canopy in use, providing shade for an outdoor gathering.

4. MAINTENANCE

Proper maintenance will extend the lifespan of your Eurmax NOMATTER canopy tent.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Avoid harsh chemicals that may damage the material.
- **Drying:** Ensure the frame and canopy fabric are completely dry before storing to prevent mold, mildew, and rust.
- **Storage:** Store the canopy in its heavy-duty roller bag in a cool, dry place away from direct sunlight when not in use.
- **Inspection:** Periodically inspect the frame, fabric, and all components for any signs of wear, damage, or manufacturing defects. Address any issues promptly.
- **Sun Exposure:** While the canopy offers UV protection, prolonged exposure to intense sunlight can degrade the fabric over time.

5. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Difficulty opening/closing frame	Frame not aligned; debris in joints; legs not fully retracted.	Ensure frame is on a flat surface. Check for obstructions. Apply light lubricant to joints if needed. Ensure legs are fully retracted before folding.
Canopy unstable in wind	Insufficient anchoring.	Always use all four sandbags (filled) and stakes. Do not use in high winds.
Water pooling on canopy top	Canopy not fully extended or legs uneven.	Ensure the frame is fully locked and all legs are extended to the same height.

6. SPECIFICATIONS

Detailed specifications for your Eurmax NOMATTER 10x10ft Pop Up Canopy Tent:

- **Brand:** Eurmax
- **Model Number:** Eurmax Smart (Basic)
- **Material:** Polyester (Canopy), Alloy Steel (Frame)
- **Color:** White
- **Item Weight:** 36 Pounds
- **Item Dimensions (L x W x H):** 120"L x 120"W x 103"H
- **Floor Area:** 100 Square Feet
- **UV Protection:** UPF 50+ UV Protection
- **Water Resistance Level:** Water Resistant
- **Closure Type:** Hook & Loop (for securing canopy to frame)
- **Included Components:** Frame, Top Cover, Heavy Duty Roller Bag, 4 Weight Bags (sand not included)
- **Required Assembly:** No (Pop-up design)



Figure 4: Canopy dimensions and adjustable height options.

7. WARRANTY AND SUPPORT

Your Eurmax NOMATTER Pop Up Canopy Tent comes with a **One Year Warranty** from the manufacturer, Eurmax.

Replacement Parts:

Eurmax Canopy is committed to customer satisfaction. Unlike many overseas sellers, Eurmax stocks all replacement parts in the US. For any replacement parts or inquiries, please visit the official Eurmax website or contact their customer service directly.

Contact Information:

For further assistance, please refer to the contact details provided on the official Eurmax USA website:
www.eurmax.com

