

[Manuals.plus](#) /

> [Nokia](#) /

> Nokia 108 Dual SIM User Manual

## Nokia 108

# Nokia 108 Dual SIM User Manual

Model: 108

## INTRODUCTION

The Nokia 108 Dual SIM is a classic feature phone designed for essential communication needs. It combines a sturdy build with a user-friendly interface, making it suitable for everyday use. This manual provides comprehensive instructions for setting up, operating, and maintaining your device.

## WHAT'S IN THE BOX

- Nokia 108 Handset
- Battery (950 mAh)
- Charger
- Headset
- Visual User Guide (this document)

## PRODUCT OVERVIEW



**Figure 1:** Front view of the Nokia 108 Dual SIM phone. The screen displays "NOKIA" at the top, signal strength, battery indicator, and "1.88.10 MHz" with "87.5" and "108" indicating FM radio frequency range. Below the screen are navigation buttons and a standard numeric keypad with call, end call, and special function keys.

The Nokia 108 features a compact design with a 1.8-inch QQVGA LCD display. It includes a traditional numeric keypad for easy dialing and text input. Key components include the display, navigation keys, call/end keys, and the alphanumeric keypad. The device also integrates a camera, FM radio, and a flashlight.

## SETUP

### 1. Inserting SIM Cards

The Nokia 108 supports dual mini SIM cards. To insert SIM cards:

1. Remove the back cover of the phone by gently prying it open from the notch.
2. Remove the battery if it is already inserted.
3. Locate the SIM card slots. Insert the SIM cards into their respective slots with the gold contacts facing down and the cut corner aligned correctly.
4. Ensure the SIM cards are securely in place.

### 2. Inserting the Battery

To insert the 950mAh battery:

1. Align the battery's gold contacts with the contacts in the phone's battery compartment.
2. Gently press the battery down until it clicks into place.

### 3. Inserting a Memory Card (MicroSD)

The phone supports a microSD card up to 32GB for additional storage.

1. Locate the memory card slot, usually near the SIM card slots.
2. Insert the microSD card with the gold contacts facing down until it locks into place.

## 4. Charging the Battery

Before first use, fully charge the battery.

1. Connect the charger to a power outlet.
2. Connect the charger cable to the charging port on your phone.
3. The battery indicator on the screen will show charging progress.
4. Once fully charged, disconnect the charger.

## OPERATING INSTRUCTIONS

### Power On/Off

- To power on, press and hold the End key (red button) until the phone vibrates and the screen lights up.
- To power off, press and hold the End key until the power off prompt appears, then confirm.

### Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the Call key (green button) to initiate the call.
3. To end a call, press the End key.
4. To call from contacts, navigate to "Contacts", select a contact, and press the Call key.

### Sending Messages

1. Go to "Menu" > "Messaging" > "Create message".
2. Type your message using the keypad.
3. Enter the recipient's number or select from contacts.
4. Select "Send".

### Using the Camera

The phone features a 0.3MP primary camera.

1. Go to "Menu" > "Camera".
2. Frame your shot using the screen.
3. Press the center navigation key to capture the image.

### Using the FM Radio

The phone includes an FM radio. A headset must be connected to act as an antenna.

1. Connect the headset to the 3.5mm audio jack.
2. Go to "Menu" > "Music" > "FM radio".
3. Use the navigation keys to tune to stations or auto-scan.

### Playing Music

The phone supports MP3 playback.

1. Ensure music files are stored on the memory card.
2. Go to "Menu" > "Music" > "Music player".
3. Browse and select your desired track.

## Using Bluetooth

Bluetooth allows for wireless connection to compatible devices.

1. Go to "Menu" > "Settings" > "Connectivity" > "Bluetooth".
2. Turn Bluetooth "On".
3. Select "Paired devices" or "Search for audio accessories" to connect.

## Using the Flashlight

The phone includes a built-in flashlight.

- To turn on/off, typically press and hold the 'Up' navigation key or find it in the "Menu" > "Extras" > "Flashlight".

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Do not expose the battery to extreme heat or cold. Avoid fully discharging the battery frequently.
- **Software Updates:** Keep your phone's software updated if updates become available, though this model typically does not receive frequent updates.

## TROUBLESHOOTING

| Problem                             | Solution   |
|-------------------------------------|--|
| Phone does not power on.            | Ensure the battery is correctly inserted and charged. Connect the charger and try again.   |
| Cannot make or receive calls.       | Check if SIM cards are properly inserted. Verify network signal strength. Contact your service provider if the issue persists.       |
| Poor battery life.                  | Ensure the battery is fully charged. Reduce screen brightness. Close unused applications. Battery performance may degrade over time. |
| Cannot connect to Bluetooth device. | Ensure Bluetooth is enabled on both devices. Make sure the other device is in pairing mode. Try restarting both devices.             |
| Memory card not detected.           | Ensure the memory card is correctly inserted. Try reinserting it. Test with another compatible memory card if available.             |

## SPECIFICATIONS

| Feature    | Detail |
|------------|--------|
| Model Name | 108    |

| Feature            | Detail   |
|--------------------|--|
| Screen Size        | 1.8 Inches (QQVGA LCD, 160 x 128 pixels, 64K colors) |
| RAM                | 4 MB   |
| Internal Memory    | Expandable up to 32GB (MicroSD)                      |
| SIM Type           | Dual Mini SIM (GSM+GSM)                              |
| Camera             | 0.3MP Primary Camera (fixed focus, 2x digital zoom)  |
| Battery Capacity   | 950 mAh  |
| Talk Time          | Up to 13.8 hours                                     |
| Standby Time       | Up to 31 days (744 hours)                            |
| Connectivity       | Bluetooth, GSM (900/1800 MHz)                        |
| Audio Jack         | 3.5 mm   |
| Special Features   | Dual SIM, FM Radio, Music Player, Flashlight         |
| Dimensions (LxWxH) | 110 x 47 x 14 mm                                     |
| Item Weight        | 160 g  |

## WARRANTY AND SUPPORT

Your Nokia 108 comes with a manufacturer's warranty:

- **Device Warranty:** 1 year manufacturer warranty from the date of purchase.
- **In-box Accessories Warranty:** 6 months manufacturer warranty for in-box accessories, including batteries, from the date of purchase.

For technical support, service, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official Nokia support website.