

VESTEL 3662615087875

VESTEL Remote Control User Manual

FOR TOSHIBA 24W1333G (MODEL 3662615087875)

Introduction

Thank you for choosing the VESTEL remote control. This manual provides essential instructions for the setup, operation, and maintenance of your new remote control, designed for seamless compatibility with your TOSHIBA 24W1333G television. This is an original remote control and requires no complex programming.

Setup

Follow these simple steps to begin using your remote control:

1. **Unpack the Remote Control:** Carefully remove the remote control from its packaging.
2. **Install Batteries:**
 - Locate the battery compartment on the back of the remote control.
 - Slide open the battery compartment cover.
 - Insert two 1.5V AAA (LR03) batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
 - Close the battery compartment cover securely.
3. **Ready for Use:** The remote control is an original replacement and does not require any pairing or programming. It is ready for immediate use with your TOSHIBA 24W1333G TV.



Image: The VESTEL remote control, showing the overall design and the location of the battery compartment on the rear.

Operating Instructions

The VESTEL remote control utilizes infrared (IR) technology. Ensure a clear line of sight between the remote control and the IR receiver on your television for optimal performance.

- **Power On/Off:** Press the **POWER** button to turn your television on or off.
- **Channel Selection:** Use the number buttons (0-9) to directly enter channel numbers, or use the **CHANNEL UP/DOWN** buttons to navigate through channels.
- **Volume Control:** Adjust the volume using the **VOLUME UP/DOWN** buttons. Press the **MUTE** button to temporarily silence the audio.
- **Input/Source:** Press the **INPUT** or **SOURCE** button to cycle through available input sources (e.g., HDMI, AV, TV).
- **Navigation:** Use the directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) and the **OK/ENTER** button to navigate menus and confirm selections.

- **Menu Access:** Press the **MENU** button to access your TV's main menu.

Maintenance

- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones of the same type (1.5V AAA LR03).
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

Troubleshooting

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Control Not Responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's IR receiver.
 - Make sure you are within the maximum operating range (up to 10 meters).
- **Buttons Not Working:**
 - Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
- **Intermittent Operation:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

Specifications

Brand	VESTEL
Model Number	3662615087875
Compatible TV Model	TOSHIBA 24W1333G
Connectivity Technology	Infrared (IR)
Number of Buttons	25
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	2 x 1.5V AAA (LR03)
Special Features	Ergonomic Design

Warranty and Support

This VESTEL remote control comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

For warranty claims or technical support, please contact your retailer or the manufacturer directly. Please have your proof of purchase and the remote control's model number (3662615087875) available when seeking assistance.