

Coleman 2000020951

Coleman Portable Butane Stove

Model: 2000020951

1. SAFETY INFORMATION

Read all instructions and warnings carefully before using this product. Failure to follow these instructions may result in fire, explosion, serious injury, or death.

- **FOR OUTDOOR USE ONLY:** Never operate this appliance indoors, in an enclosed area, or in a vehicle. Ensure adequate ventilation.
- **CARBON MONOXIDE HAZARD:** This appliance can produce carbon monoxide, which has no odor. Using it in an enclosed space can kill you.
- Keep flammable materials, gasoline, and other flammable vapors and liquids away from the stove.
- Do not leave the stove unattended while in operation.
- Keep children and pets away from the stove during operation.
- Surfaces can become extremely hot. Use caution and wear protective gloves if necessary.
- Use only Coleman 8.8 oz. butane gas cylinders with this stove.

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

2. PRODUCT OVERVIEW

The Coleman Portable Butane Stove is designed for convenient outdoor cooking. It features a single burner with matchless ignition and adjustable heat control, making it suitable for various cooking tasks. The stove is compact and comes with a durable carrying case for easy transport and storage.



Image: Top view of the Coleman Portable Butane Stove, showing the burner grate and control knob.



Image: The black plastic carrying case for the Coleman Portable Butane Stove.

Key Features:

- 7,650 total BTUs of cooking power.
- Instastart ignition for matchless lighting.
- Adjustable burner for precise temperature control.
- Durable porcelain-coated grate for easy cleaning.
- Rust-proof aluminum burner.
- Large stable base accommodates up to a 10-inch pan.
- Includes a convenient carrying case.

3. SETUP INSTRUCTIONS

3.1 Unpacking and Placement

1. Remove the stove from its carrying case.
2. Place the stove on a firm, level, non-combustible surface. Ensure there is adequate clearance from combustible materials (minimum 24 inches from sides and back, 48 inches from top).

3.2 Fuel Canister Installation

This stove uses 8.8 oz. butane gas cylinders (sold separately).

1. Ensure the control knob is in the "OFF" position.
2. Open the fuel compartment door located on the side of the stove.
3. Align the collar of the butane canister with the guide in the fuel compartment.
4. Insert the canister into the compartment, ensuring the notch on the canister collar aligns with the tab on the stove's regulator.
5. Push the fuel lock lever down to secure the canister in place. You should hear a click.
6. Close the fuel compartment door.



Image: The Coleman Portable Butane Stove with the fuel compartment open, showing a butane canister being inserted and locked into position.

4. OPERATING INSTRUCTIONS

4.1 Lighting the Stove

1. Ensure the fuel canister is correctly installed and the compartment door is closed.
2. Turn the control knob counter-clockwise past the "MAX" position until you hear a click. This activates the Instastart ignition and lights the burner.
3. If the burner does not light on the first attempt, turn the knob back to "OFF" and repeat the ignition process.



Image: A close-up view of the control knob on the Coleman Portable Butane Stove, showing the 'OFF/ARRÊT', 'MIN', and 'MAX/IGNITION/ALLUMAGE' settings.

4.2 Adjusting the Flame

Once lit, rotate the control knob to adjust the flame intensity. Turn towards "MIN" for a lower flame and towards "MAX" for a higher flame. The adjustable burner provides precise temperature control for various cooking needs.



Image: The Coleman Portable Butane Stove with the burner ignited, showing a blue flame.



Image: The Coleman Portable Butane Stove in active use, with a pan of vegetables cooking on the burner.



Image: The Coleman Portable Butane Stove with a frying pan placed on its burner grate, ready for cooking.

4.3 Shutting Down the Stove

1. Turn the control knob clockwise to the "OFF" position. The flame should extinguish.
2. Allow the stove to cool completely before handling or storing.
3. After use, open the fuel compartment door and push the fuel lock lever up to release the butane canister. Remove the canister and replace its cap.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning ensures optimal performance and extends the life of your stove.

1. Ensure the stove is completely cool and the fuel canister is removed before cleaning.
2. The porcelain-coated grate can be removed for easy cleaning. Wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Wipe the enameled steel exterior with a damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
4. The aluminum burner is rust-proof and generally requires minimal cleaning. Ensure burner ports are clear of debris.



Image: A close-up view of the burner grate and the aluminum burner head on the Coleman Portable Butane Stove.

5.2 Storage

Store the stove in its original carrying case in a cool, dry place, away from direct sunlight and heat sources. Always remove the butane canister before storing the stove.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stove does not light.	<ul style="list-style-type: none"> Fuel canister not properly installed. Fuel canister empty. Ignition mechanism faulty. 	<ul style="list-style-type: none"> Ensure canister is fully inserted and locked. Replace with a new butane canister. Contact customer support if ignition fails consistently.
Weak or inconsistent flame.	<ul style="list-style-type: none"> Low fuel level. Burner ports clogged. Cold ambient temperature. 	<ul style="list-style-type: none"> Replace fuel canister. Clean burner ports (ensure stove is cool). Butane performance decreases in cold weather. Consider a different fuel type for extreme cold.
Gas odor detected.	<ul style="list-style-type: none"> Loose fuel connection. Damaged fuel canister. 	<ul style="list-style-type: none"> Immediately turn off stove. Check fuel canister connection. Remove canister and inspect for damage. Do not use damaged canisters. Move to a well-ventilated area.

7. SPECIFICATIONS

Brand: Coleman

Model Number: 2000020951

Fuel Type: Butane

Power Source: Butane

Maximum Energy Output: 7650 British Thermal Units (BTUs)

Material: Synthetic (Enameled Steel Exterior, Aluminum Burner, Porcelain-Coated Grate)

Product Dimensions (L x W x H): 20" x 12" x 4"

Item Weight: 4.7 Pounds

Number of Items: 1

Included Components: Coleman Butane Instastart Stove, Carrying Case

UPC: 076501094626

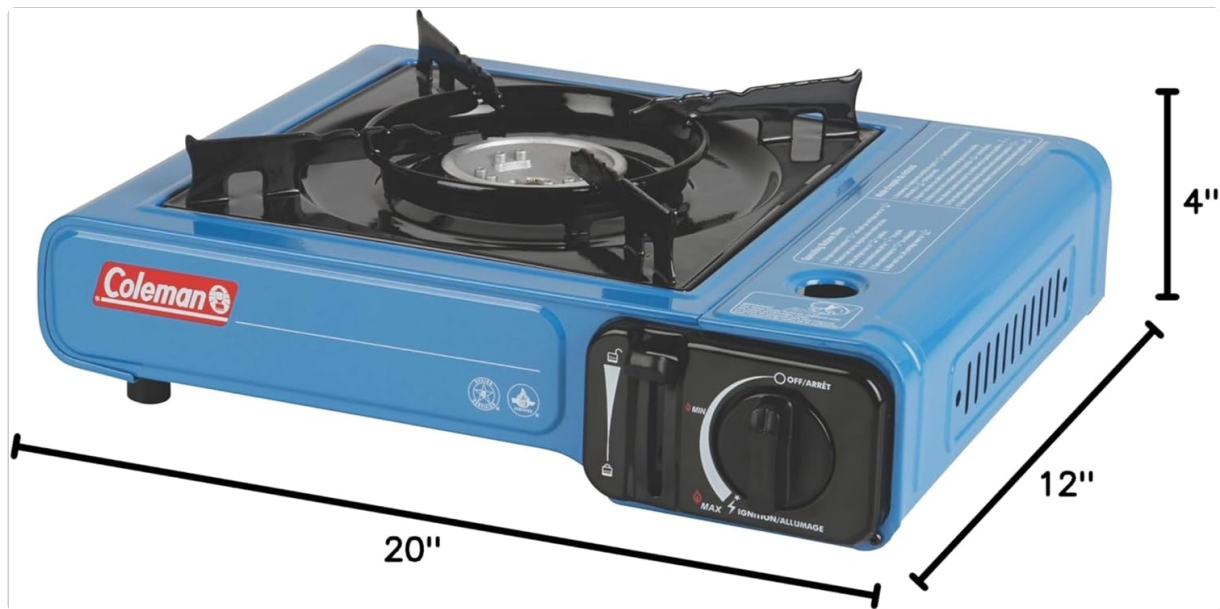


Image: Diagram showing the dimensions of the Coleman Portable Butane Stove: 20 inches in length, 12 inches in width, and 4 inches in height.

8. WARRANTY INFORMATION

This Coleman Portable Butane Stove is covered by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For specific terms, conditions, and to make a warranty claim, please refer to the warranty documentation included with your product or contact Coleman customer support.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Coleman Portable Butane Stove, please contact Coleman customer service. Contact information can typically be found on the Coleman official website or in the packaging materials.

Online Resources: Visit the official Coleman website for FAQs, product registration, and additional support resources.