

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Miele](#) /
- > [Miele SET220 Electric Telescopic Wand Instruction Manual](#)

Miele SET220

Miele SET220 Electric Telescopic Wand

Model: SET220 (Part No. 41996432USA)

Instruction Manual

1. PRODUCT OVERVIEW

The Miele SET220 Electric Telescopic Wand is designed to provide a secure and efficient connection between your vacuum cleaner's electrical hose and a compatible power head. Constructed with a durable stainless steel exterior, this wand features easy-to-use locks and grips, ensuring reliable extension capabilities and a long service life.



Image 1.1: The Miele SET220 Electric Telescopic Wand, showcasing its stainless steel construction and extended form.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using the Miele SET220 Electric Telescopic

Wand. Retain this manual for future reference.

- Always disconnect the vacuum cleaner from the power supply before attaching or detaching the wand or any accessories.
- Ensure all connections are secure before operating the vacuum cleaner.
- Do not use the wand if it is damaged or if any electrical components are exposed.
- Keep hands and clothing clear of moving parts, especially when extending or retracting the wand.
- This wand is designed for household use with compatible Miele vacuum cleaners and power heads only.

3. PACKAGE CONTENTS

Verify that all items are present in the package. If any items are missing or damaged, contact Miele customer support.

- Miele SET220 Electric Telescopic Wand (1 unit)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Follow these steps to properly assemble and connect your Miele SET220 Electric Telescopic Wand:

1. **Prepare the Vacuum:** Ensure your Miele vacuum cleaner is unplugged from the electrical outlet before beginning assembly.
2. **Connect to Hose:** Take the end of the electrical hose from your vacuum cleaner and align it with the top connection point of the SET220 wand. Push firmly until it clicks securely into place. Ensure the electrical contacts are properly aligned for power transmission.
3. **Attach Power Head:** Take your compatible Miele power head and align its connection point with the bottom end of the SET220 wand. Push firmly until it clicks securely into place. Verify that the electrical connection is established for the power head to function.
4. **Extend the Wand:** To extend the telescopic wand, locate the release button or lever (typically near the top connection). Press or slide it, then gently pull the lower section of the wand downwards to extend it to your desired length. Release the button/lever to lock it in position.
5. **Retract the Wand:** To retract, press or slide the release button/lever again and gently push the lower section upwards until it is fully retracted or at your desired shorter length. Release the button/lever to lock.

5. OPERATING INSTRUCTIONS

Once assembled, the Miele SET220 Electric Telescopic Wand facilitates the operation of your Miele vacuum cleaner with a power head.

- **Power Connection:** The wand provides the necessary electrical connection from the vacuum hose to the power head, allowing the power head's motor to operate.
- **Adjusting Length:** Adjust the wand's length as described in Section 4, Step 4, to suit your height and the cleaning task. A comfortable length reduces strain during use.
- **Cleaning:** Operate your vacuum cleaner as per its own instruction manual. The wand acts as a conduit for suction and power to the attached power head.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Miele SET220 Electric Telescopic Wand.

- **Cleaning:** Wipe the exterior of the wand with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no moisture enters the electrical connections.
- **Connection Points:** Periodically inspect the connection points for any debris, dust, or damage. Clean gently with a dry cloth or soft brush if necessary.
- **Storage:** Store the wand in a dry place, away from extreme temperatures. It can be stored in its retracted position to save space.
- **Damage Inspection:** Regularly check the wand for any signs of wear, cracks, or damage to the stainless steel or internal wiring. If damage is found, discontinue use and contact Miele service.

7. TROUBLESHOOTING

If you encounter issues with your Miele SET220 Electric Telescopic Wand, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Power head not operating	Loose electrical connection between wand and hose/power head.	Ensure both ends of the wand are securely connected and clicked into place. Check for debris in connections.
Wand not extending/retracting smoothly	Debris or dirt inside the telescopic mechanism.	Clean the exterior of the wand. Do not force the mechanism. If persistent, contact service.
Wand feels loose or wobbly	Internal locking mechanism wear or damage.	Discontinue use and contact Miele customer service for inspection or replacement.

8. SPECIFICATIONS

Brand	Miele
Model Number	41996432USA (SET220)
Item Weight	1.6 pounds
Package Dimensions	23.8 x 3.1 x 2.1 inches
ASIN	B00FH2DZUI
Batteries Required	No
Compatible System Power Source	Corded Electric
Compatible System Voltage	220 Volts
Compatible System Wattage	100 watts
Compatible System Filter Type	Cartridge

9. WARRANTY AND SUPPORT

Miele products are manufactured to the highest quality standards. For specific warranty information regarding your Miele SET220 Electric Telescopic Wand, please refer to the warranty card included with your original vacuum cleaner purchase or visit the official Miele website.

For technical support, service, or to order replacement parts, please contact Miele Customer Service:

- **Website:** www.mieleusa.com
- **Phone:** Refer to your regional Miele website for local contact numbers.

Please have your model number (41996432USA) and purchase date ready when contacting support.