

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEC](#) /

› [NEC NP-V260 DLP Projector Instruction Manual](#)

NEC NP-V260

NEC NP-V260 DLP Projector Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your NEC NP-V260 DLP Projector. Please read these instructions thoroughly before using the projector and retain them for future reference. This projector is designed for presenting high-definition content with 2600 ANSI lumens brightness.

2. SETUP

2.1 Unpacking and Contents

Carefully remove the projector and all accessories from the packaging. Verify that all components are present:

- NEC NP-V260 DLP Projector
- Power Cord
- Remote Control (if included)
- User Manual (this document)

2.2 Projector Placement

Place the projector on a stable, level surface or mount it securely. Ensure adequate ventilation around the projector to prevent overheating. Maintain a suitable distance from the screen for the desired image size.

2.3 Connecting Power

1. Connect the power cord to the projector's AC inlet.
2. Plug the other end of the power cord into a grounded electrical outlet.

2.4 Connecting Input Sources

The NEC NP-V260 supports various input sources. Connect your device to the appropriate port:

- **HDMI:** For high-definition digital video and audio.
- **USB:** For connecting USB devices or for firmware updates.
- **Network (Wired & Wireless):** For network control and content streaming, if supported by your model.

2.5 Initial Power-On

Press the power button on the projector or remote control to turn on the unit. The power indicator light will change color, and the projector lamp will illuminate.

2.6 Focus and Zoom Adjustment



This image displays the top panel of the NEC NP-V260 projector. Visible features include the focus and zoom rings on the lens, the NEC logo, a warning label for lamp type NP18LP, and the control panel with menu navigation buttons, source selection, and power button.

Adjust the focus ring around the lens until the projected image is sharp and clear. Use the zoom ring to adjust the image size to fit your screen.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The projector features an on-board control panel. The main controls include:

- **Power Button:** Turns the projector on or off.
- **Source Button:** Cycles through available input sources (HDMI, USB, Network).
- **Menu Button:** Accesses the On-Screen Display (OSD) menu.
- **Navigation Buttons (Up/Down/Left/Right):** Used to navigate through OSD menus.
- **Enter Button:** Confirms selections in the OSD menu.
- **Exit Button:** Exits the current OSD menu or returns to the previous level.

3.2 Navigating the On-Screen Display (OSD)

Press the **Menu** button to open the OSD. Use the navigation buttons to highlight options and the **Enter** button to select. Adjust settings such as picture mode, aspect ratio, and keystone correction.

3.3 Adjusting Picture Settings

Within the OSD, navigate to the 'Picture' or 'Image' menu to adjust:

- **Brightness:** Controls the overall lightness or darkness of the image.
- **Contrast:** Adjusts the difference between the lightest and darkest parts of the image.
- **Color:** Modifies the intensity of colors.
- **Tint:** Adjusts the balance between red and green colors (NTSC only).
- **Sharpness:** Enhances or softens image edges.

- **Aspect Ratio:** Selects the display format (e.g., 4:3, 16:9, Auto).

3.4 Shutting Down the Projector

Press the power button twice (or as indicated by the on-screen prompt) to safely shut down the projector. Allow the projector to cool down completely before unplugging or moving it.

4. MAINTENANCE

4.1 Cleaning the Lens

Gently wipe the projector lens with a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive cleaners or excessive force.

4.2 Cleaning the Air Filter

Regularly clean the air filter to ensure proper ventilation and prevent overheating. Refer to the projector's specific instructions for filter removal and cleaning. A clogged filter can significantly reduce lamp life and projector performance.

4.3 Lamp Replacement

The projector lamp (Type: NP18LP) has a finite lifespan. When the lamp indicator light illuminates or the image becomes dim, it is time to replace the lamp. Always use genuine NEC replacement lamps. Refer to the detailed lamp replacement procedure in the full user manual for safety precautions and steps.

4.4 Storage

When not in use for extended periods, store the projector in a cool, dry place, protected from dust and extreme temperatures. Use the original packaging or a protective case if available.

5. TROUBLESHOOTING

If you encounter issues with your projector, consult the following common troubleshooting steps:

- **No Image:** Ensure the power cord is securely connected, the projector is turned on, and the correct input source is selected. Check the connection cable between the projector and the source device.
- **Blurry Image:** Adjust the focus ring on the lens. Ensure the projector is placed at an appropriate distance from the screen.
- **No Sound:** Verify that the audio cable is connected (if using an analog input), the volume is turned up on both the projector and the source device, and the correct audio input is selected. HDMI connections typically carry audio automatically.
- **Projector Overheating:** Ensure air vents are not blocked. Clean the air filter. Operate the projector in a well-ventilated area.
- **Lamp Indicator Light On:** This indicates the lamp is nearing its end of life or has failed. Replace the lamp (Type: NP18LP).

For more complex issues, contact NEC customer support or a qualified service technician.

6. SPECIFICATIONS

Feature	Specification
Model	NP-V260

Brand	NEC
Display Type	DLP
Display Resolution	800 x 600
ANSI Lumens	2600
Connectivity Technology	HDMI, Networkable (Wired & Wireless), USB
Special Feature	3D-Ready
Lamp Type	NP18LP
Manufacturer	NEC Display Solutions

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The NEC NP-V260 DLP Projector is covered by a limited warranty. Please refer to the warranty card included with your product or visit the official NEC website for detailed terms and conditions. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service, or further inquiries, please contact NEC customer support. You can find contact information and support resources on the official NEC Display Solutions website: www.necdisplay.com/support