

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BOSS](#) /
- › [BOSS Men's Chronograph Watch Model 1513755 User Manual](#)

BOSS 1513755

BOSS Men's Chronograph Watch Model 1513755 User Manual

This manual provides instructions for the proper use and care of your BOSS Men's Premium Fashion Quartz Chronograph Watch, Model 1513755.

INTRODUCTION

Thank you for choosing a BOSS timepiece. This instruction manual will guide you through the features and functions of your new BOSS Men's Premium Fashion Quartz Chronograph Watch, Model 1513755. Please read this manual carefully to ensure correct usage and to maintain the longevity of your watch.

WATCH COMPONENTS

Familiarize yourself with the main components of your watch:

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Hour, Minute, Second Hands:** For basic time display.
- **Chronograph Sub-dials:** Measure elapsed time.
- **Date Window:** Displays the current date.
- **Bracelet:** Stainless steel band.



Image: Front view of the BOSS Men's Chronograph Watch Model 1513755. This image displays the watch face with its main hour, minute, and second hands, along with the chronograph sub-dials. The crown and pushers on the side of the case are also visible.

SETUP

1. Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all protective films are removed from the crystal and case back.

2. Setting the Time

1. Pull the crown out to position 2 (the outermost position). The second hand will stop.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. Pay attention to the 24-hour cycle if your watch has a date function, as the date changes around midnight.
3. Once the time is set, push the crown back into position 0 (normal operating position). The second hand will resume movement.



Image: Side view of the BOSS Men's Chronograph Watch Model 1513755. This image highlights the watch's crown and the two pushers, which are essential for setting the time and operating the chronograph functions.

3. Setting the Date

1. Pull the crown out to position 1 (the first click).
2. Turn the crown clockwise or counter-clockwise to set the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism.
3. Once the date is set, push the crown back into position 0.

4. Bracelet Adjustment

The stainless steel bracelet may require adjustment for a comfortable fit. It is recommended to have this procedure performed by a qualified jeweler or watch technician to avoid damage to the bracelet or watch case.

OPERATING THE WATCH

1. Basic Timekeeping

Your watch displays the current time with hour, minute, and second hands. The quartz movement ensures accurate timekeeping.

2. Using the Chronograph (Stopwatch)

The chronograph function allows you to measure elapsed time.

1. **Start:** Press pusher A (top pusher) to start the chronograph. The chronograph second hand and sub-dials will begin to move.
2. **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping, press pusher B (bottom pusher) to reset the chronograph hands to their zero positions.
4. **Split Time:** Some chronographs allow for split-time measurement. Consult a specialized watch guide if this feature is desired and not explicitly covered here.

3. Water Resistance (50 Meters / 5 ATM)

Your BOSS watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, showering, or washing hands. **It is not suitable for diving, snorkeling, or prolonged water activities.** Always ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers while the watch is wet or submerged.

MAINTENANCE AND CARE

1. Cleaning Your Watch

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dust and dirt. For stainless steel bracelets, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

2. Battery Replacement

Your quartz watch is powered by a battery. When the battery runs low, the second hand may start to move in two-second intervals (End-of-Life indicator). Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.



Image: Back view of the BOSS Men's Chronograph Watch Model 1513755. This image shows the stainless steel case back, which typically includes engravings such as the brand logo, model number, and water resistance rating.

3. Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch case is ideal for storage.

4. Avoiding Shocks and Chemicals

Avoid exposing your watch to strong impacts or vibrations. Keep it away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, gasket, or bracelet materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Low battery; Crown not fully pushed in.	Replace battery (professional service recommended); Push crown fully into position 0.

Problem	Possible Cause	Solution
Date does not change at midnight.	Time is set incorrectly (e.g., AM/PM confusion).	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Requires chronograph reset procedure.	Consult a watch technician or refer to specific chronograph movement instructions if available. Often involves pulling the crown out and using pushers to align.
Condensation inside the watch.	Water intrusion; Seal compromise.	Immediately take the watch to a qualified watch repair center. Do not attempt to dry it yourself.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact an authorized service center.

SPECIFICATIONS

Feature	Detail
Model Number	1513755
Display Type	Analog
Movement Type	Quartz
Power Source	Battery Powered
Water Resistance Depth	50 Meters (5 ATM)
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Type	Mineral
Case Diameter	45.07 Millimeters
Band Width	22 Millimeters
Case Thickness	12.3 Millimeters
Manufacturer	Hugo Boss

WARRANTY INFORMATION

Your BOSS watch is covered by a manufacturer's warranty. The specific terms and duration of the warranty are typically provided with your purchase documentation or can be found on the official BOSS Watches website. This warranty generally covers manufacturing defects but does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, service, or inquiries regarding your BOSS watch, please contact an authorized BOSS

service center or refer to the official BOSS Watches website for support contact information.

Official Website: [Hugo Boss Watches](#)