

[Manuals.plus](#) /

> [BELLA](#) /

> BELLA Electric Skillet and Frying Pan with Glass Lid, Nonstick Coating, Cool Touch Handles, Removable Heating Probe, Dishwasher Safe, 12 x 12 inch, Black, PFOA & PTFE Free Black Pan User Manual

BELLA 13820

BELLA Electric Skillet User Manual

Model: 13820

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the heating probe in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

PARTS AND FEATURES



Figure 1: The BELLA Electric Skillet features a durable cast aluminum base and a tempered glass lid. It is designed for versatile cooking.

Perfect for Family Dinner



BELLA ELECTRIC SKILLET

Figure 2: The skillet measures 12x12 inches with a depth of 4.72 inches, providing ample cooking capacity for family meals.



Cool Touch Handles

Figure 3: Equipped with cool-touch handles for safe and easy handling during and after cooking.

No More Guesswork

Dishwasher safe glass lid to check your food




Figure 4: The dishwasher-safe tempered glass lid allows for easy monitoring of food without lifting the lid, retaining heat and moisture.

Enjoy Nonstick Coating

Nonstick titanium ceramic coating for easy food release



Figure 5: The skillet features a durable nonstick titanium ceramic coating, ensuring easy food release and quick cleanup. It is PTFE and PFOA free.

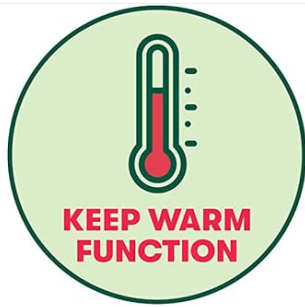

Adjustable Temperature

Removable probe with temperature dial

Figure 6: A removable temperature probe with an adjustable dial provides precise heat control for various cooking needs.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the electric skillet.
2. **Initial Cleaning:** Before first use, wash the skillet and glass lid in warm, soapy water. Rinse thoroughly and dry completely. The skillet is fully immersible once the heating probe is removed.
3. **Probe Attachment:** Ensure the skillet is completely dry. Insert the removable heating probe firmly into the receptacle on the side of the skillet.
4. **Placement:** Place the electric skillet on a stable, heat-resistant surface away from walls or cabinets to allow for proper ventilation.

OPERATING INSTRUCTIONS

The BELLA Electric Skillet offers versatile cooking options with its adjustable temperature control.

1. **Connecting Power:** Plug the power cord into a standard 120V AC electrical outlet.
2. **Setting Temperature:** Turn the temperature control dial on the removable probe to your desired heat setting. The available temperature range includes 200°F, 250°F, 300°F, 350°F, and a maximum of 425°F. A "WARM" setting is also available for keeping food at serving temperature.

- 3. Preheating:** Allow the skillet to preheat for approximately 5-10 minutes, or until the indicator light on the probe turns off, indicating the desired temperature has been reached.
- 4. Cooking:** Add ingredients to the preheated skillet. The nonstick surface ensures easy food release. Use the tempered glass lid to cover the skillet during cooking to retain heat and moisture.
- 5. Adjusting Temperature:** Adjust the temperature as needed during cooking by turning the dial.
- 6. Finishing:** Once cooking is complete, turn the temperature dial to the "OFF" position (0°F). Unplug the skillet from the wall outlet.

Note: The nonstick coating is designed for durability and scratch resistance, even with metal utensils. However, for prolonged life, it is recommended to use wooden, silicone, or plastic utensils.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your BELLA Electric Skillet.

- 1. Cool Down:** Always allow the skillet to cool completely before cleaning.
- 2. Remove Probe:** Detach the removable heating probe from the skillet. The probe should **never** be immersed in water or other liquids. Wipe it clean with a damp cloth if necessary.
- 3. Skillet and Lid Cleaning:** The skillet and tempered glass lid are fully immersible and dishwasher safe. For best results, hand wash with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
- 4. Stubborn Food:** For stubborn food residue, fill the skillet with warm, soapy water and let it soak for a few minutes before cleaning.
- 5. Storage:** Store the clean, dry skillet and probe in a safe place where they will not be damaged.

Caution: Do not use abrasive cleaners or scouring pads on the nonstick surface, as this may damage the coating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Skillet does not heat up.	Not plugged in correctly. Temperature probe not inserted fully. Temperature dial set to "OFF".	Ensure the power cord is securely plugged into a working outlet. Push the temperature probe firmly into the skillet's receptacle. Turn the temperature dial to a desired heat setting.
Food sticks to the surface.	Insufficient oil/fat used. Skillet not preheated properly. Damaged nonstick coating.	Add a small amount of cooking oil or butter. Allow the skillet to fully preheat before adding food. Avoid using metal utensils or abrasive cleaners that could damage the coating.
Skillet smokes excessively.	Temperature set too high. Excessive oil/fat.	Reduce the temperature setting. Use less oil or fat.

SPECIFICATIONS

- **Model:** 13820
- **Color:** Black
- **Material:** Nonstick (Titanium Ceramic Coating), BPA Free
- **Product Dimensions:** 11.81"D x 14.56"W x 4.72"H
- **Cooking Capacity:** 12" x 12"
- **Wattage:** 1200 watts
- **Voltage:** 127V
- **Item Weight:** 5 Pounds

- **Special Features:** Durable Cast aluminum base, Non Stick Coating, Removable probe, Tempered glass lid, Cool Touch Handles
- **Manufacturer:** Sensio Inc.
- **First Available:** April 14, 2013

WARRANTY AND SUPPORT

The BELLA Electric Skillet comes with a **2-year warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact BELLA Customer Service.

- **Website:** [Visit the BELLA Store on Amazon](#)
- Refer to the official user manual (PDF) for more detailed information: [User Manual \(PDF\)](#)

