

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Sansui Broksonic TVs (Models HDLCD3212B, HDLCD3212C, 076R0RF021, SLED1980, SLED2280, CCVG1935)

Redi-Remote RT076R0RF011

Redi-Remote Replacement Remote Control Instruction Manual

For Sansui Broksonic TV Models: HDLCD3212B, HDLCD3212C, 076R0RF021, SLED1980, SLED2280, CCVG1935

1. INTRODUCTION

This document provides instructions for the Redi-Remote replacement remote control, designed for specific Sansui and Broksonic television models. This remote is a custom replacement and is not an original manufacturer's remote control. It is engineered to provide full functionality for the compatible TV models listed below.

Compatible Models:

- Sansui Broksonic HDLCD3212B
- Sansui Broksonic HDLCD3212C
- Sansui Broksonic 076R0RF021
- Sansui Broksonic SLED1980
- Sansui Broksonic SLED2280
- Sansui Broksonic CCVG1935

2. SETUP AND BATTERY INSTALLATION

The Redi-Remote requires **four (4) AAA batteries** for operation. No programming is required; the remote is pre-configured to work with the specified TV models immediately after battery installation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert four new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: This remote control is designed to operate only the specified television models and cannot be programmed to control auxiliary devices such as DVD players, sound systems, or cable boxes.

3. OPERATING THE REMOTE CONTROL

The remote control features a standard layout for easy navigation and control of your television. It includes a sliding cover that reveals additional, model-specific functions.



Image 1: Redi-Remote Replacement Remote Control. The image displays the full remote control, including the top section with primary controls and the lower section with advanced functions revealed by sliding down a cover.

3.1. Top Section Controls

- **PWR (Power):** Turns the television on or off.
- **TV/VIDEO:** Switches between TV and video input sources.
- **SLEEP:** Activates the sleep timer function.
- **DISP (Display):** Shows on-screen display information.
- **VOL + / VOL - (Volume):** Increases or decreases the audio volume.
- **CH + / CH - (Channel):** Changes the television channel up or down.
- **MUTE:** Silences or restores the audio.
- **MENU:** Accesses the television's main menu.
- **RECALL:** Switches to the previously viewed channel.
- **Number Pad (0-9):** Directly enters channel numbers.

- **100:** Used for entering three-digit channel numbers (e.g., press 100 then 0 then 1 for channel 101).
- **ENT (Enter):** Confirms selections or enters channel numbers.

3.2. Lower Section Controls (Slide Down)

The lower half of the remote control contains additional functions. To access these, slide the cover downwards as indicated by the "SLIDE DOWN" label on the remote.

- **PICTURE SIZE:** Adjusts the aspect ratio or picture size.
- **EXIT:** Exits from menus or on-screen displays.
- **AUDIO:** Accesses audio settings or modes.
- **A.P. SELECT:** Selects audio program options.
- **CCD:** Activates or deactivates Closed Captioning.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections within menus.
- *Additional unlabeled buttons:* These buttons provide specific functions depending on your TV model, such as direct access to picture modes, sound modes, or other advanced settings. Refer to your television's original manual for their specific functions.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace all four batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some buttons not working:**
 - Verify that the TV model is listed as compatible.
 - For buttons in the lower section, ensure the cover is fully slid down.
 - Some advanced functions may be specific to certain TV models and might not be supported by all compatible TVs.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Number	RT076R0RF011

Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	5 ounces (approximately)
Batteries Required	4 AAA batteries
Compatible Devices	Television
Max Supported Devices	1
Color	Black
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

This Redi-Remote replacement remote control is manufactured by Redi-Remote. For any concerns or issues encountered after purchase, please contact the seller directly for assistance. Specific warranty details may vary and should be confirmed with the point of purchase.

© 2023 Redi-Remote. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00FKH243O>

More documents and user manuals: <https://manuals.plus/>