

- [Manuals.plus](#) /
- › [Redi-Remote](#) /
 - › Redi-Remote Replacement Remote Control for Yamaha WA164101 (Model RTWA164101) User Manual

Redi-Remote RTWA164101

**Redi-Remote Replacement Remote Control for Yamaha
WA164101 (Model RTWA164101) User Manual**

Model: RTWA164101 | Brand: Redi-Remote

1. INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote Replacement Remote Control, model RTWA164101. This remote is specifically designed as a direct replacement for the original Yamaha WA164101 remote control, offering full functionality for compatible Yamaha units without requiring any programming.

2. PRODUCT OVERVIEW

The Redi-Remote RTWA164101 is a custom-built replacement remote control. It is engineered to perform all functions of the original Yamaha WA164101 remote for your specific Yamaha unit. This remote does not require programming and is not designed to control auxiliary devices.



Figure 1: Redi-Remote Replacement Remote Control (Model RTWA164101). This image displays the full remote control, featuring an upper section with primary controls like power, volume, and channel, and a lower section with advanced function buttons that are revealed by sliding down a cover.

Key Features:

- Direct replacement for Yamaha WA164101 remote.
- No programming required for immediate use.
- Controls all functions of the specific Yamaha unit it is designed for.
- Features a sliding cover to reveal advanced function buttons.
- Dimensions: Approximately 7.5 inches (length) x 2.25 inches (width) x 0.75 inches (thickness).

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. (Batteries are included with the remote).
4. Close the battery compartment cover securely.

3.2. Initial Use

This Redi-Remote control is pre-programmed and ready for immediate use with your compatible Yamaha WA164101 unit. No additional setup or programming steps are required.

4. OPERATING INSTRUCTIONS

The remote control features two main sections: an upper section with frequently used controls and a lower section with advanced functions, accessible by sliding down the cover.

4.1. Upper Section Controls

- **PWR (Power):** Turns the Yamaha unit on or off.
- **TV/VIDEO:** Switches between TV and video input modes.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **DISP (Display):** Changes the display information on the unit.
- **VOL - / VOL + (Volume):** Decreases or increases the audio volume.
- **MUTE:** Mutes or unmutes the audio output.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls the previously selected channel or input.
- **Number Pad (0-9, 100, ENT):** Used for direct channel entry or numerical input.
 - **100:** For entering channels 100 and above.
 - **ENT (Enter):** Confirms numerical input.

4.2. Lower Section Controls (Slide Down Cover)

To access these buttons, gently slide down the cover located at the bottom of the remote control.

- **STANDBY:** Puts the unit into standby mode.
- **SYS PWR:** System Power control.
- **Input Selectors (CD, MD/CD-R, TUNER, DVD, D.TV/CBL, V-AUX, 6 CH INP, VCR):** Selects the corresponding audio/video input source.

- **A/B/C/D/E:** Function buttons, specific to your Yamaha unit's capabilities.
- **PRESET/CH + / -:** Navigates through radio presets or channels.
- **TEST:** Initiates a test tone or system test.
- **LEVEL:** Adjusts audio levels for specific channels or speakers.
- **6.1 CH / 5.1 CH:** Selects between 6.1 channel and 5.1 channel audio modes.
- **Sound Field Modes (HALL, JAZZ, ROCK, ENTERTAINMENT, MUSIC VIDEO):** Activates various sound field programs.
- **TV THTR (TV Theater):** Optimizes sound for TV viewing.
- **MOVIE THEATER 1 / 2:** Selects movie theater sound modes.
- **DOLBY/DTS:** Selects Dolby Digital or DTS decoding modes.
- **NIGHT:** Activates night listening mode.

5. MAINTENANCE

5.1. Battery Replacement

If the remote control's range decreases or buttons become unresponsive, it is likely time to replace the batteries. Follow the battery installation steps in Section 3.1. Always replace all four AAA batteries at the same time with new ones.

5.2. Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote range is poor.	Low batteries; Obstruction between remote and unit; Remote sensor on unit is blocked.	Replace batteries. Ensure a clear line of sight to the Yamaha unit. Clear any obstructions from the unit's remote sensor.
Specific button not working.	Button stuck or damaged; Remote malfunction.	Gently press the button multiple times. If the issue persists after battery replacement, contact customer support.
Remote does not control other devices.	This remote is designed only for the specified Yamaha unit.	This is expected behavior. The Redi-Remote is not programmable for auxiliary devices.

7. SPECIFICATIONS

- **Model Number:** RTWA164101
- **Brand:** Redi-Remote
- **Compatible With:** Yamaha WA164101 units
- **Connectivity Technology:** Infrared
- **Power Source:** 4 x AAA batteries (included)
- **Product Dimensions:** 7 x 2.5 x 1 inches (approximately)
- **Item Weight:** 4.5 ounces (approximately)

- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1 (the specific Yamaha unit)

8. WARRANTY AND SUPPORT

This Redi-Remote control is designed for reliable operation. For any concerns or issues with the remote after purchase, please contact the seller directly for assistance. Specific warranty details are not provided in this manual; please refer to your purchase documentation or contact the seller for warranty information.

© 2023 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00FKH64XU>

More documents and user manuals: <https://manuals.plus/>