Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Nyko /
- > Nyko Charge Base for PlayStation 4 User Manual

Nyko 83200

Nyko Charge Base for PlayStation 4 User Manual

Model: 83200

INTRODUCTION

The Nyko Charge Base for PlayStation 4 provides a convenient and efficient solution for storing and charging up to two DUALSHOCK 4 controllers. Its innovative design incorporates custom USB Charge Adapters, allowing for a seamless drop-and-charge experience without altering the controller's ergonomics. This AC-powered charging dock ensures rapid recharging and features clear LED indicators to display charging status.



Figure 1: Nyko Charge Base for PlayStation 4 - Product Packaging.

PACKAGE CONTENTS

Before proceeding with setup, please verify that all components are present in the package:

- Nyko Charge Base for PlayStation 4
- Two (2) Custom USB Charge Adapters

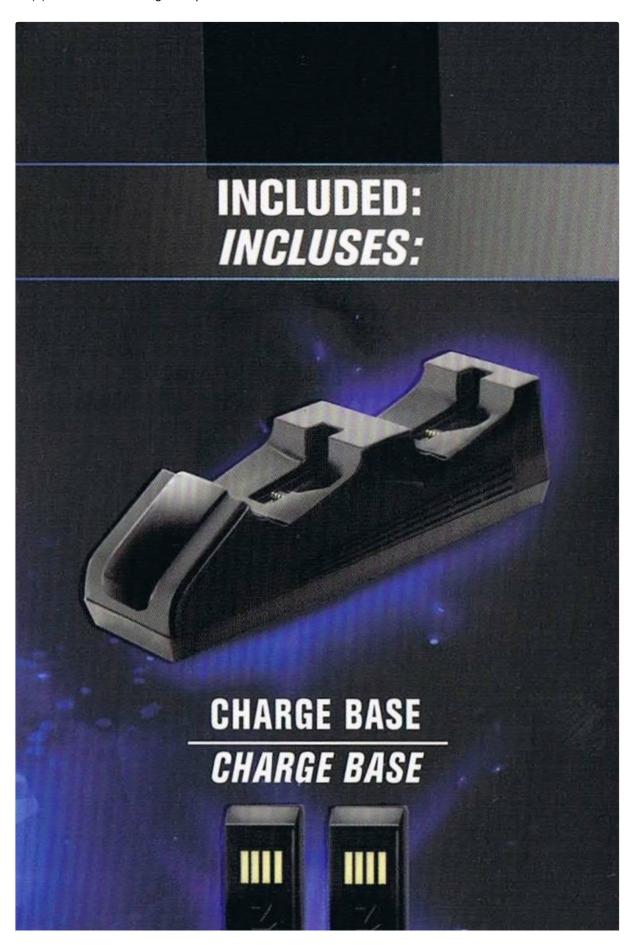




Figure 2: Included Components: Charge Base and two USB Charge Adapters.

SETUP INSTRUCTIONS

1. **Attach USB Charge Adapters:** Locate the two custom USB Charge Adapters. Carefully insert one adapter into the Micro-USB port located on the top of each DUALSHOCK 4 controller. Ensure the adapter is fully seated. These adapters are designed to remain on the controller for continuous drop-and-charge functionality.

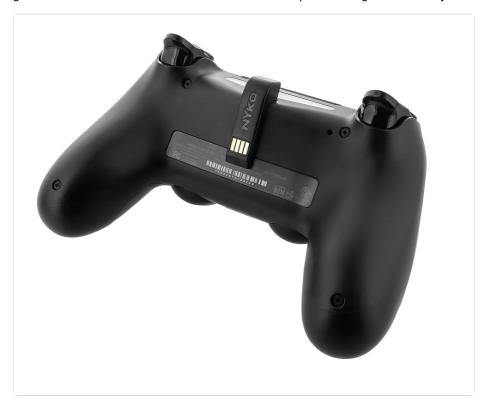


Figure 3: Attaching a USB Charge Adapter to a DUALSHOCK 4 controller.

- 2. **Connect to Power:** Plug the AC power cord of the Nyko Charge Base into a standard wall outlet. The Charge Base is AC powered and does not require a connection to the PlayStation 4 console for operation.
- 3. **Placement:** Place the Nyko Charge Base on a stable, flat surface in your entertainment area. Its low-profile design is intended to fit seamlessly.

OPERATING INSTRUCTIONS

1. Charging Controllers: With the USB Charge Adapters attached to your DUALSHOCK 4 controllers, simply place

the controllers onto the charging slots of the Nyko Charge Base. The patented drop-and-charge design ensures proper alignment and connection.



Figure 4: Placing controllers on the Charge Base for charging.

- 2. **Monitoring Charging Status:** The Nyko Charge Base features LED indicators that clearly display the charging status. When a controller is charging, the corresponding LED icon will illuminate. Once the controller is fully charged, the LED indicator will change or turn off, depending on the model, to signify completion.
- 3. **Simultaneous Charging:** The dual-port design allows for two DUALSHOCK 4 controllers to be charged simultaneously.

MAINTENANCE

To ensure the longevity and optimal performance of your Nyko Charge Base, follow these maintenance guidelines:

- **Cleaning:** Disconnect the Charge Base from the power outlet before cleaning. Use a soft, dry cloth to wipe down the exterior surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals.
- Storage: When not in use for extended periods, store the Charge Base in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the Charge Base and USB Charge Adapters with care. Avoid dropping the unit or applying excessive force to the charging ports or adapters.

TROUBLESHOOTING

Problem Possibl	ause Solution
-----------------	---------------

Problem	Possible Cause	Solution
Controller not charging.	Charge Base not powered. USB Charge Adapter not properly attached. Controller not seated correctly on the base. Faulty wall outlet.	Ensure the AC power cord is securely plugged into a live wall outlet. Verify the USB Charge Adapter is firmly inserted into the controller's Micro-USB port. Re-seat the controller on the Charge Base, ensuring the adapter makes full contact with the charging pins. Test the wall outlet with another device.
LED indicator not illuminating.	Controller already fully charged. Charging issue (see above).	If the controller is fully charged, the LED may turn off. Refer to "Controller not charging" solutions.
USB Charge Adapter feels loose.	Not fully inserted. Wear and tear.	Push the adapter firmly into the controller's port until it clicks into place. If the adapter is damaged, contact Nyko support for replacement options.

SPECIFICATIONS

• Model Number: 83200

• Compatibility: DUALSHOCK 4 Controllers (PlayStation 4, PS4 Pro, PS4 Slim)

• Power Source: AC Powered (Wall Outlet)

• Charging Capacity: Two (2) Controllers Simultaneously

• **Dimensions:** Approximately 9.3 x 5.3 x 2.8 inches (23.6 x 13.5 x 7.1 cm)

• Weight: Approximately 8.2 ounces (232 grams)

WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please visit the official Nyko website or contact Nyko customer service. Keep your purchase receipt as proof of purchase.

Nyko Official Website: www.nyko.com
Online Registration: www.nyko.com
Follow Nyko on Social Media:

Facebook: /NykoTech
Twitter: @NykoTech

© 2024 Nyko. All rights reserved. Nyko and Charge Base are trademarks of Nyko.

Product specifications are subject to change without notice.

