

Nespresso C61 Pixie Titan

Nespresso C61 Pixie Titan Coffee Machine and Aeroccino User Manual

Model: C61 Pixie Titan

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Nespresso C61 Pixie Titan Coffee Machine and Aeroccino milk frother. Please read this manual thoroughly before first use and keep it for future reference.

The Nespresso Pixie Titan is designed for convenience and quality, featuring a compact design and a high-performance 19-bar pump to extract the full flavor from Nespresso capsules. The included Aeroccino allows for the preparation of various milk-based coffee recipes.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Place the machine on a stable, heat-resistant surface, away from water splashes and heat sources.
- Unplug the machine before cleaning and when not in use for extended periods.

3. SETUP AND FIRST USE

3.1 Unpacking

Carefully remove all packaging materials. Ensure all components are present: coffee machine, water tank, drip tray, capsule container, and Aeroccino (if included in your model).

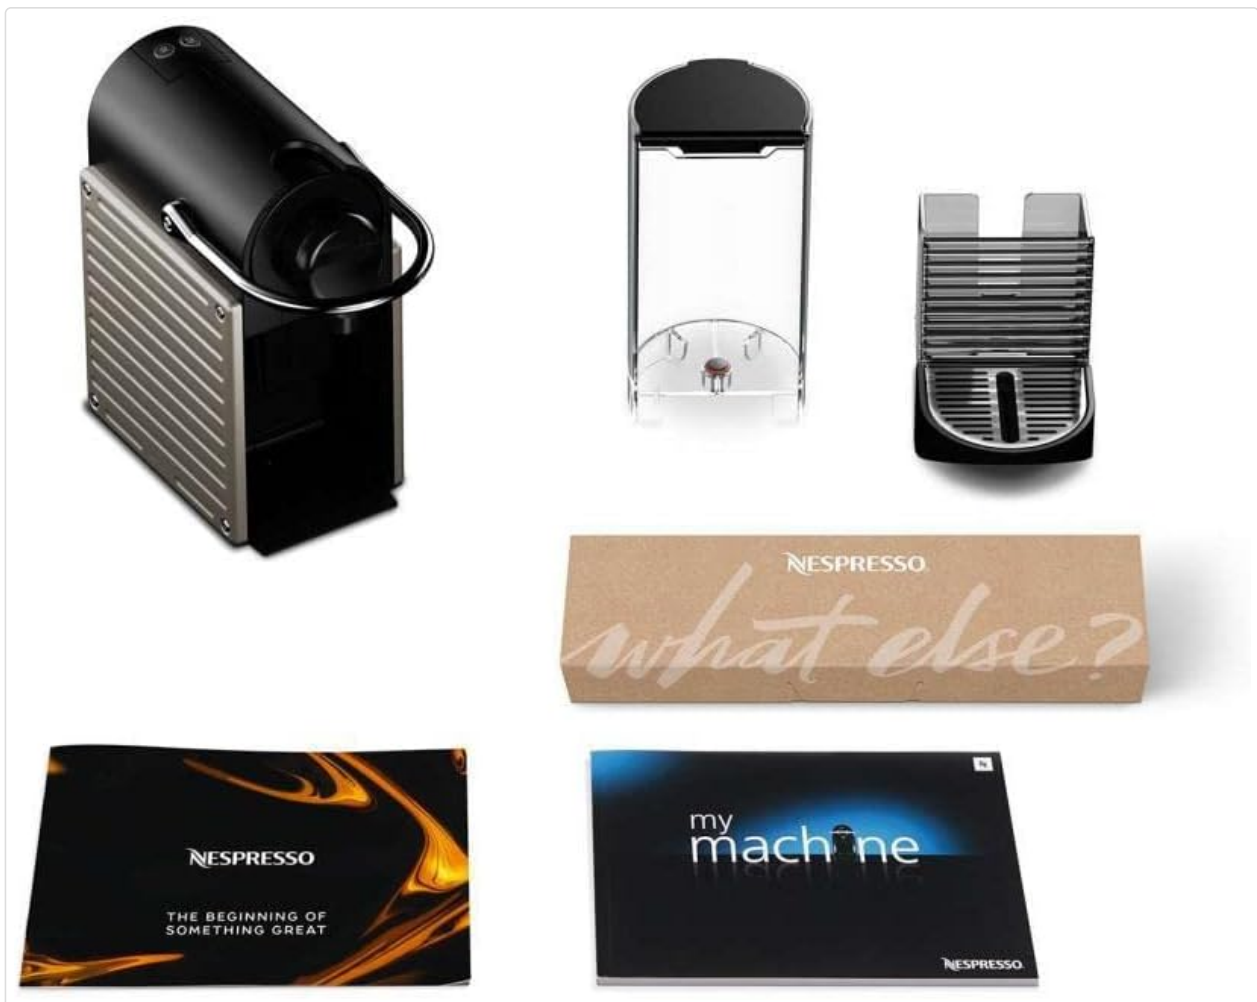


Image 3.1: Exploded view of the Nespresso Pixie Titan coffee machine components, including the water tank, capsule container, and manuals.

3.2 Rinsing the Machine

1. Fill the water tank with fresh drinking water.
2. Place a container under the coffee outlet.
3. Press either the Espresso or Lungo button. The machine will start pumping water. Repeat this process 2-3 times to thoroughly rinse the internal system.

3.3 Power Connection

Plug the machine into a grounded power outlet. The two coffee buttons will blink, indicating the machine is heating up. It will be ready for use when the lights stop blinking and remain steady (approximately 25 seconds).

4. OPERATING THE COFFEE MACHINE

4.1 Preparing Espresso or Lungo

1. Ensure the water tank is filled with fresh water.
2. Lift the lever completely and insert a Nespresso capsule.
3. Close the lever firmly.
4. Place a cup under the coffee outlet.
5. Press either the **Espresso** button (small cup icon) for a 40 ml serving or the **Lungo** button (large cup icon) for a 110 ml serving. The coffee will begin to flow.

6. To stop the flow manually at any time, press the illuminated coffee button again.

PIXIE

ÇELİK, KOMPAKT



ESPRESSO & LUNGO



METAL DOKUNUŞ



Image 4.1: Nespresso Pixie Titan machine brewing coffee, highlighting Espresso and Lungo functions.

4.2 Programming Cup Sizes

You can customize the volume for both Espresso and Lungo buttons:

1. Turn on the machine and wait for the lights to become steady.
2. Insert a Nespresso capsule.
3. Place a cup under the coffee outlet.
4. Press and hold the button you wish to program (Espresso or Lungo). Release the button when the desired volume of coffee has been dispensed into your cup. The machine will remember this setting for future use.

4.3 Using the Aeroccino (Milk Frother)

The Aeroccino is designed to prepare hot or cold milk froth for various coffee recipes.

1. Ensure the Aeroccino is clean and dry.
2. Pour cold milk into the Aeroccino jug, observing the maximum fill lines for froth and hot milk.
3. Place the lid on the jug.
4. For hot froth, press the button briefly. The light will turn red.
5. For cold froth, press and hold the button for approximately 2 seconds. The light will turn blue.

- The Aeroccino will automatically stop when the milk is ready.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your machine.

5.1 Daily Cleaning

- Empty and rinse the drip tray and used capsule container daily.
- Wipe the machine exterior with a damp cloth.
- Rinse the water tank with fresh water.

5.2 Aeroccino Cleaning

After each use, immediately clean the Aeroccino jug and whisk with warm water and a non-abrasive cloth. Do not immerse the base in water.

5.3 Descaling

Descaling is crucial for maintaining machine performance and coffee quality. The machine will indicate when descaling is needed (refer to specific light patterns in troubleshooting). Use only Nespresso descaling kits and follow the instructions provided with the kit.

6. TROUBLESHOOTING

If you encounter issues with your Nespresso machine, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No coffee flow	Empty water tank, air bubble, machine not descaled.	Fill water tank, prime machine (run water without capsule), descale machine.
Coffee is cold	Cold cup, machine not preheated.	Preheat cup with hot water, allow machine to fully heat up.
Leaking water	Water tank not correctly positioned, damaged seal.	Ensure water tank is firmly in place. Contact Nespresso support if problem persists.
Lights blinking rapidly	Machine needs descaling, or internal error.	Perform descaling cycle. If issue persists, contact Nespresso support.

7. SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Number	C61-BU-TI

Feature	Detail
Color	Titan
Dimensions (W x H x L)	11.1 cm x 23.5 cm x 32.6 cm
Weight	2.8 Kilograms
Water Tank Capacity	0.7 Liters
Power / Wattage	1350 watts
Voltage	240V
Pump Pressure	19 bar
Heat-up Time	Approximately 25 seconds
Auto Shutoff	Yes (after 9 minutes of inactivity)
Material	Aluminum, Stainless Steel

ZARIF VE KOMPAKT

Metal yan paneller



Image 7.1: Nespresso Pixie Titan coffee machine with its compact dimensions (width, height, depth) indicated.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Nespresso C61 Pixie Titan Coffee Machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the duration and coverage details. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, troubleshooting not covered in this manual, or to order accessories and descaling kits, please contact Nespresso Customer Service. Visit the official Nespresso website for contact details specific to your region.

You can find more information and support at the [Nespresso Store on Amazon](#).